


# TOSHIBA

FILE NO. 050-200510  
(MFR'S VERSION A)

## SERVICE MANUAL

## COLOR TELEVISION

# ***30HF85*** ***30HF85C***

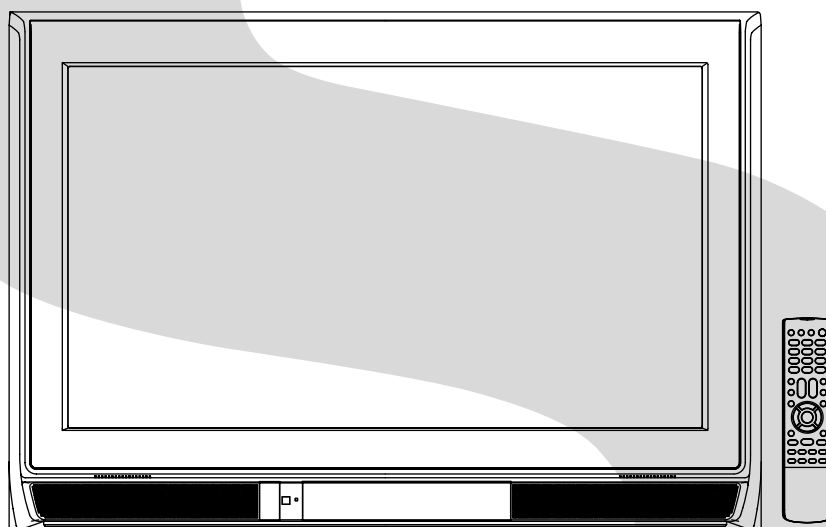

## SERVICING NOTICES ON CHECKING

### 1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

### 2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

### 3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.

Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a ⚠ mark, the designated parts must be used.

### 4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

### 5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

### 6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.

Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.

Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

### 7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

#### (INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the external exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

#### **[Note 1]**

If you have not the 500V insulation resistance meter, use a Tester.

#### **[Note 2]**

External exposure metal: Antenna terminal  
Headphone jack

## HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

#### 1. MODEL NUMBER and VERSION LETTER

The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.

#### 2. PART NO. and DESCRIPTION

You can find it in your SERVICE MANUAL.

## IMPORTANT

When you exchange IC and Transistor with a heat sink, apply silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)



Licensed by BBE Sound, Inc. under USP5510752 and 5736897.  
BBE and BBE symbol are registered trademarks of BBE Sound, Inc.

## ABOUT LEAD FREE SOLDER (PbF)

### Distinction of PbF PCB:

PCBs (manufactured) using lead free solder will have a PbF printing on the PCB.  
(Please refer to figures.)



### Caution:

- Pb free solder has a higher melting point than standard solder;  
Typically the melting point is 50°F~70°F(30°C~40°C) higher.  
Please use a soldering iron with temperature control and adjust it to 650°F ± 20°F (350°C ± 10°C).  
In case of using high temperature soldering iron, please be carefull not to heat too long.
- Pb free solder will tend to splash when heated too high (about 1100°F/ 600°C).
- All products with the printed circuit board with PbF printing must be serviced with lead free solder.  
When soldering or unsoldering, completely remove all of the solder from the pins or solder area,  
and be sure to heat the soldering points with the lead free solder until it melts sufficiently.

### Recommendations

Recommended lead free solder composition is Sn-3.0Ag-0.5Cu.

# TABLE OF CONTENTS

<b>SERVICING NOTICES ON CHECKING</b> .....	A1-1
<b>HOW TO ORDER PARTS</b> .....	A1-1
<b>IMPORTANT</b> .....	A1-1
<b>ABOUT LEAD FREE SOLDER (PbF)</b> .....	A1-2
<b>TABLE OF CONTENTS</b> .....	A2-1
<b>GENERAL SPECIFICATIONS</b> .....	A3-1~A3-10
<b>DISASSEMBLY INSTRUCTIONS</b>	
1. REMOVAL OF ANODE CAP .....	B1-1
2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC .....	B2-1, B2-2
<b>SERVICE MODE LIST</b> .....	C-1
<b>CONFIRMATION OF HOURS USED</b> .....	C-1
<b>WHEN REPLACING EEPROM (MEMORY) IC</b> .....	C-2, C-3
<b>ELECTRICAL ADJUSTMENTS</b> .....	D-1~D-7
<b>BLOCK DIAGRAMS</b>	
TV .....	E-1, E-2
SOUND AMP/FRONT JACK .....	E-3, E-4
MICON1/STEREO .....	E-5, E-6
AV/SYNC COUNT .....	E-7, E-8
INTERFACE .....	E-9, E-10
MICON2 .....	E-11, E-12
SCALER .....	E-13, E-14
<b>PRINTED CIRCUIT BOARDS</b>	
MAIN .....	F-1~F-4
AV .....	F-5, F-6
HD-MI/FRONT JACK .....	F-7, F-8
CRT/VM COIL/SCALER .....	F-9, F-10
<b>SCHEMATIC DIAGRAMS</b>	
CHROMA/PROGRESSIVE/PIN .....	G-1, G-2
DEFLECTION .....	G-3, G-4
TV POWER .....	G-5, G-6
OPERATION .....	G-7, G-8
MICON1 .....	G-9, G-10
STEREO .....	G-11, G-12
TUNER/AV .....	G-13, G-14
REGURATOR .....	G-15, G-16
SYNC COUNT/CONECTOR .....	G-17, G-18
INTERFACE .....	G-19, G-20
MICON2 .....	G-21, G-22
SOUND AMP/FRONT AV .....	G-23, G-24
ANALOG/DIGITAL CONVERTER .....	G-25, G-26
SCALER .....	G-27, G-28
DIGITAL COMB .....	G-29, G-30
SDRAM .....	G-31, G-32
IN/OUT/REGULATOR .....	G-33, G-34
CRT/SVM .....	G-35, G-36
<b>WAVEFORMS</b> .....	H-1~H-3
<b>MECHANICAL EXPLODED VIEWS</b> .....	I-1~I-4
<b>MECHANICAL REPLACEMENT PARTS LIST</b> .....	J1-1, J1-2
<b>ELECTRICAL REPLACEMENT PARTS LIST</b> .....	J2-1~J2-18

## GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	30 inch / 760mmV
			CRT Type	Flat (16:9)
			Magnetic Field BV/BH	+0.45G/0.18G
		Color System		NTSC
		Display Capability		1080i/540p
		Speaker		2 Speaker
			Position	Front Bottom
			Size	1.8 x 3.9 Inch
			Impedance	4 ohm
		Sound Output	MAX	10W+10W
G-2	Tuning System		10%(Typical)	= W
		NTSC3.58+4.43 /PAL60Hz		No
		Broadcasting System		US System M
		Tuner and Receive CH	System	1Tuner
			Destination	USA(W/ CABLE)
			Input Impedance	VHF/UHF 75 ohm
			CH Coverage	2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84
		Intermediate Frequency	Picture(FP)	45.75MHz
			Sound(FS)	41.25MHz
			FP-FS	4.50MHz
G-3	Power	Preset CH		No
		Stereo/Dual TV Sound		Yes
		Tuner Sound Muting		Yes
		Power Source	AC	120V AC 60Hz
			DC	
		Power Consumption	at AC	
			Stand by (at AC)	185 W at AC 120 V 60 Hz
			Per Year	1 W at AC 120 V 60 Hz
				-- kWh/Year
		Protector	Power Fuse	Yes
G-4	Regulation		Safety Circuit	Yes
			IC Protector(Micro Fuse)	Yes
			Safety	UL
			Radiation	FCC
G-5	Temperature		X-Radiation	DHHS
		Operation		+5oC ~ +40oC
		Storage		-20oC ~ +60oC
G-6	Operating Humidity			Less than 80% RH

# GENERAL SPECIFICATIONS

G-7	On Screen Display	Menu	Menu Type	Yes
			Picture	Icon
			Mode(Picture preference)	Yes
			Brightness	Yes
			Contrast	Yes
			Color	Yes
			Tint	Yes
			Sharpness	Yes
			Color Temperature	Yes
			Display Format	Yes
			Cable Clear	Yes
			SVM	Yes
			Reset	Yes
			Audio	Yes
			MTS	Yes
			Bass	Yes
			Treble	Yes
			Balance	Yes
			Stable Sound	Yes
			Speakers On/Off	Yes
			Dolby Virtual	No
			WOW SRS 3D	No
			WOW Focus	No
			WOW Tru Bass	No
			BBE	Yes
			HDMI1	Yes
			HDMI2	No
			Reset	Yes
			Setup	Yes
			Language	Yes
			Clock Set	Yes
			TV/CABLE	Yes
			CH Program	Yes
			Add/ Erase	Yes
			Closed Caption	Yes
			Picture Size	Yes
			Picture Scroll	Yes
			Cinema Mode	Yes
			Aspect	Yes
			Image Tilt	Yes
			Option	Yes
			On/Off Timer	Yes
			Favorite CH	Yes
			CH Label	Yes
			VIDEO Label	Yes
			Locks	Yes
			V-Chip	Yes
			Lock (CH Lock, Video Lock, Game Timer)	Yes
			Front Panel Lock	Yes
			New Password	Yes
			Control Level	Yes
			Volume	Yes
			Contrast	Yes
			Brightness	Yes
			Color	Yes
			Tint	Yes
			Sharpness	Yes
			Bass	Yes
			Treble	Yes
			Balance	Yes
			Image Tilt	Yes
			Picture Scroll	Yes
			Stereo, SAP, Mono	Yes
			Video	Yes
			Color Stream(Component)	Yes
			HDMI	Yes
			Channel(TV/Cable)	Yes
			CH Label	Yes
			Video Label	Yes
			Clock	Yes
			Game Timer	Yes
			Front Panel Lock	Yes
			On/Off Timer	Yes
			Sleep Timer	Yes
			Reset	Yes
			Sound Mute	Yes
			V-chip Rating	Yes
			NOT AVAILABLE	Yes
			Picture Size	Yes

# GENERAL SPECIFICATIONS

G-8	OSD Language		English    French    Spanish		
G-9	Clock and Timer	Sleep Timer	Max Time	120 Min	
			Step	<u>10</u> Min	
		On/Off Timer	Program	Yes	
		Wake Up Timer		No	
		Timer Back-up (at Power Off Mode)	more than	-- Min    Sec	
G-10	Remote Control	Unit		RC-KK	
		Glow in Dark Remocon		Yes	
		Back Light Remocon		No	
		Remocon Format		Toshiba	
		Format		Toshiba	
		Custom Code		<u>TV:40-BFh</u>	
		Power Source	Voltage(D.C)	3V	
			UM size x pcs	UM-4 x 2 pcs	
		Total Keys		<u>44</u> Keys	
		Keys	Power	Yes	
			1	Yes	
			2	Yes	
			3	Yes	
			4	Yes	
			5	Yes	
			6	Yes	
			7	Yes	
			8	Yes	
			9	Yes	
			0	Yes	
			100 /+10	Yes	
			CH Up	Yes	
			CH Down	Yes	
			Volume Up	Yes	
			Volume Down	Yes	
			TV/Video(Input Select)	Yes	
			ENT,CH RTN(Quick View)	Yes	
			Menu > / FAV Up	Yes	
			Menu < / FAV Down	Yes	
			Menu Up	Yes	
			Menu Down	Yes	
			Mute	Yes	
			PIC SIZE (16:9)	Yes	
			Sleep	Yes	
			Exit	Yes	
			Light	No	
			Multi Brand Keys	TV	Yes
				CBL/SAT	Yes
				VCR	Yes
				DVD	Yes
			(DVD Keys)	Enter	Yes
				DVD Clear	Yes
				Top MENU	Yes
			(TV / DVD Keys)	RECALL(Call) / (Display)	Yes
				Menu/Enter / DVD MENU	Yes
			(DVD / VCR Keys)	Pause/Still	Yes
				FF	Yes
				Rew	Yes
				Play	Yes
				Stop	Yes
				<</Skip / Search Forward	Yes
				>>/Skip / Search Forward	Yes
			(VCR Keys)	Rec	Yes
				TV/VCR	Yes

# GENERAL SPECIFICATIONS

G-11	Features	Auto Shut Off	Yes
		CABLE	Yes
		Memory(Last CH)	Yes
		Memory(Last Volume)	Yes
		V-Chip	Yes
		Type	USA, ORION Type
		SRS WOW(SRS 3D/Focus/Tru Bass)	No
		Virtual Dolby	No
		BBE	Yes(Digital)
		Stable Sound	Yes
		Timer(On Timer /Off Timer/Sleep Timer)	Yes
		Aspect	Yes
		Cinema Mode	Yes
		Image Tilt	Yes
		Direct Input Selection	Yes
		Auto Search	No
		CH Lock	Yes
		CH Program	Yes
		CH Label	Yes
		SAP	Yes
		Just Clock Function	No
		VIDEO Label	Yes
		SVM Circuit	Yes
		Comb Filter	Yes
			3 -D
		Super Wide Band AMP	No
		Cable Clear	Yes
		Hotel Lock	No
		Closed Caption	Yes
		FBT Leak Test Protect	Yes
		Video Lock	Yes
		Game Timer(Max Time:120Min)	Yes
		Energy Star	Yes
		Favorite CH	Yes
		Variable Audio Out	Yes
		Picture Size	Yes
		Color Temperature Control	Yes
		Mode(Picture Preference)	Yes
		Front Panel Lock	Yes
		Available Scan Rates (Component/HDMI)	480i/480p/720p/1080i
		Menu=Volume Up+Volume Down	Yes
		Auto Setup(Language/CH Program)	Yes
G-12	Accessories	Owner's Manual	Language
			W/ Warranty
		Remote Control Unit	Yes
		Rod Antenna	No
			Poles
			Terminal
		Loop Antenna	No
			Terminal
		U/V Mixer	No
		DC Car Cord (Center+)	No
		Guarantee Card	No
		Warning Sheet	No
		Circuit Diagram	No
		Antenna Change Plug	No
		Service Station List	No
		Important Safety Instruction	No
		Dew/AHC Caution Sheet	No
		AC Plug Adapter	No
		Quick Set-up Sheet	No
		Battery	Yes
			UM size x pcs
			OEM Brand
			UM-4 x 2
		AC Cord	No
		AV Cord (2Pin-1Pin)	No
		Registration Card (NDL Card)	Yes
		PTB Sheet	No
		ESP Card	No
		300 ohm to 75 ohm Antenna Adapter	No
		Information Sheet(for HDMI)	No



## GENERAL SPECIFICATIONS

G-13	Interface	Switch	Front	Power	Yes
				Channel Up/Menu Up	Yes
				Channel Down/Menu Down	Yes
				Volume Up/Menu >	Yes
				Volume Down/Menu <	Yes
		Indicator		Power	Yes(RED)
				Stand-by	No
				On Timer	No
		Terminals	Front	Video Input = VIDEO3	RCA
				Audio Input = VIDEO3	RCA x 2
				S Input = VIDEO3	Yes
				Other Terminal	No
			Rear	Video Input(Rear1) = VIDEO1	RCA
				Video Input(Rear2) = VIDEO2	RCA
				S Input = VIDEO1	Yes
				S Input = VIDEO2	Yes
				Audio Input(Rear1) = VIDEO1	RCA x 2
				Audio Input(Rear2) = VIDEO2	RCA x 2
				Video Output	RCA
				Audio Output	RCA x 2 (Variable)
				Component Input1(w/ Analog Audio L/R)	RCA x 5
				Component Input2(w/ Analog Audio L/R)	RCA x 5
				HDMI Input1(w/ Analog Audio L/R)	HDMI x 1(RCA x 2)
				HDMI Input2(w/ Analog Audio L/R)	No
				Diversity	No
				Ext Speaker	No
				VHF/UHF Antenna Input	F Type
				AC Outlet	No
G-14	Set Size	Approx. W x D x H (mm)		796 x 563 x 549.2	
G-15	Weight	Net (Approx.)		50.5 kg (111.4 lbs)	
		Gross (Approx.)		59.0 kg (130.1 lbs)	
G-16	Carton	Master Carton		No	
			Content	---- Sets	
			Material	-- /--	
			Dimensions W x D x H(mm)	-- x -- x --	
			Description of Origin	No	
		Gift Box	Material	Double/Brown	
			Dimensions W x D x H(mm)	916 x 691 x 711	
			Description of Origin	Yes	
		Drop Test		Natural Dropping At 1 Corner / 2 Edges / 4 Surfaces	
			Height (cm)	40 (ORION SPEC:25)	
		Container Stuffing			129 Sets/40' container
G-17	Cabinet Material	Cabinet	Cabinet Front	PS 94V0 DECABROM	
			Cabinet Rear	PS 94V0 NON-DECABROM	
		PCB	Non-Halogen Demand	No	
			Eyelet Demand	Yes	
G-18	Environment	Pb-free Soldering		Yes	
		Parts Specification(Phase3 : based on RoHS)		Yes	

## GENERAL SPECIFICATIONS

G-1	TV System	CRT	CRT Size / Visual Size	30 inch / 760mmV
			CRT Type	Flat (16:9)
			Magnetic Field BV/BH	+0.45G/0.18G
		Color System		NTSC
		Display Capability		1080i/540p
		Speaker		2 Speaker
			Position	Front Bottom
			Size	1.8 x 3.9 Inch
			Impedance	4 ohm
		Sound Output	MAX	10W+10W
G-2	Tuning System		10%(Typical)	± W
		NTSC3.58+4.43 /PAL60Hz		No
		Broadcasting System		US System M
		Tuner and Receive CH	System	1Tuner
			Destination	USA(W/ CABLE)
			Input Impedance	VHF/UHF 75 ohm
			CH Coverage	2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84
		Intermediate Frequency	Picture(FP)	45.75MHz
			Sound(FS)	41.25MHz
			FP-FS	4.50MHz
G-3	Power	Preset CH		No
		Stereo/Dual TV Sound		Yes
		Tuner Sound Muting		Yes
		Power Source	AC	120V AC 60Hz
			DC	
		Power Consumption	at AC	
			Stand by (at AC)	185 W at AC 120 V 60 Hz
			Per Year	1 W at AC 120 V 60 Hz
				-- kWh/Year
		Protector	Power Fuse	Yes
G-4	Regulation		Safety Circuit	Yes
			IC Protector(Micro Fuse)	Yes
			Safety	CSA
			Radiation	IC
G-5	Temperature		X-Radiation	HWC
		Operation		+5oC ~ +40oC
G-6	Operating Humidity	Storage		-20oC ~ +60oC
				Less than 80% RH

# GENERAL SPECIFICATIONS

G-7	On Screen Display	Menu	Menu Type	Yes	
			Picture	Icon	
			Mode(Picture preference)	Yes	
			Brightness	Yes	
			Contrast	Yes	
			Color	Yes	
			Tint	Yes	
			Sharpness	Yes	
			Color Temperature	Yes	
			Display Format	Yes	
			Cable Clear	Yes	
			SVM	Yes	
			Reset	Yes	
			Audio	Yes	
			MTS	Yes	
			Bass	Yes	
			Treble	Yes	
			Balance	Yes	
			Stable Sound	Yes	
			Speakers On/Off	Yes	
			Dolby Virtual		No
			WOW SRS 3D		No
			WOW Focus		No
			WOW Tru Bass		No
			BBE	Yes	
			HDMI1	Yes	
			HDMI2		No
			Reset	Yes	
			Setup	Yes	
			Language	Yes	
			Clock Set	Yes	
			TV/CABLE	Yes	
			CH Program	Yes	
			Add/ Erase	Yes	
			Closed Caption	Yes	
			Picture Size	Yes	
			Picture Scroll	Yes	
			Cinema Mode	Yes	
			Aspect	Yes	
			Image Tilt	Yes	
			Option	Yes	
			On/Off Timer	Yes	
			Favorite CH	Yes	
			CH Label	Yes	
			VIDEO Label	Yes	
			Locks	Yes	
			V-Chip		No
			Lock (CH Lock, Video Lock, Game Timer)	Yes	
			Front Panel Lock	Yes	
			New Password	Yes	
			Control Level	Yes	
			Volume	Yes	
			Contrast	Yes	
			Brightness	Yes	
			Color	Yes	
			Tint	Yes	
			Sharpness	Yes	
			Bass	Yes	
			Treble	Yes	
			Balance	Yes	
			Image Tilt	Yes	
			Picture Scroll	Yes	
			Stereo, SAP, Mono	Yes	
			Video	Yes	
			Color Stream(Component)	Yes	
			HDMI	Yes	
			Channel(TV/Cable)	Yes	
			CH Label	Yes	
			Video Label	Yes	
			Clock	Yes	
			Game Timer	Yes	
			Front Panel Lock	Yes	
			On/Off Timer	Yes	
			Sleep Timer	Yes	
			Reset	Yes	
			Sound Mute	Yes	
			V-chip Rating		No
			NOT AVAILABLE	Yes	
			Picture Size	Yes	

## GENERAL SPECIFICATIONS

<b>G-8</b>	<b>OSD Language</b>		English    French    Spanish
<b>G-9</b>	<b>Clock and Timer</b>	Sleep Timer	Max Time Step 120 Min 10 Min
		On/Off Timer	Program Yes
		Wake Up Timer	No
		Timer Back-up (at Power Off Mode)	more than -- Min    Sec
<b>G-10</b>	<b>Remote Control</b>	Unit	RC-KK
		Glow in Dark Remocon	Yes
		Back Light Remocon	No
		Remocon Format	Toshiba
		Format	Toshiba
		Custom Code	TV:40-BFh
		Power Source	Voltage(D.C) UM size x pcs 3V UM-4 x 2 pcs
		Total Keys	44 Keys
		Keys	Power Yes
		1	Yes
		2	Yes
		3	Yes
		4	Yes
		5	Yes
		6	Yes
		7	Yes
		8	Yes
		9	Yes
		0	Yes
		100 /+10	Yes
		CH Up	Yes
		CH Down	Yes
		Volume Up	Yes
		Volume Down	Yes
		TV/Video(Input Select)	Yes
		ENT,CH RTN(Quick View)	Yes
		Menu > / FAV Up	Yes
		Menu < / FAV Down	Yes
		Menu Up	Yes
		Menu Down	Yes
		Mute	Yes
		PIC SIZE (16:9)	Yes
		Sleep	Yes
		Exit	Yes
		Light	No
		Multi Brand Keys	TV Yes
			CBL/SAT Yes
			VCR Yes
			DVD Yes
		(DVD Keys)	Enter Yes
			DVD Clear Yes
			Top MENU Yes
		(TV / DVD Keys)	RECALL(Call) / (Display) Yes
			Menu/Enter / DVD MENU Yes
		(DVD / VCR Keys)	Pause/Still Yes
			FF Yes
			Rew Yes
			Play Yes
			Stop Yes
			<</Skip / Search Forward Yes
			>>/Skip / Search Forward Yes
		(VCR Keys)	Rec Yes
			TV/VCR Yes

# GENERAL SPECIFICATIONS

G-11	Features	Auto Shut Off	Yes
		CABLE	Yes
		Memory(Last CH)	Yes
		Memory(Last Volume)	Yes
		V-Chip	No
		Type	
		SRS WOW(SRS 3D/Focus/Tru Bass)	No
		Virtual Dolby	No
		BBE	Yes(Digital)
		Stable Sound	Yes
		Timer(On Timer /Off Timer/Sleep Timer)	Yes
		Aspect	Yes
		Cinema Mode	Yes
		Image Tilt	Yes
		Direct Input Selection	Yes
		Auto Search	No
		CH Lock	Yes
		CH Program	Yes
		CH Label	Yes
		SAP	Yes
		Just Clock Function	No
		VIDEO Label	Yes
		SVM Circuit	Yes
		Comb Filter	Yes
			3 -D
		Super Wide Band AMP	No
		Cable Clear	Yes
		Hotel Lock	No
		Closed Caption	Yes
		FBT Leak Test Protect	Yes
		Video Lock	Yes
		Game Timer(Max Time:120Min)	Yes
		Energy Star	Yes
		Favorite CH	Yes
		Variable Audio Out	Yes
		Picture Size	Yes
		Color Temperature Control	Yes
		Mode(Picture Preference)	Yes
		Front Panel Lock	Yes
		Available Scan Rates (Component/HDMI)	480i/480p/720p/1080i
		Menu=Volume Up+Volume Down	Yes
		Auto Setup(Language/CH Program)	Yes
G-12	Accessories	Owner's Manual	Language
			W/ Warranty
		Remote Control Unit	Yes
		Rod Antenna	No
			Poles
			Terminal
		Loop Antenna	No
			Terminal
		U/V Mixer	No
		DC Car Cord (Center+)	No
		Guarantee Card	No
		Warning Sheet	No
		Circuit Diagram	No
		Antenna Change Plug	No
		Service Station List	No
		Important Safety Instruction	No
		Dew/AHC Caution Sheet	No
		AC Plug Adapter	No
		Quick Set-up Sheet	No
		Battery	Yes
			UM size x pcs
			OEM Brand
			UM-4 x 2
		AC Cord	No
		AV Cord (2Pin-1Pin)	No
		Registration Card (NDL Card)	No
		PTB Sheet	No
		ESP Card	No
		300 ohm to 75 ohm Antenna Adapter	No
		Information Sheet(for HDMI)	No

## GENERAL SPECIFICATIONS

G-13	Interface	Switch	Front	Power	Yes
				Channel Up/Menu Up	Yes
				Channel Down/Menu Down	Yes
				Volume Up/Menu >	Yes
				Volume Down/Menu <	Yes
		Indicator		Power	Yes(RED)
				Stand-by	No
				On Timer	No
		Terminals	Front	Video Input = VIDEO3	RCA
				Audio Input = VIDEO3	RCA x 2
				S Input = VIDEO3	Yes
				Other Terminal	No
			Rear	Video Input(Rear1) = VIDEO1	RCA
				Video Input(Rear2) = VIDEO2	RCA
				S Input = VIDEO1	Yes
				S Input = VIDEO2	Yes
				Audio Input(Rear1) = VIDEO1	RCA x 2
				Audio Input(Rear2) = VIDEO2	RCA x 2
				Video Output	RCA
				Audio Output	RCA x 2 (Variable)
				Component Input1(w/ Analog Audio L/R)	RCA x 5
				Component Input2(w/ Analog Audio L/R)	RCA x 5
				HDMI Input1(w/ Analog Audio L/R)	HDMI x 1(RCA x 2)
				HDMI Input2(w/ Analog Audio L/R)	No
				Diversity	No
				Ext Speaker	No
				VHF/UHF Antenna Input	F Type
				AC Outlet	No
G-14	Set Size	Approx. W x D x H (mm)		796 x 563 x 549.2	
G-15	Weight	Net (Approx.)		50.5 kg (111.4 lbs)	
		Gross (Approx.)		59.0 kg (130.1 lbs)	
G-16	Carton	Master Carton			No
			Content		---- Sets
			Material		-- /--
			Dimensions W x D x H(mm)		-- x -- x --
			Description of Origin		No
		Gift Box	Material		Double/Brown
			Dimensions W x D x H(mm)		916 x 691 x 711
			Description of Origin		Yes
		Drop Test			Natural Dropping At 1 Corner / 2 Edges / 4 Surfaces
			Height (cm)		40 (ORION SPEC:25)
G-17	Cabinet Material	Cabinet	Cabinet Front		PS 94V0 DECABROM
			Cabinet Rear		PS 94V0 NON-DECABROM
		PCB	Non-Halogen Demand		No
			Eyelet Demand		Yes
		G-18	Environment	Pb-free Soldering	
Parts Specification(Phase3 : based on RoHS)				Yes	

# DISASSEMBLY INSTRUCTIONS

## 1. REMOVAL OF ANODE CAP


Read the following **NOTED** items before starting work.

- \* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
- \* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.


### REMOVAL

1. Follow the steps as follows to discharge the Anode Cap.  
(Refer to Fig. 1-1.)

Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground. While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver. A cracking noise will be heard as the voltage is discharged.

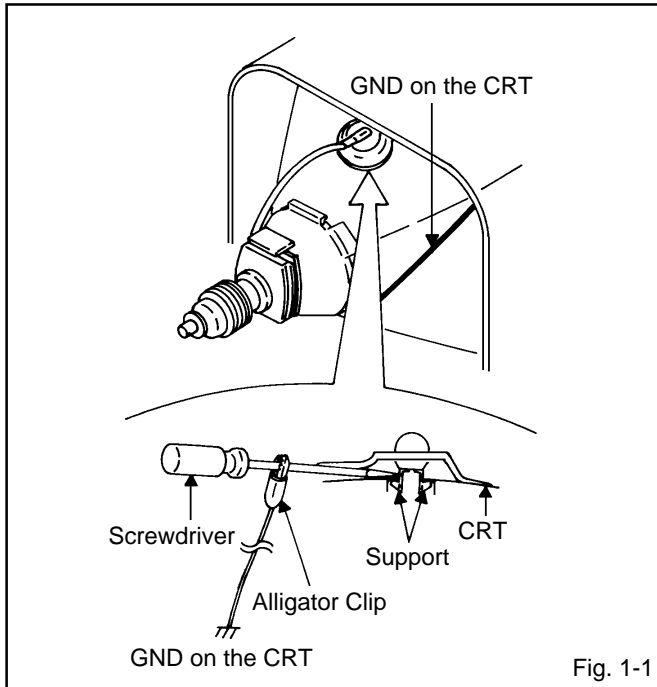

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support.  
(Refer to Fig. 1-2.)

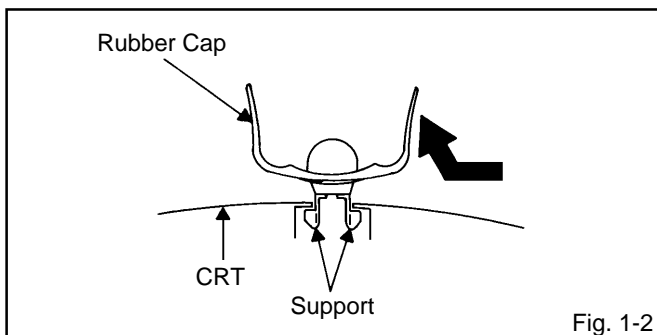


3. After one side is removed, pull in the opposite direction to remove the other.

### NOTE

Take care not to damage the Rubber Cap.

### INSTALLATION


1. Clean the spot where the cap was located with a small amount of alcohol. (Refer to Fig. 1-3.)

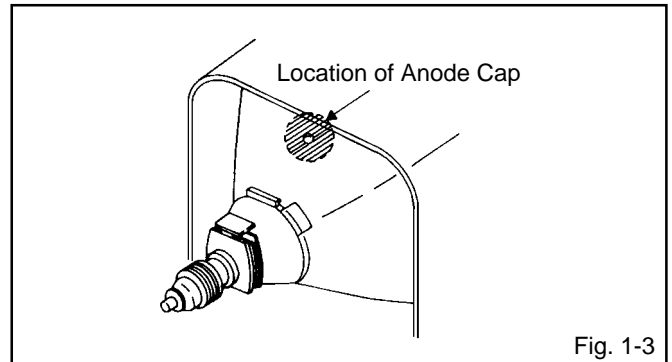


### NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. (Refer to Fig. 1-4.)

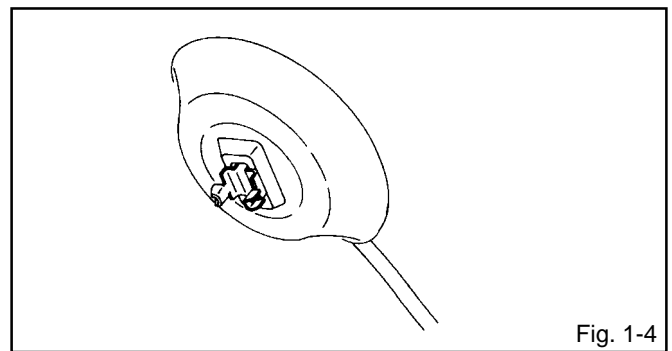

4. Insert one end of the Anode Support into the anode button, then the other as shown in Fig. 1-5.

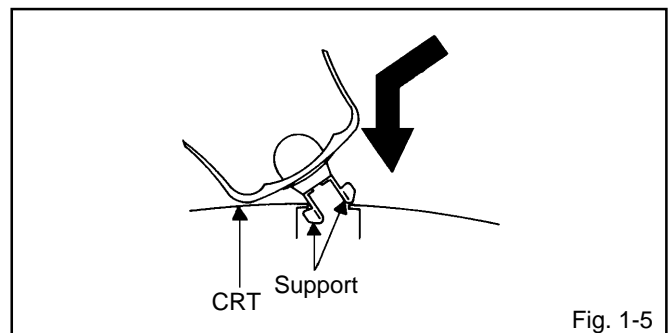

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

# DISASSEMBLY INSTRUCTIONS


## 2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

### REMOVAL

1. Put Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. (Refer to Fig. 2-1.)

#### NOTE


Masking is carried out on all the parts located within 10 mm distance from IC leads.

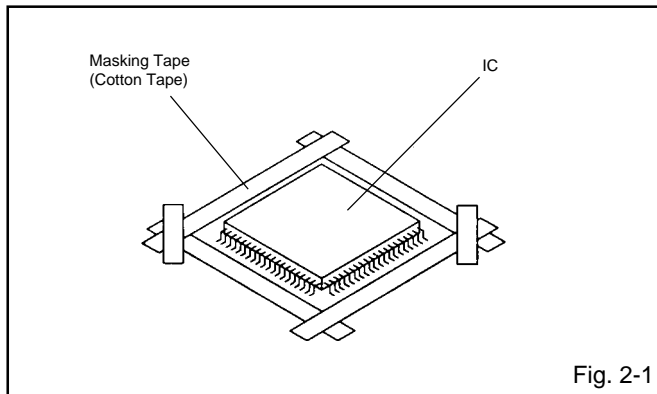

2. Heat the IC leads using a blower type IC desoldering machine. (Refer to Fig. 2-2.)

#### NOTE


Do not rotate or move the IC back and forth, until IC can move back and forth easily after desoldering the leads completely.

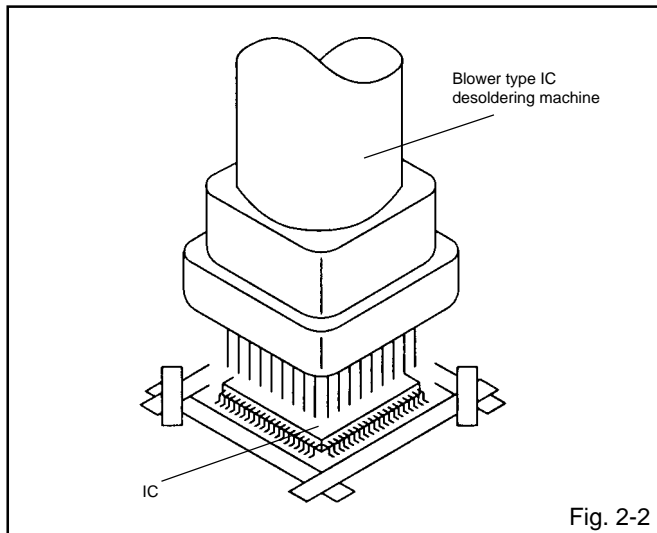

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. (Refer to Fig. 2-3.)

#### NOTE

Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

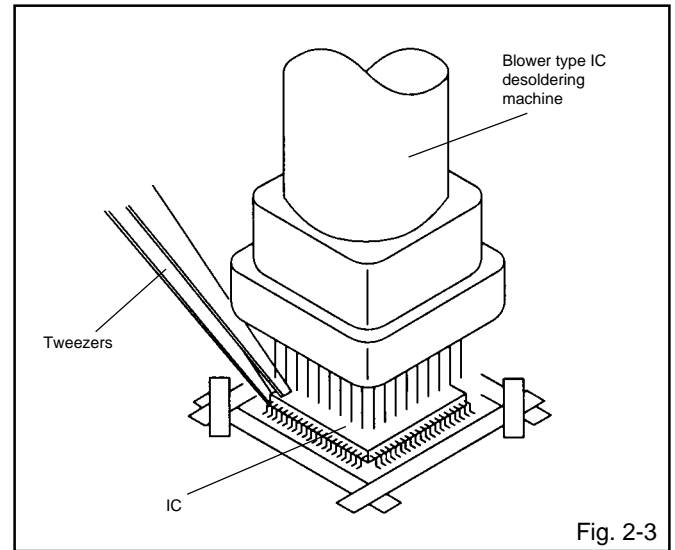


4. Peel off the Masking Tape.

5. Absorb the solder left on the pattern using the Braided Shield Wire. (Refer to Fig. 2-4.)

#### NOTE

Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

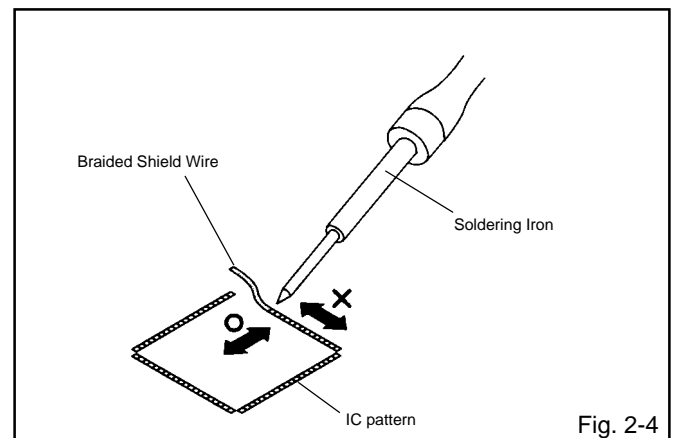





# DISASSEMBLY INSTRUCTIONS

## INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. (Refer to Fig. 2-5.)

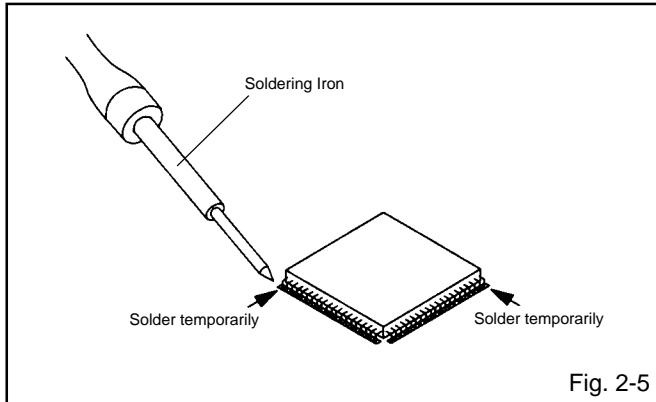


2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. (Refer to Fig. 2-6.)

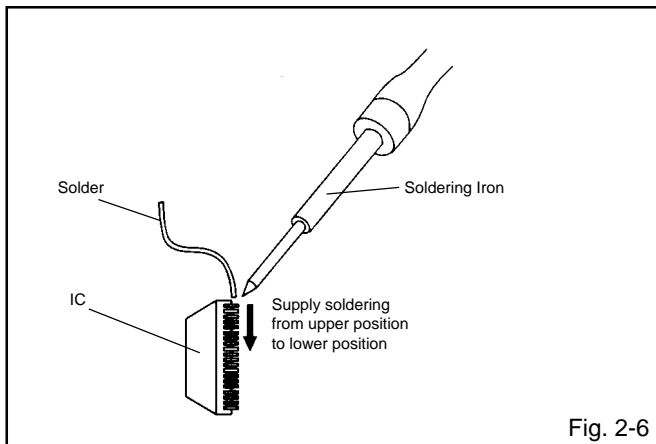


3. Absorb the solder left on the lead using the Braided Shield Wire. (Refer to Fig. 2-7.)

### NOTE

Do not absorb the solder to excess.

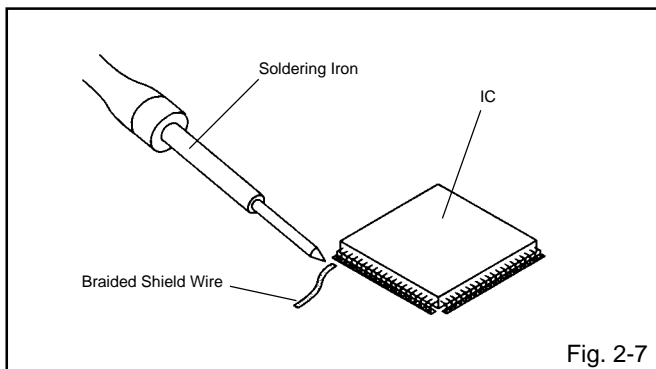

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. (Refer to Fig. 2-8.)

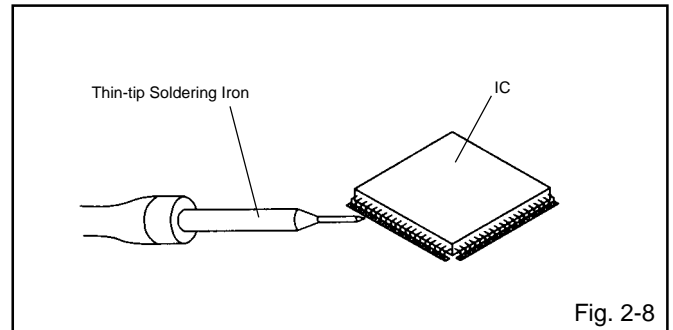

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass. Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

### NOTE

When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, always be sure to replace the IC in this case.

## SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.  
To enter to the Service Mode, press both set key and remote control key for more than 2 seconds.

Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD.
VOL. (-) MIN	1	Initialization of factory data. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED".  Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

## CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

**NOTE: If you set a factory initialization, the total hours is reset to "0".**

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 2 seconds.
3. After the confirmation of using hours, turn off the power.

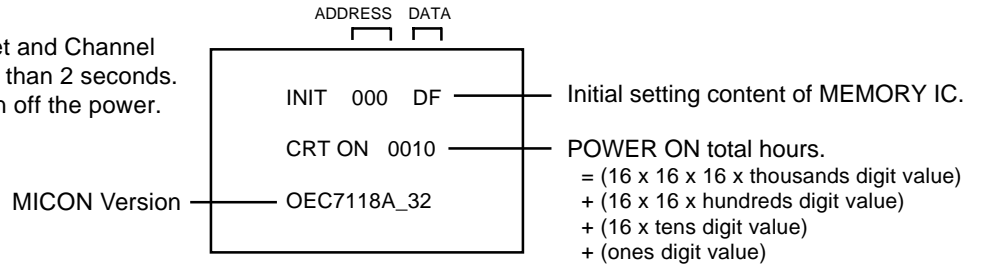


FIG. 1

## WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

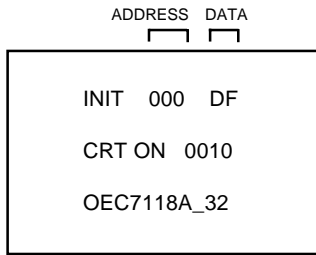


FIG. 1

\*1

INI	USA	CANADA
000	FF	7F

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	*1	A2	05	C1	E6	1C	87	98	42	E4	B3	03	0D	36	03	00
10	01	05	1F	24	40	45	5D	62	45	4A	67	0F	15	0A	AA	64
20	84	00	00	00	00	00	00	00	00	1A	00	5A	98	33	04	76
30	77	05	07	22	10	07	00	22	74	81	01	07	06	40	40	40
40	8F	C0	40	00	27	0A	0A	00	13	40	00	51	70	72	99	59
50	68	99	59	00	73	14	1F	2D	24	16	00	00	00	00	00	F6
60	EF	DB	DB	DB	15	00	00	26	06	07	09	00	C9	C8	E8	BC
70	40	0F	00	21	60	77	00	00	00	0F	1D	6D	FF	FF	FA	FA
80	FF	C0	52	50	8B	00	06	06	22	00	96	8B	6C	90	22	00
90	11	F0	00	07	00	00	00	B6	01	48	33	23	27	2A	2D	30
A0	33	36	39	3C	3F	42	45	48	4B	4E	51	53	55	57	58	59
B0	5A	5B	5C	5D	5E	5F	61	63	65	67	69	6A	6B	6C	6D	6E
C0	6F	70	71	71	72	72	73	73	74	74	75	75	75	75	76	76
D0	76	76	77	77	77	77	78	78	78	78	79	42	00	00	00	08
E0	15	18	11	14	E0	E6	F5	2B	38	FF	17	31	36	40	00	3F
F0	54	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---
100	DC	F1	21	66	66	0C	71	69	33	00	0E	38	22	66	DA	71
110	69	33	00	44	00	77	5E	99	59	03	82	88	88	00	82	01
120	00	03	82	03	82	0F	85	00	82	8D	83	00	82	D0	01	82
130	00	82	00	82	0D	00	05	11	00	11	00	11	1A	00	1C	00
140	00	80	00	00	00	25	1E	F4	05	16	A4	03	03	00	7F	7F
150	00	7E	7E	0E	0A	00	00	00	00	84	00	00	00	00	00	83
160	00	00	00	00	00	00	00	00	00	00	FF	FF	FF	FF	FF	FF
170	FF	FF	FB	00	10	01	FB	00	20	01	FB	00	4D	01	FB	00
180	2A	01	FB	00	10	01	FB	00	05	01	FB	00	19	01	FB	00
190	42	01	FB	00	27	01	FB	00	05	01	77	77	77	---	---	---

Table 1

## WHEN REPLACING EEPROM (MEMORY) IC

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 2 seconds. ADDRESS and DATA should appear as FIG 1.
3. ADDRESS is now selected and should "blink". Using the UP/DOWN button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press RIGHT/LEFT button to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using UP/DOWN button until required DATA value has been selected.
6. Pressing RIGHT/LEFT button will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input.

### **After the data input, set to the initializing of shipping.**

9. Turn POWER on.
10. Press both VOL. DOWN button on the set and Channel button **(1)** on the remote control for more than 2 seconds.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.

The unit will now have the correct DATA for the new MEMORY IC.

# ELECTRICAL ADJUSTMENTS

## 1. ADJUSTMENT PROCEDURE

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

### CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor with a heat sink, apply silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

**Prepare the following measurement tools for electrical adjustments.**

1. Oscilloscope
2. Digital Voltmeter
3. Multi-sound Generator
4. Pattern Generator

### On-Screen Display Adjustment

1. In the condition of NO indication on the screen.  
Press the VOL. DOWN button on the set and the Channel button **(9)** on the remote control for more than 2 second to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

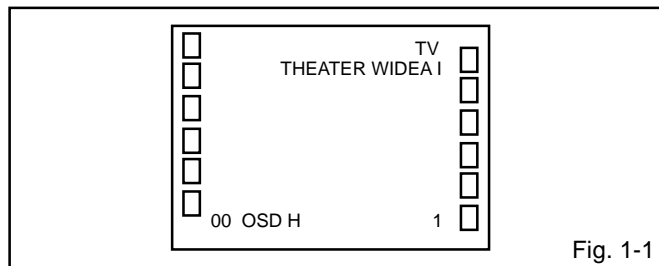


Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button **(0-9)** on the remote control to select the options shown in **Fig. 1-2**.
4. Press the MENU button on the remote control to end the adjustments.
5. To display the adjustment screen for AV, CS and HD-MI mode, press the TV/VIDEO button on the remote control to set to the AV, CS and HD-MI mode. Press the VOL.DOWN button on the set and the channel **(9)** on the remote control for more than 2 seconds.

NO.	FUNCTION	NO.	FUNCTION	NO.	FUNCTION
00	OSD H	20	CORNER	40	R-Y PHASE
01	CUT OFF	21	C.PARA	41	G-Y GAIN
02	H.POSI	22	C.SAW	42	G-Y PHASE
03	V.POSI	23	V.SYMM	43	BRI.CENT
04	H. SIZE	24	R.BIAS	44	BRI.MAX
05	V. SIZE	25	G.BIAS	45	BRI.MIN
06	V. LIN	26	B.BIAS	46	CONT.CENT
07	V-EHT	27	R/G.DRV	47	CONT.MAX
08	H-EHT	28	B/R.DRV	48	CONT.MIN
09	V-BLK P	29	R.BIAS(C)	49	COL.CENT
10	V-BLK S	30	G.BIAS(C)	50	COL.MAX
11	V.CENT	31	B.BIAS(C)	51	COL.MIN
12	V.LIMIT	32	R/G.DRV(C)	52	SUB CONT
13	V.CORR	33	B/R.DRV(C)	53	TINT
14	V.S.CORR	34	R.BIAS(W)	54	SHARP.CENT
15	EW PARA	35	G.BIAS(W)	55	SHARP.MAX
16	TRAPEZIUM	36	B.BIAS(W)	56	SHARP.MIN
17	COR.TOP	37	R/G.DRV(W)	57	TILT.CENT
18	COR.BTM	38	B/R.DRV(W)	58	TEST STEREO
19	S.CORR	39	R-Y GAIN	59	TEST AUDIO

Fig. 1-2

## 2. BASIC ADJUSTMENTS

### 2-1: CUT OFF

1. Place the set in Aging Test for more than 15 minutes.
2. Place the set in AV MODE without signal.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(01)** on the remote control to select "CUT OFF".
5. Adjust the **Screen Volume** until a dim raster is obtained.

### 2-2: WHITE BALANCE


**NOTE:** Adjust after performing CUT OFF adjustment.

1. Place the set in Aging Test for more than 10 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(24)** on the remote control to select "R.BIAS".
5. Press the CH. UP/DOWN button on the remote control to select the "R.BIAS", "G.BIAS", "B.BIAS", "R/G.DRV", "B/R.DRV", "R.BIAS(C)", "G.BIAS(C)", "B.BIAS(C)", "R/G.DRV(C)", "B/R.DRV(C)", "R.BIAS(W)", "G.BIAS(W)", "B.BIAS(W)", "R/G.DRV(W)" or "B/R.DRV(W)".
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R.BIAS(C), G.BIAS(C), B.BIAS(C), R/G.DRV(C), B/R.DRV(C), R.BIAS(W), G.BIAS(W), B.BIAS(W), R/G.DRV(W) and B/R.DRV(W)" at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is achieved.

## ELECTRICAL ADJUSTMENTS


### 2-3: DOUBLE FOCUS

1. Receive the cross hatch signal from the Pattern Generator.
2. Turn the **F1 VR** and **F2 VR** fully clockwise once. (Refer to Fig. 2-1)
3. Adjust the **F1 VR** so that the screen becomes clearest. Then adjust the **F2 VR**.

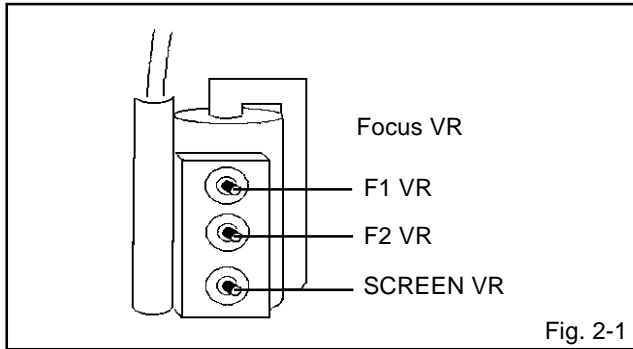

### 2-4: OSD HORIZONTAL

1. Receive the monoscope pattern from the Pattern Generator.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of Fig. 1-1 and press the channel button **(00)** on the remote control to select "OSD H".
4. Press the LEFT/RIGHT button on the remote control until the difference of A and B becomes minimum. (Refer to Fig. 2-2)

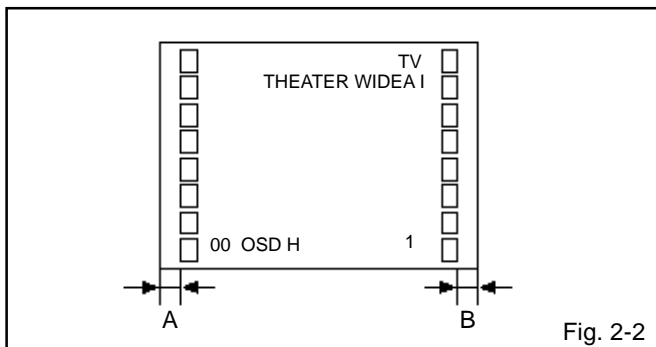

### 2-5: HORIZONTAL POSITION/ HORIZONTAL SIZE

1. Receive the monoscope pattern.
2. Press the MENU button. And, then press the LEFT/RIGHT button on the remote control until the PICTURE menu appears.
3. Press the LEFT/RIGHT button on the remote control to highlight DISPLAY FORMAT.
4. Press the LEFT/RIGHT button on the remote control to select 1080i.
5. Set the screen mode to FULL.
6. Activate the adjustment mode display of Fig. 1-1 and press the channel button **(02)** on the remote control to select "H.POSI".
7. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.
8. Receive the monoscope pattern.
9. Activate the adjustment mode display of Fig. 1-1 and press the channel button **(04)** on the remote control to select "H. SIZE".
10. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes 7.5%.

### 2-6: VERTICAL CENT/ VERTICAL SIZE

1. Receive the monoscope pattern.
2. Press the MENU button. And, then press the LEFT/RIGHT button on the remote control until the PICTURE menu appears.
3. Press the LEFT/RIGHT button on the remote control to highlight DISPLAY FORMAT.
4. Press the LEFT/RIGHT button on the remote control to select 1080i.
5. Set the screen mode to FULL.
6. Using the remote control, set the brightness and contrast to normal position.
7. Activate the adjustment mode display of Fig. 1-1 and press the channel button **(11)** on the remote control to select "V. CENT".
8. Press the VOL. UP/DOWN button on the remote control until the horizontal line becomes fit to the notch of the shadow mask.
9. Receive the monoscope pattern.
10. Activate the adjustment mode display of Fig. 1-1 and press the channel button **(05)** on the remote control to select "V. SIZE".
11. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes 8%.

# ELECTRICAL ADJUSTMENTS

## 2-7: VERTICAL LINEARITY

**NOTE:** Adjust after performing adjustments in section 2-6.  
After the adjustment of Vertical Linearity, reconfirm the Vertical Position and Vertical Size adjustments.

1. Receive the monoscope pattern.
2. Press the MENU button. And, then press the LEFT/RIGHT button on the remote control until the PICTURE menu appears.
3. Press the LEFT/RIGHT button on the remote control to highlight DISPLAY FORMAT.
4. Press the LEFT/RIGHT button on the remote control to select 1080i.
5. Set the screen mode to FULL.
6. Using the remote control, set the brightness and contrast to normal position.
7. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(06)** on the remote control to select "V. LIN".
8. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes 8%.

## 2-8: BRIGHT CENT

1. Receive the monoscope pattern. (RF Input)
2. Set the screen mode to FULL.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(43)** on the remote control to select "BRI CENT".
5. Press the VOL. UP/DOWN button on the remote control until the white 2.7% is starting to be visible
6. Receive the monoscope pattern. (Audio Video Input)
7. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~5.
8. Receive the monoscope pattern.
9. Press the TV/VIDEO button on the remote control to set to the CS mode. Then perform the above adjustments 2~5.
10. Receive the monoscope pattern.
11. Press the TV/VIDEO button on the remote control to set to the HD-MI mode. Then perform the above adjustments 2~5.

## 2-9: SUB CONTRAST

1. Set the screen mode to FULL.
2. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(52)** on the remote control to select "SUB CONT".
3. Check if the step No. SUB CONT is "14".
4. Receive a broadcast and check if the picture is normal.
5. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~4.
6. Receive a broadcast and check if the picture is normal.
7. Press the TV/VIDEO button on the remote control to set to the CS mode. Then perform the above adjustments 2~4.
8. Receive a broadcast and check if the picture is normal.
9. Press the TV/VIDEO button on the remote control to set to the HD-MI mode.
10. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(52)** on the remote control to select "SUB CONT".
11. Check if the step No. SUB CONT is "16".
12. Receive a broadcast and check if the picture is normal.

## 2-10: E/W PARA

1. Receive the crosshatch signal from the Pattern Generator.
2. Set the screen mode to FULL.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(15)** on the remote control to select "E W PARA".
5. Press the VOL. UP/DOWN button on the remote control until the both ends vertical lines become straight.
6. Set the screen mode to 4:3.
7. Press the VOL. UP/DOWN button on the remote control until the both ends vertical lines of the screen become parallel.

## 2-11: TRAPEZIUM

1. Receive the crosshatch signal from the Pattern Generator.
2. Press the MENU button. And, then press the LEFT/RIGHT button on the remote control until the PICTURE menu appears.
3. Press the LEFT/RIGHT button on the remote control to highlight DISPLAY FORMAT.
4. Press the LEFT/RIGHT button on the remote control to select 1080i.
5. Set the screen mode to FULL.
6. Using the remote control, set the brightness and contrast to normal position.
7. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(16)** on the remote control to select "TRAPEZIUM".
8. Press the VOL. UP/DOWN button on the remote control until the both ends vertical lines of the screen become parallel.

# ELECTRICAL ADJUSTMENTS

## 2-12: COR TOP/BTM

1. Receive the crosshatch signal from the Pattern Generator.
2. Set the screen mode to FULL.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(17)** on the remote control to select "COR. TOP".
5. Press the VOL. UP/DOWN button on the remote control until the both ends vertical lines become straight.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(18)** on the remote control to select "COR. BTM".
7. Press the VOL. UP/DOWN button on the remote control until the both ends vertical lines of the screen become parallel.

## 2-13: SEMSOR SAW

1. Receive the crosshatch signal from the Pattern Generator.
2. Press the MENU button. And, then press the LEFT/RIGHT button on the remote control until the PICTURE menu appears.
3. Press the LEFT/RIGHT button on the remote control to highlight DISPLAY FORMAT.
4. Press the LEFT/RIGHT button on the remote control to select 1080i.
5. Set the screen mode to FULL.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(22)** on the remote control to select "C.SAW".
7. Press the VOL. UP/DOWN button on the remote control until the both ends vertical lines of the screen become parallel.

## 2-14: SEMSOR PARA

1. Receive the crosshatch signal from the Pattern Generator.
2. Press the MENU button. And, then press the LEFT/RIGHT button on the remote control until the PICTURE menu appears.
3. Press the LEFT/RIGHT button on the remote control to highlight DISPLAY FORMAT.
4. Press the LEFT/RIGHT button on the remote control to select 1080i.
5. Set the screen mode to FULL.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(21)** on the remote control to select "C.PARA".
7. Press the VOL. UP/DOWN button on the remote control until the both ends vertical lines become straight.

## 2-15: TINT/COLOR CENT

1. Receive the color bar pattern.
2. Connect the oscilloscope to **TP806**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(53)** on the remote control to select "TINT".
4. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes as straight line. **(Refer to Fig. 2-3)**
5. Connect the oscilloscope to **TP805**.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(49)** on the remote control to select "COL.CENT".
7. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to  $120 \pm 10\%$  of the white level. **(Refer to Fig. 2-4)**
8. Please check whether the waveform of TP806 is straight line. If is not a straight line, adjust to TINT again.
9. Receive the color bar pattern. (Audio Video Input)
10. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~8.
11. Receive the color bar pattern.
12. Press the TV/VIDEO button on the remote control to set to the CS mode. Then perform the above adjustments 2~8.
13. Receive the color bar pattern.
14. Press the TV/VIDEO button on the remote control to set to the HD-MI mode. Then perform the above adjustments 2~8.

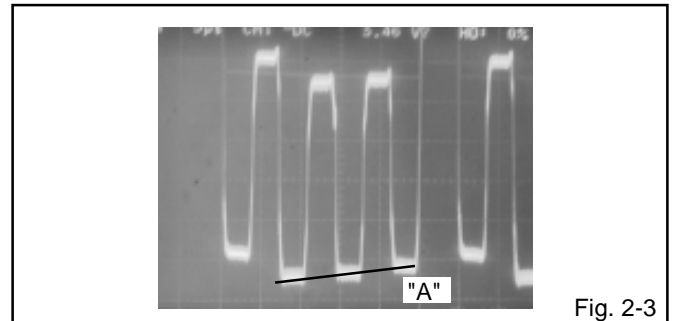


Fig. 2-3

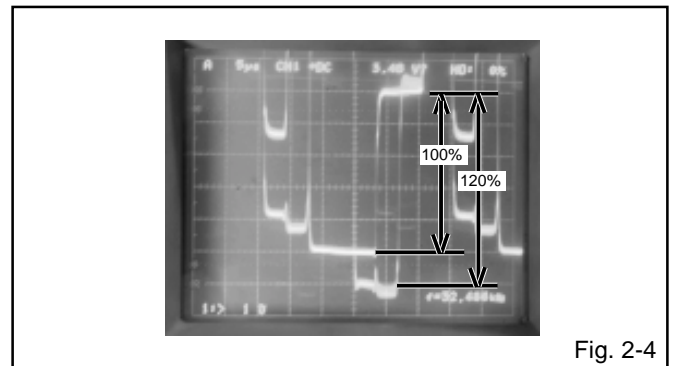


Fig. 2-4



## ELECTRICAL ADJUSTMENTS

### 2-16: TILT

1. Connect the digital voltmeter between **W843** and **W844**.
2. Receive the crosshatch signal from the Pattern Generator.
3. Press the PIC SIZE button on the remote control to select the FULL screen mode.
4. Using the remote control, set the brightness and contrast to normal position.
5. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(57)** on the remote control to select "TILT CENT".
6. Press the VOL. UP/DOWN button on the remote control until the voltage become minimum(0V).

### 2-17: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below.

NO.	FUNCTION	RF	AV	CS	HD-MI
03	V.POSI	01	01	01	01
07	V-EHT	04	04	04	04
08	H-EHT	06	06	06	06
09	V-BLK P	31	31	31	31
10	V-BLK S	00	00	00	00
12	V.LIMIT	00	00	00	00
13	V.CORR	02	02	02	02
14	C.S.CORR	30	30	30	30
19	S.CORR	16	16	16	16
20	CORNER	21	21	21	21
23	V.SYMM	128	128	128	128
39	R-Y GAIN	08	08	08	08
40	R-Y PHASE	03	03	03	03
41	G-Y GAIN	05	05	05	05
42	G-Y PHASE	00	00	00	00
44	BRI.MAX	240	240	240	240
45	BRI.MIN	50	50	50	50
46	CONT.CENT	70	70	70	70
47	CONT.MAX	80	80	80	80
48	CONT.MIN	50	50	50	50
50	COL.MAX	95	95	110	110
51	COL.MIN	00	00	00	00
54	SHARP.CENT	55	55	55	55
55	SHARP.MAX	100	100	100	100
56	SHARP.MIN	00	00	00	00
58	TEST STEREO	00	00	00	00
59	TEST AUVIO	00	00	00	00

# ELECTRICAL ADJUSTMENTS

## 3. PURITY AND CONVERGENCE ADJUSTMENTS

### NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

### 3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**  
If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

### 3-2: PURITY

### NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.  
Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue color.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

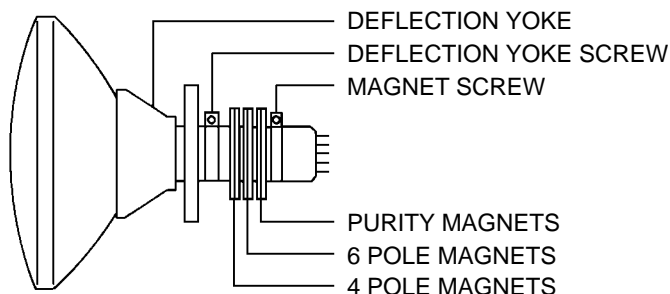


Fig. 3-1

### 3-3: STATIC CONVERGENCE

### NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

### 3-4: DYNAMIC CONVERGENCE

### NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**


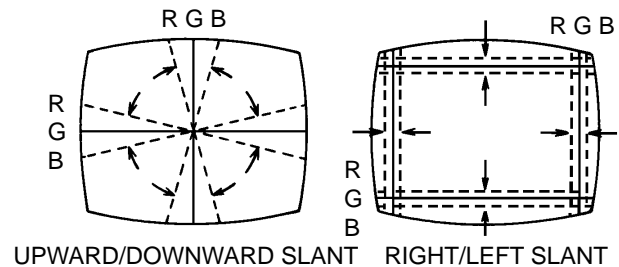


Fig. 3-2-a

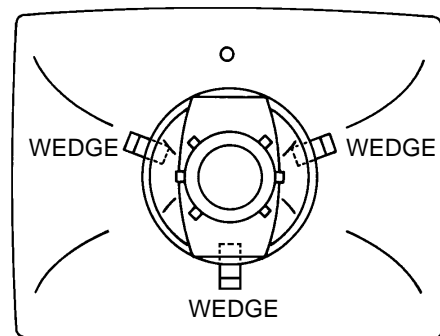


WEDGE POSITION


Fig. 3-2-b

# ELECTRICAL ADJUSTMENTS


## 4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

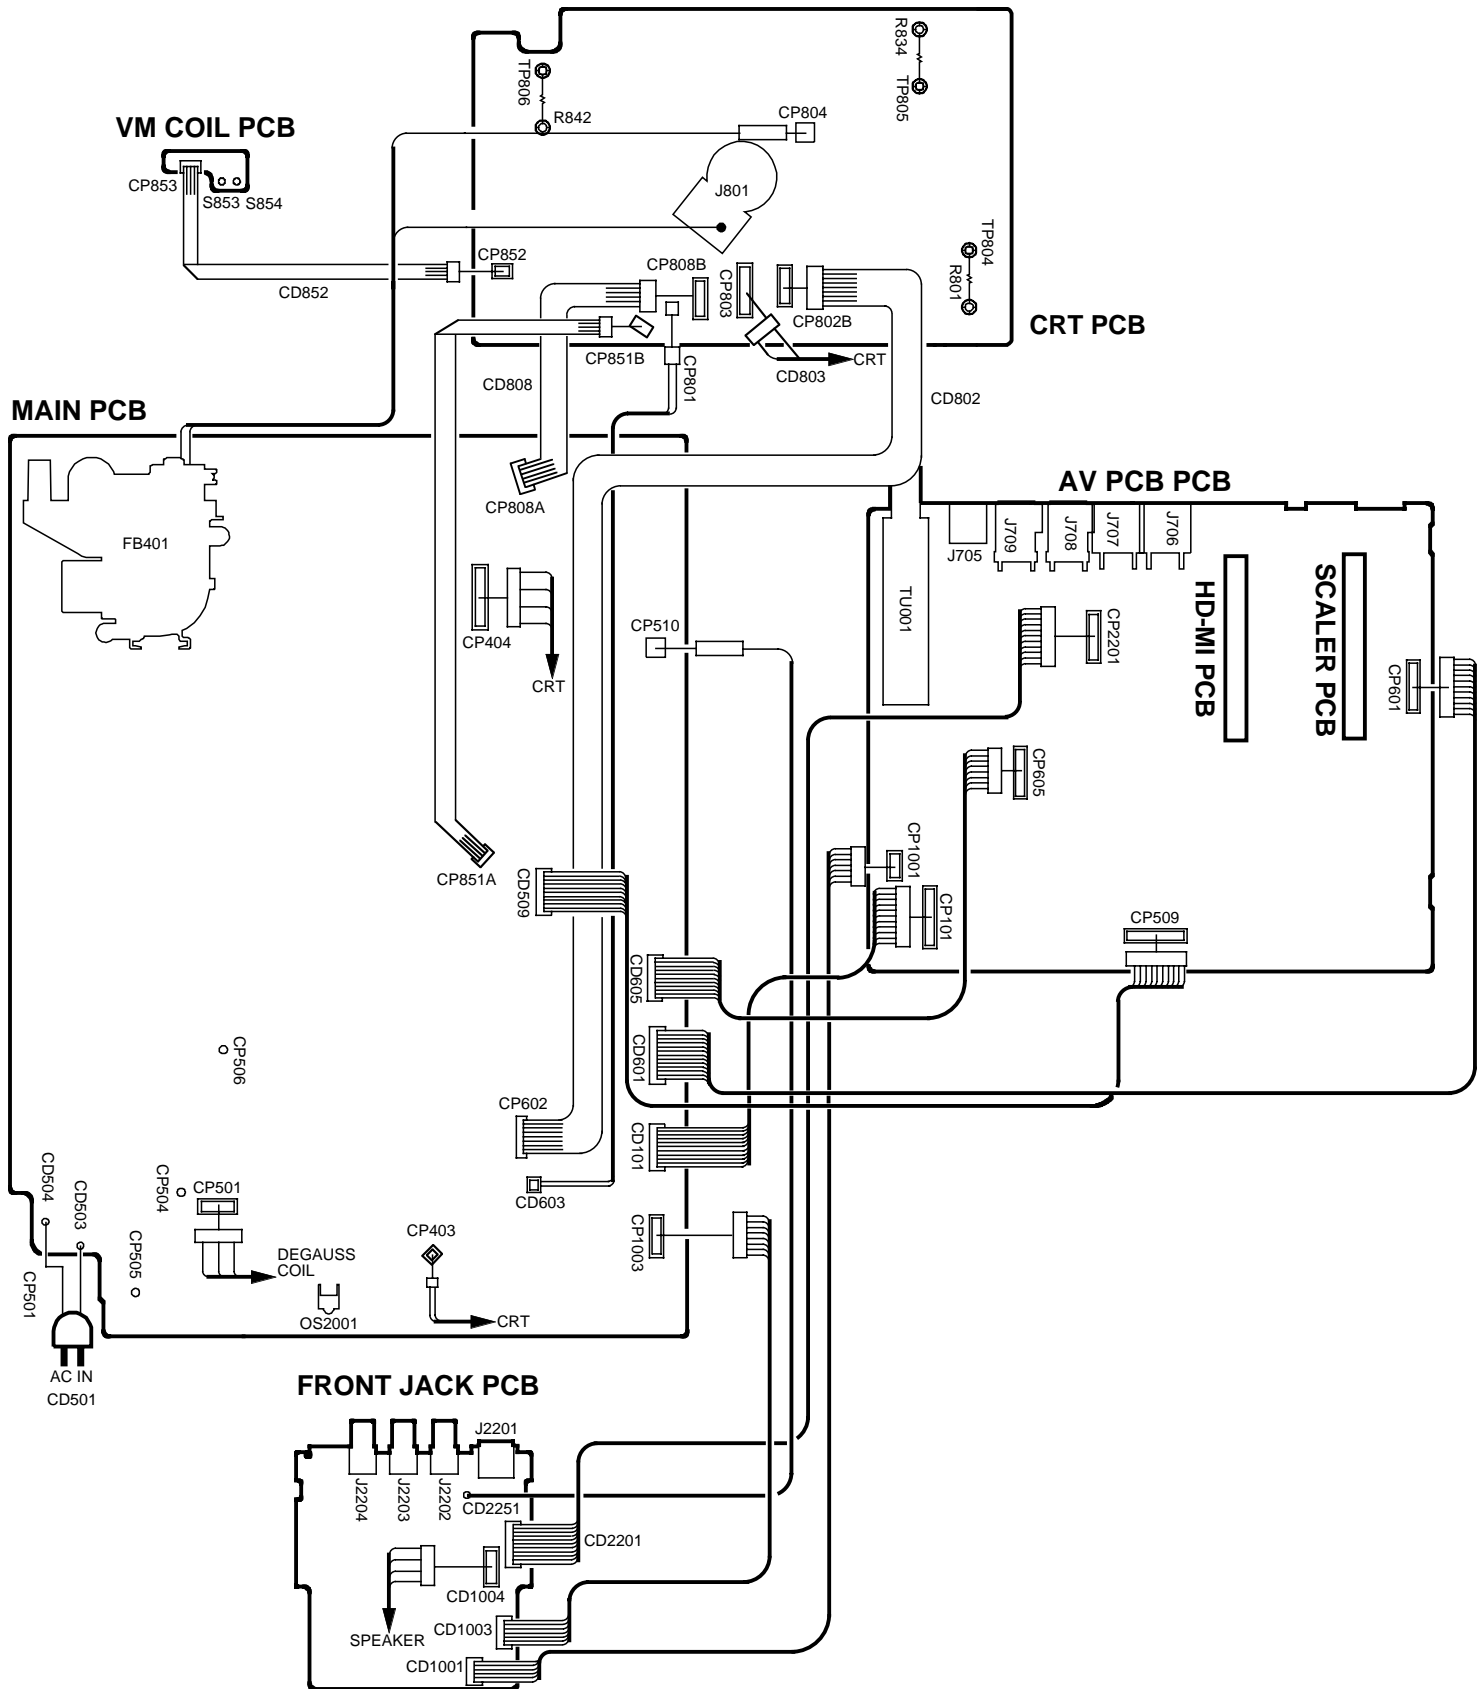


TV BLOCK DIAGRAM

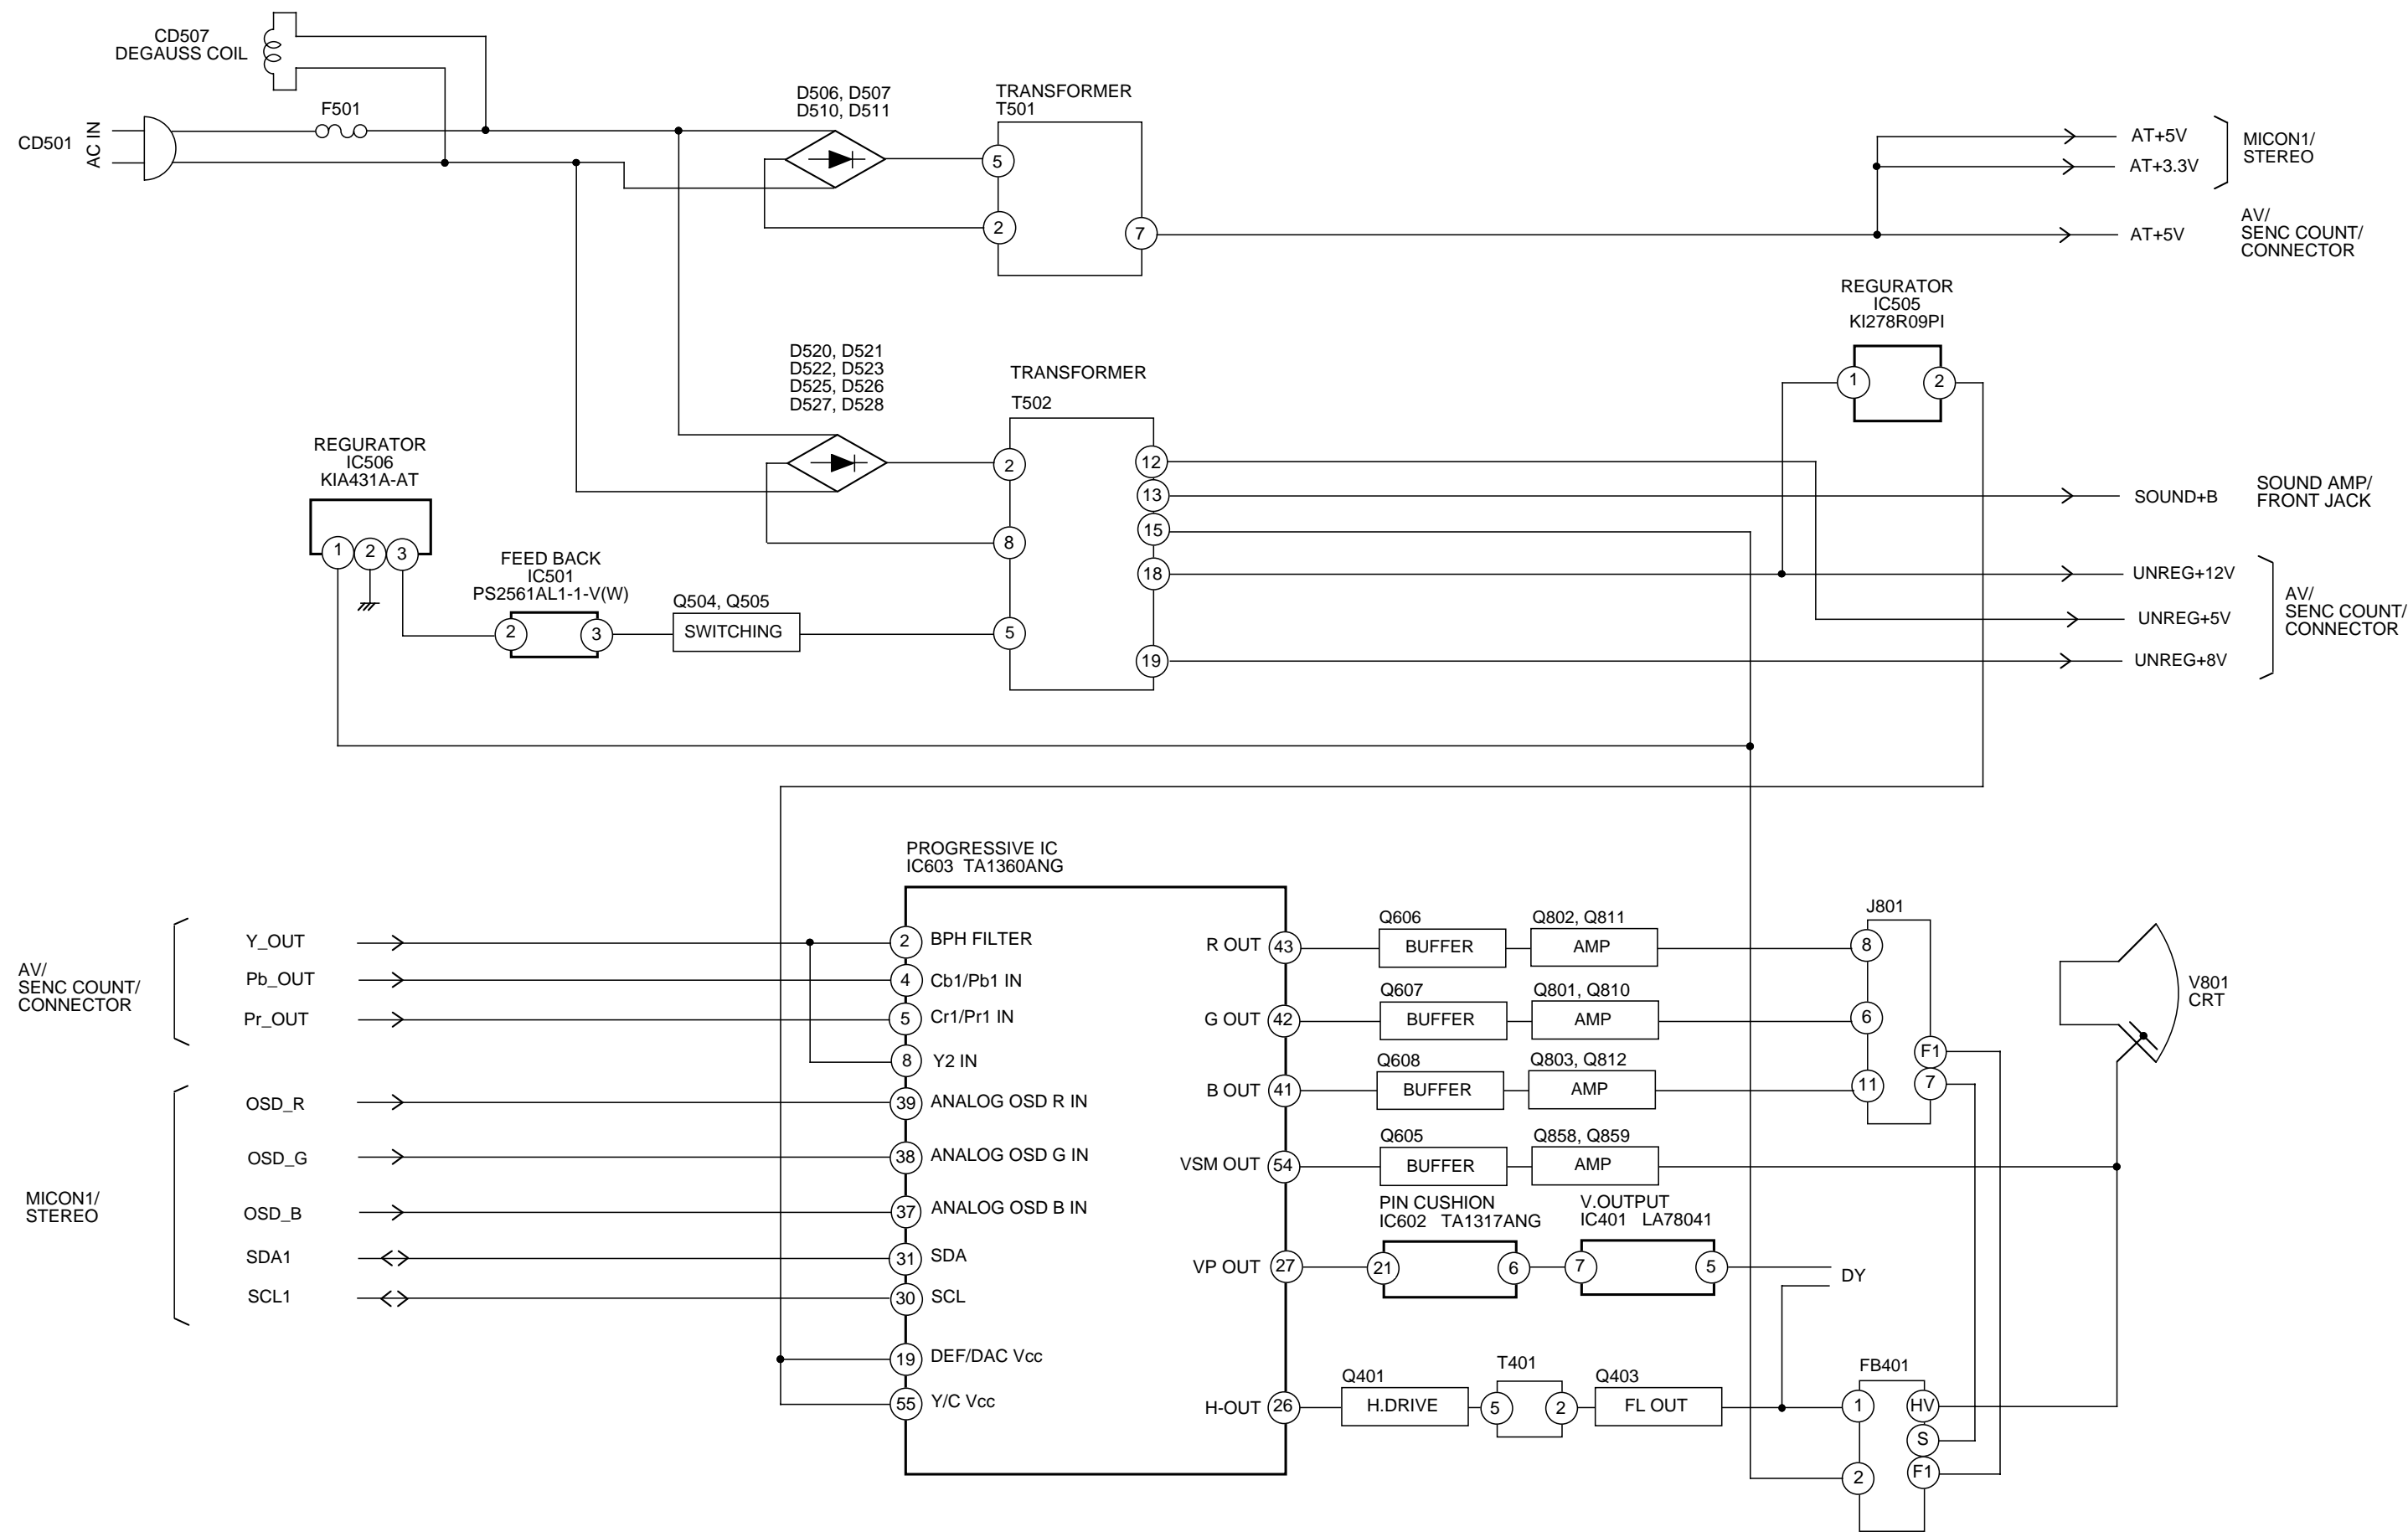


SOUND AMP/FRONT JACK BLOCK DIAGRAM

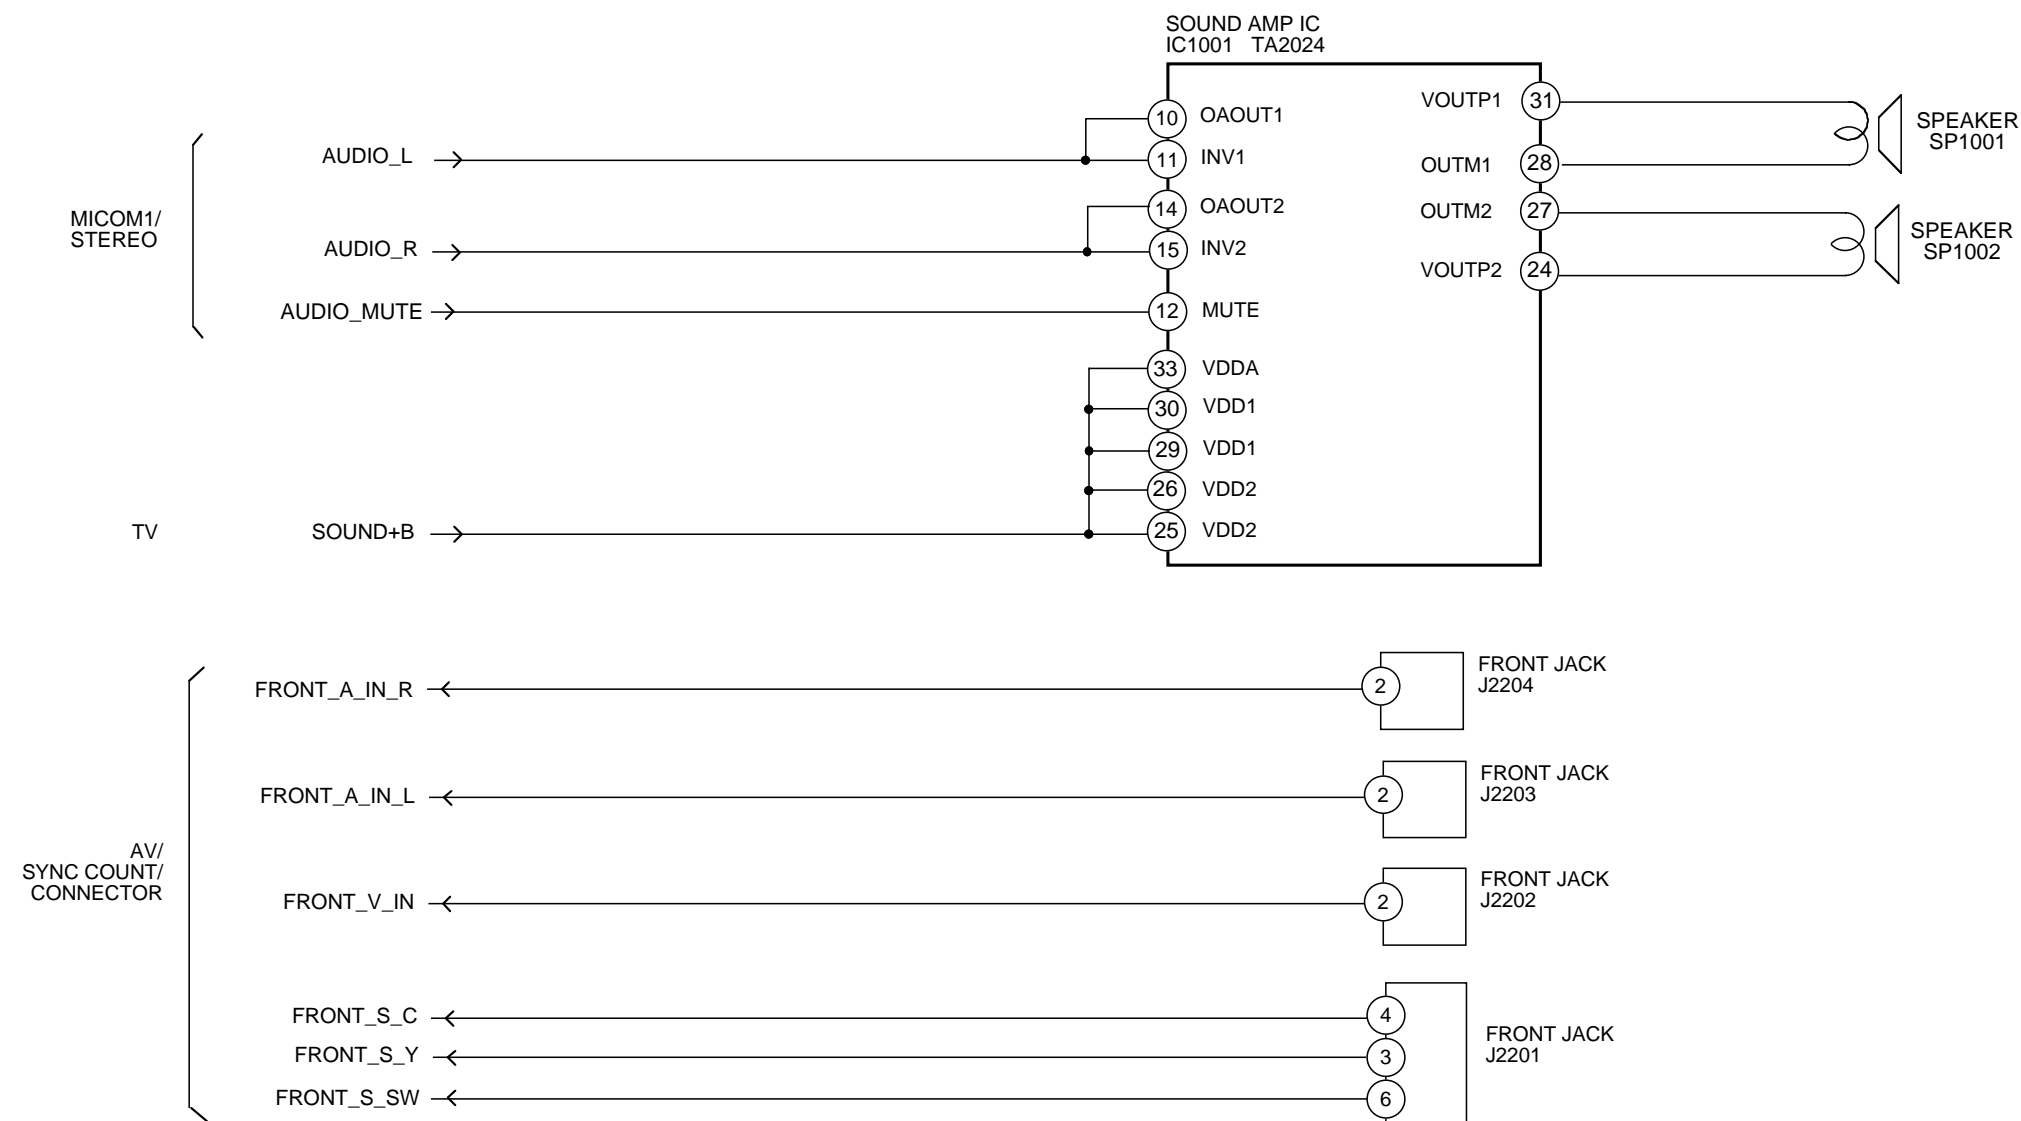


MICON1/STEREO BLOCK DIAGRAM

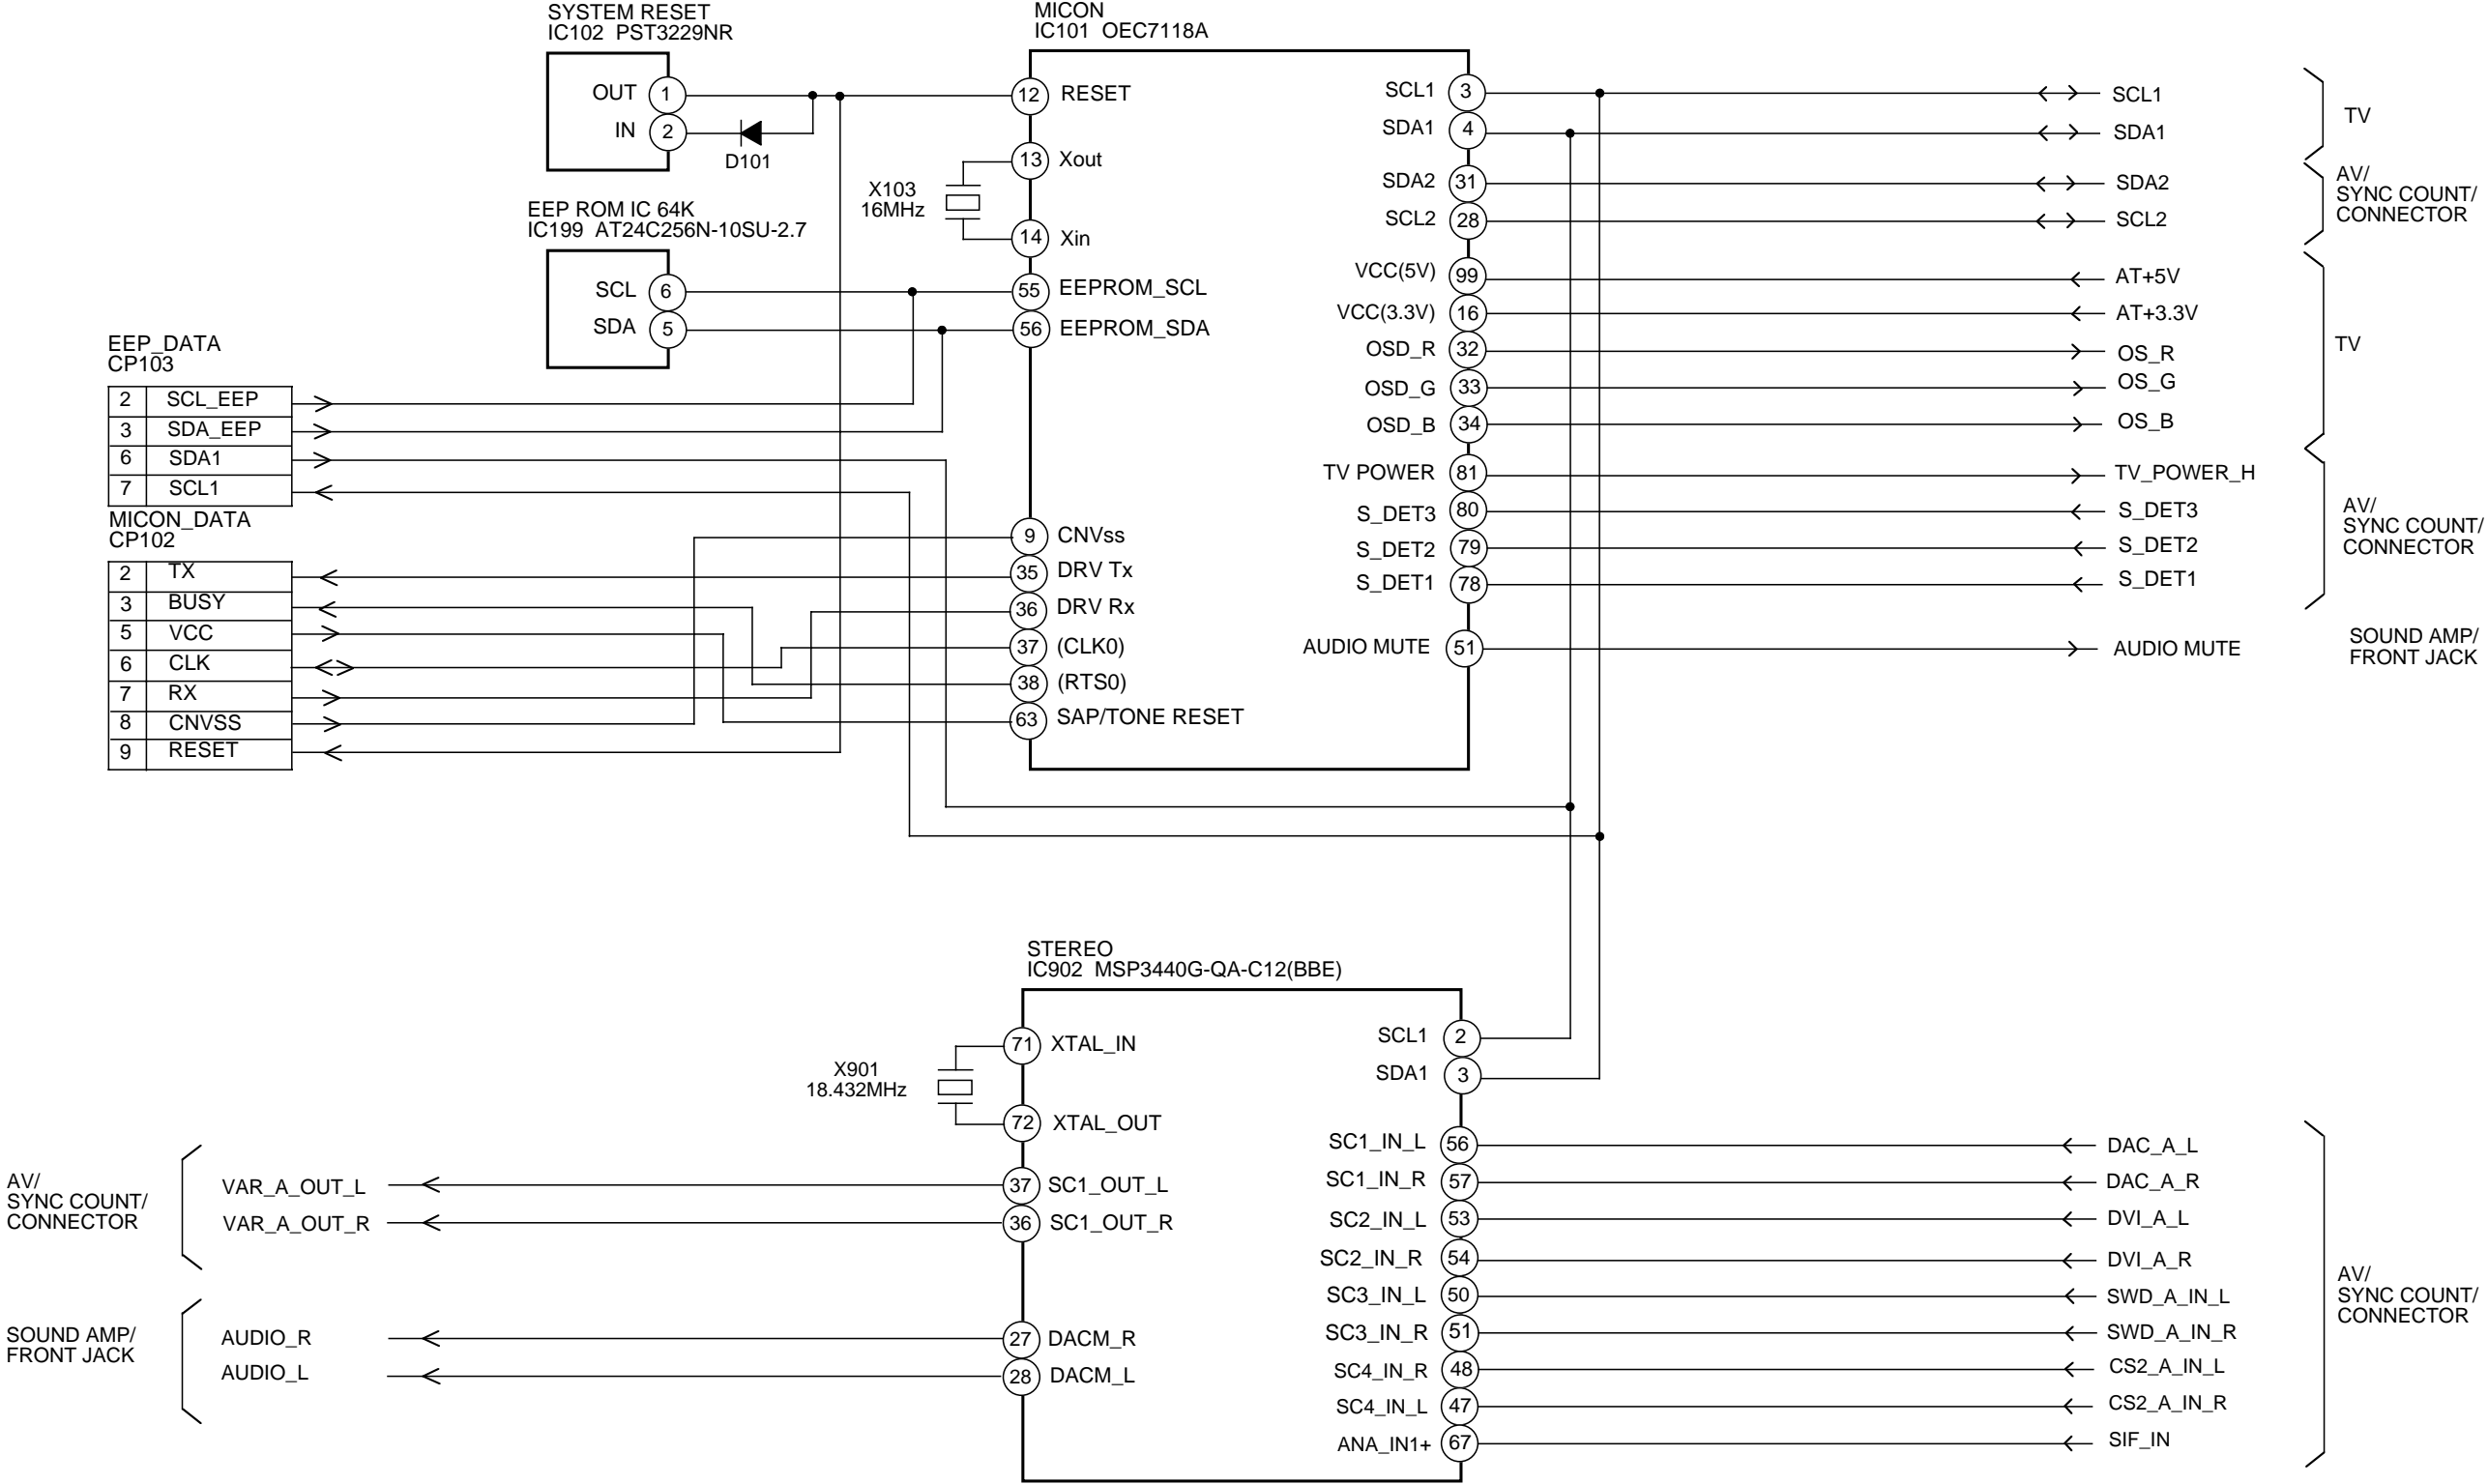

AV/SYNC COUNT/CONNECTOR BLOCK DIAGRM

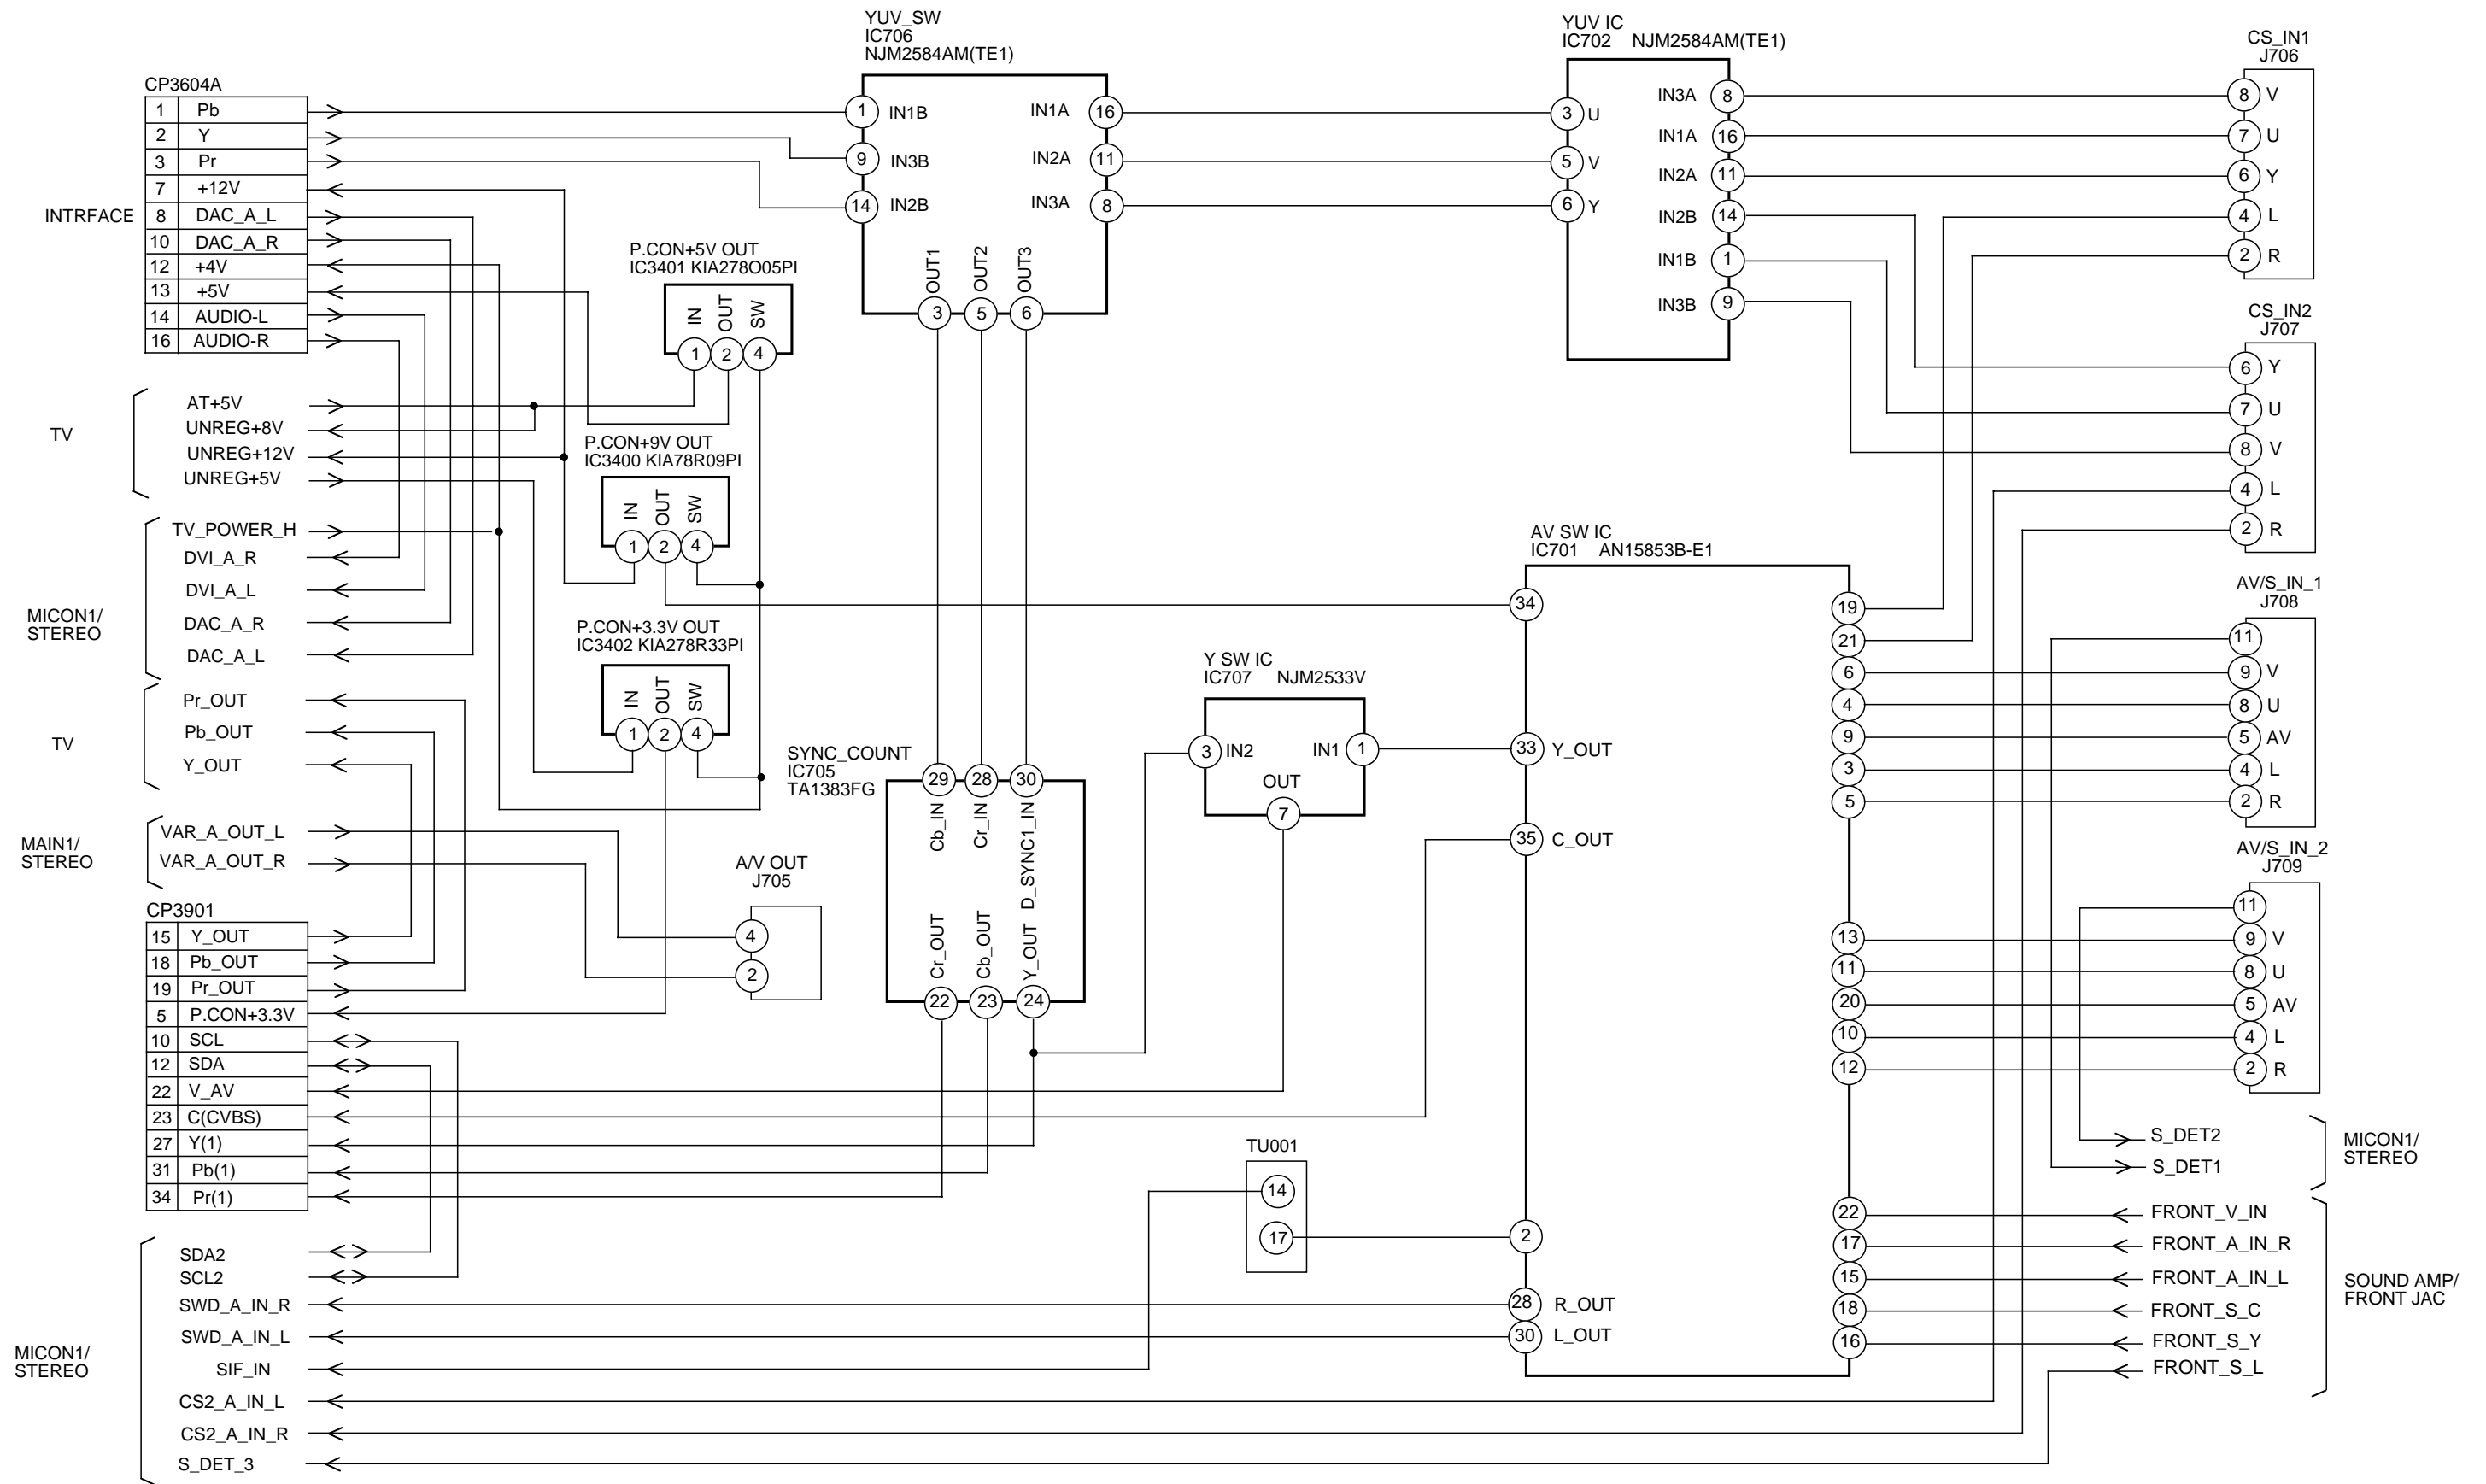


INTERFACE BLOCK DIAGRAM

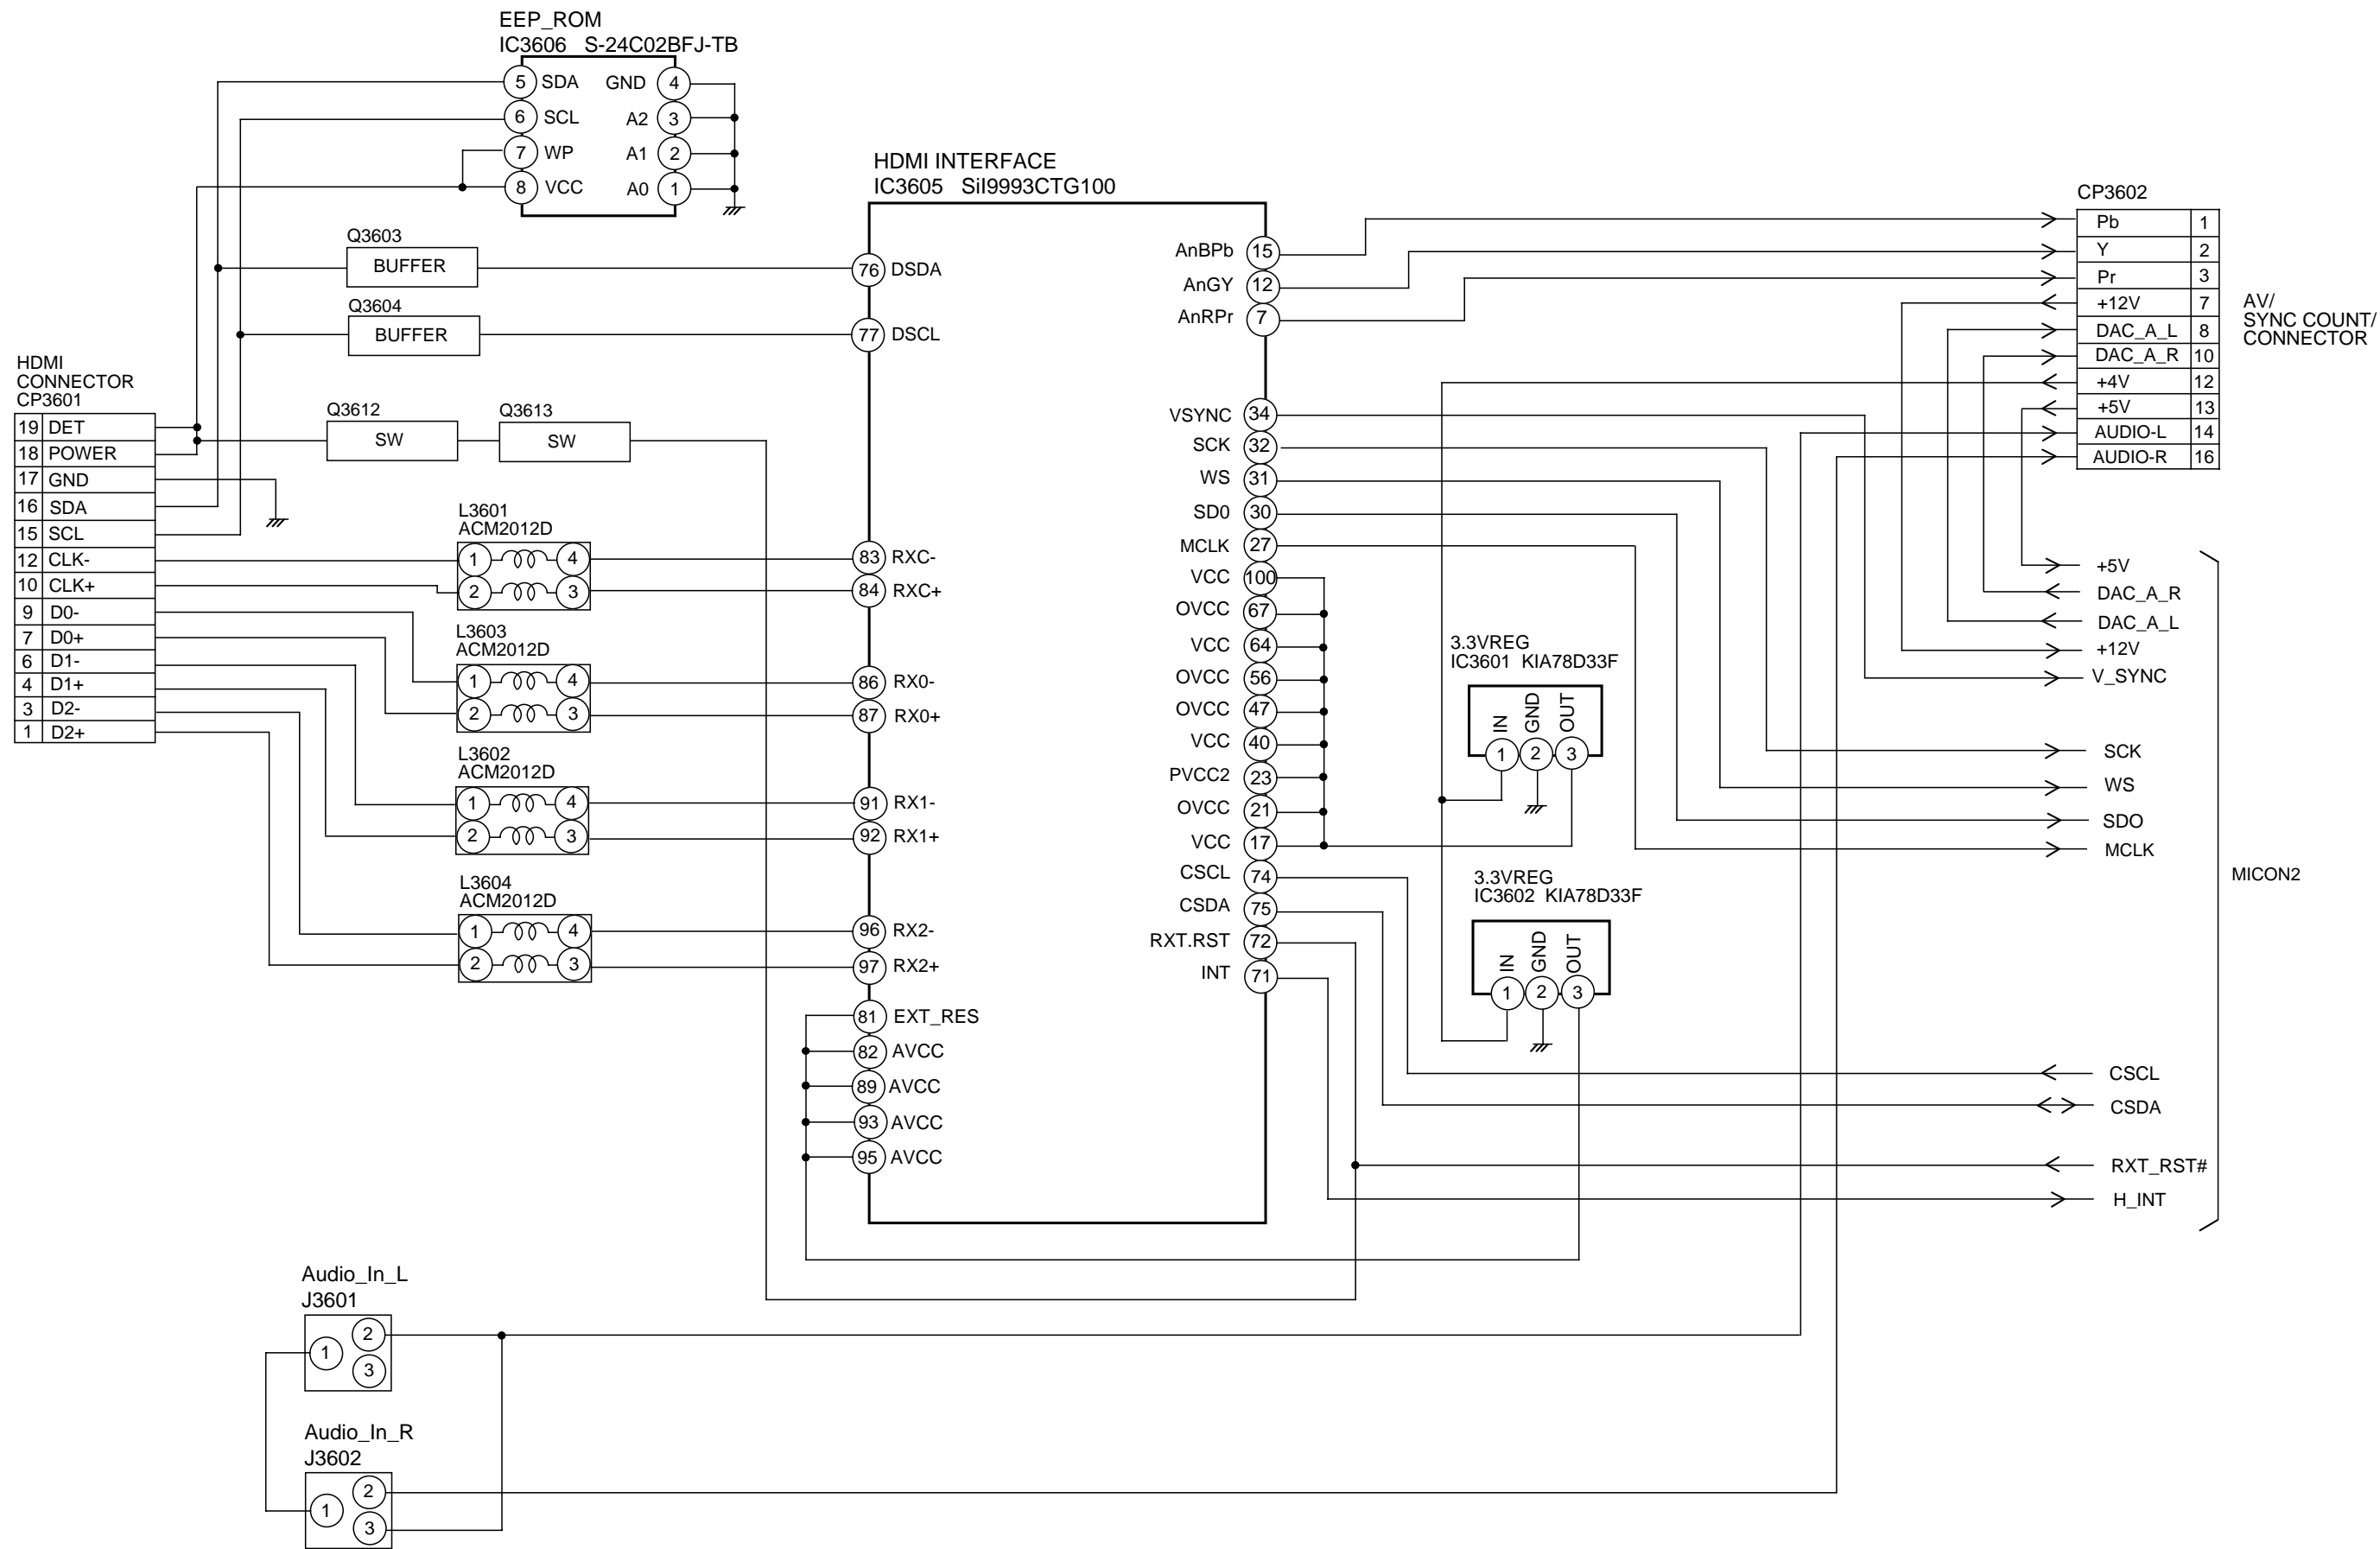





MICON2 BLOCK DIAGRAM

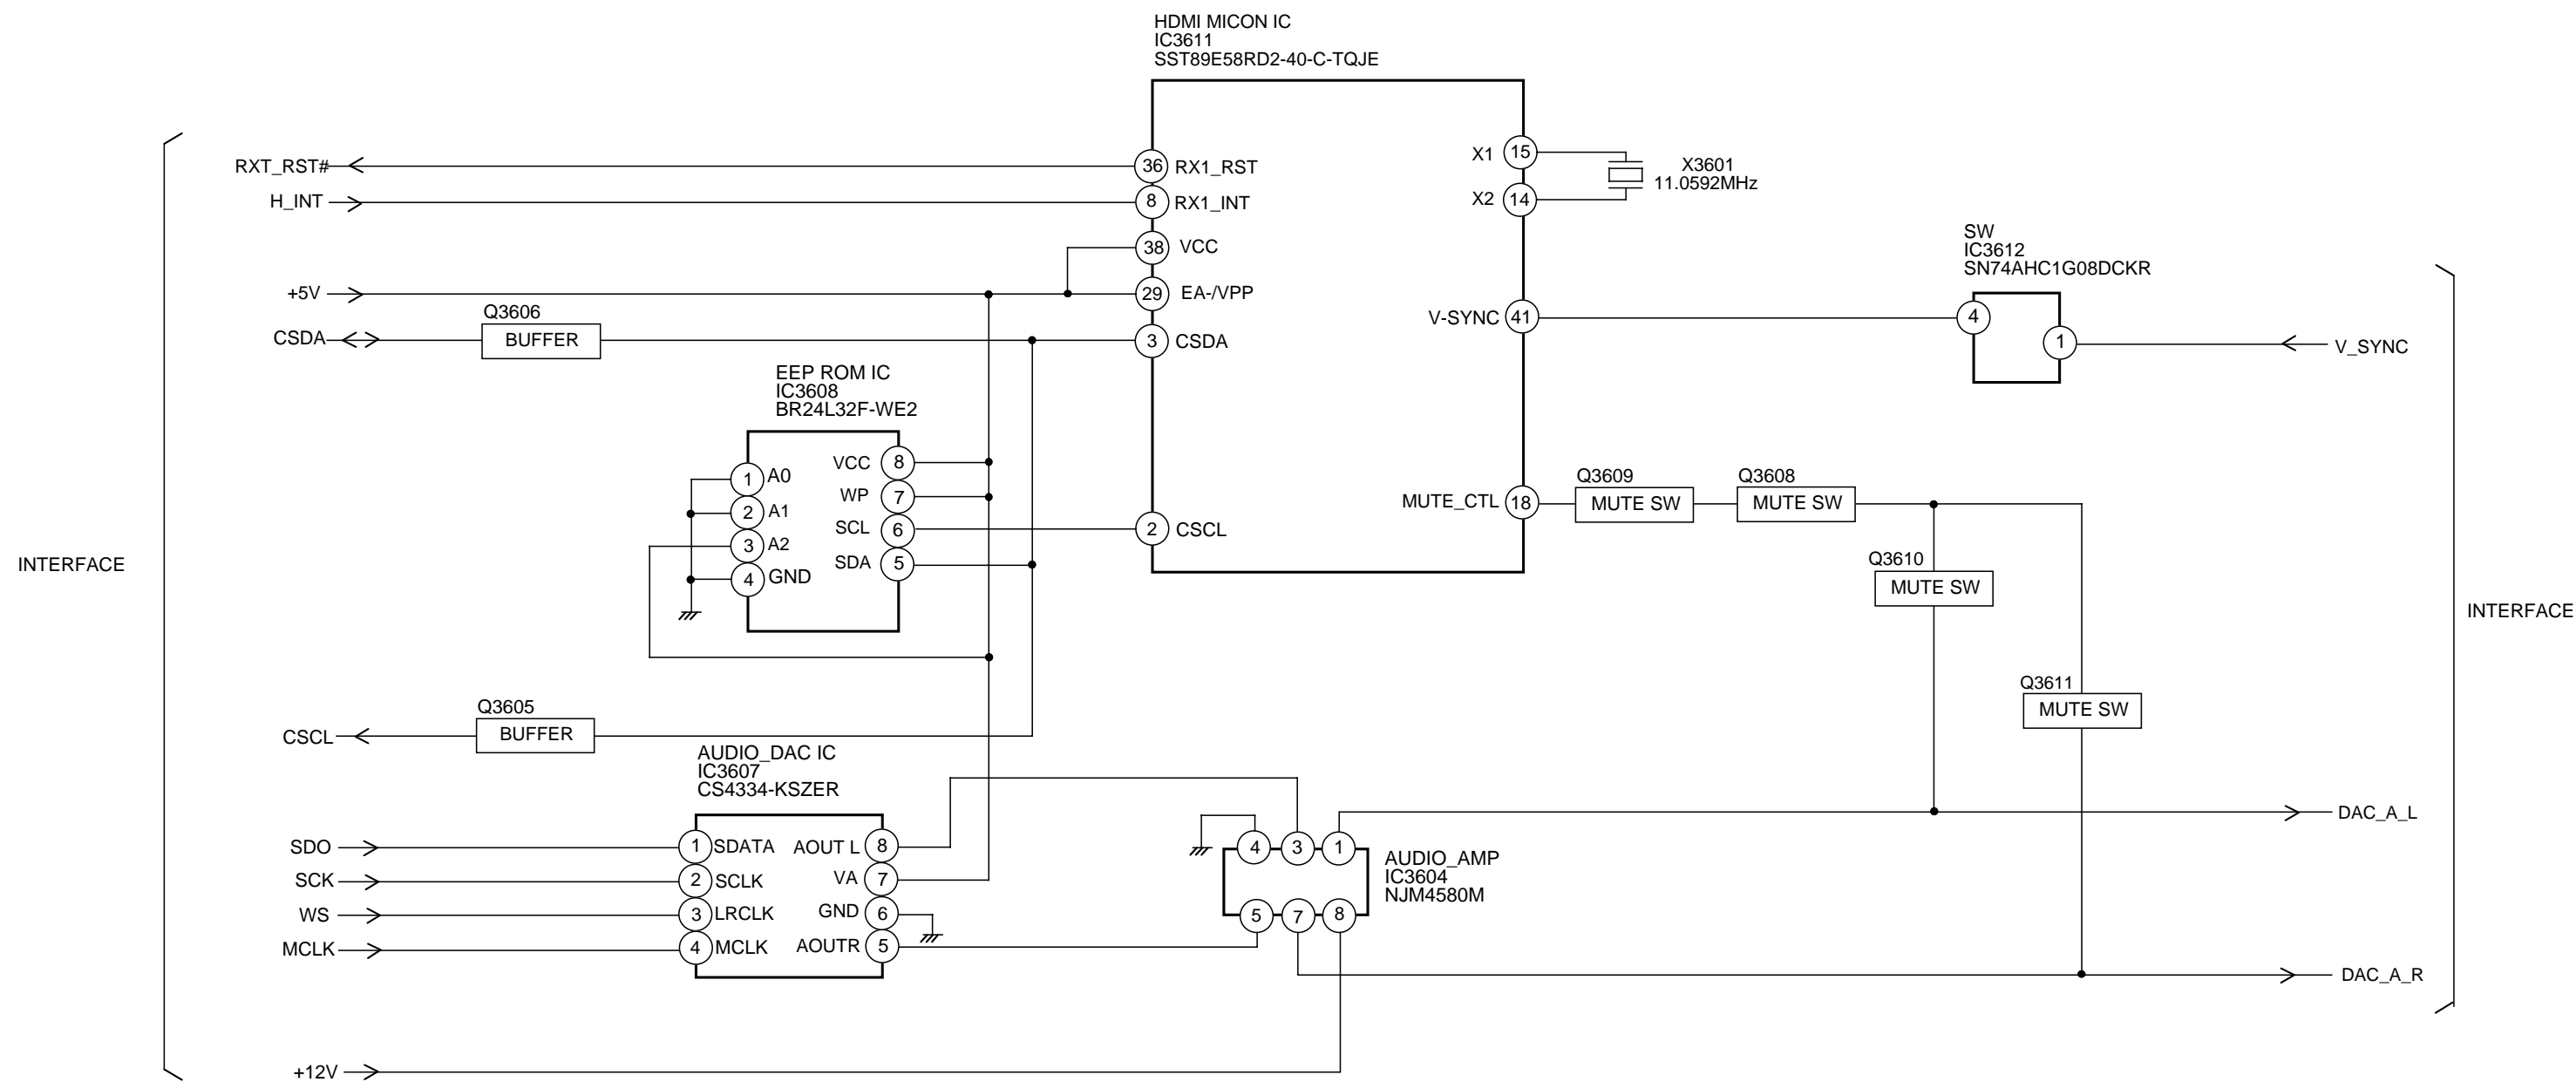

SCALER BLOCK DIAGRAM

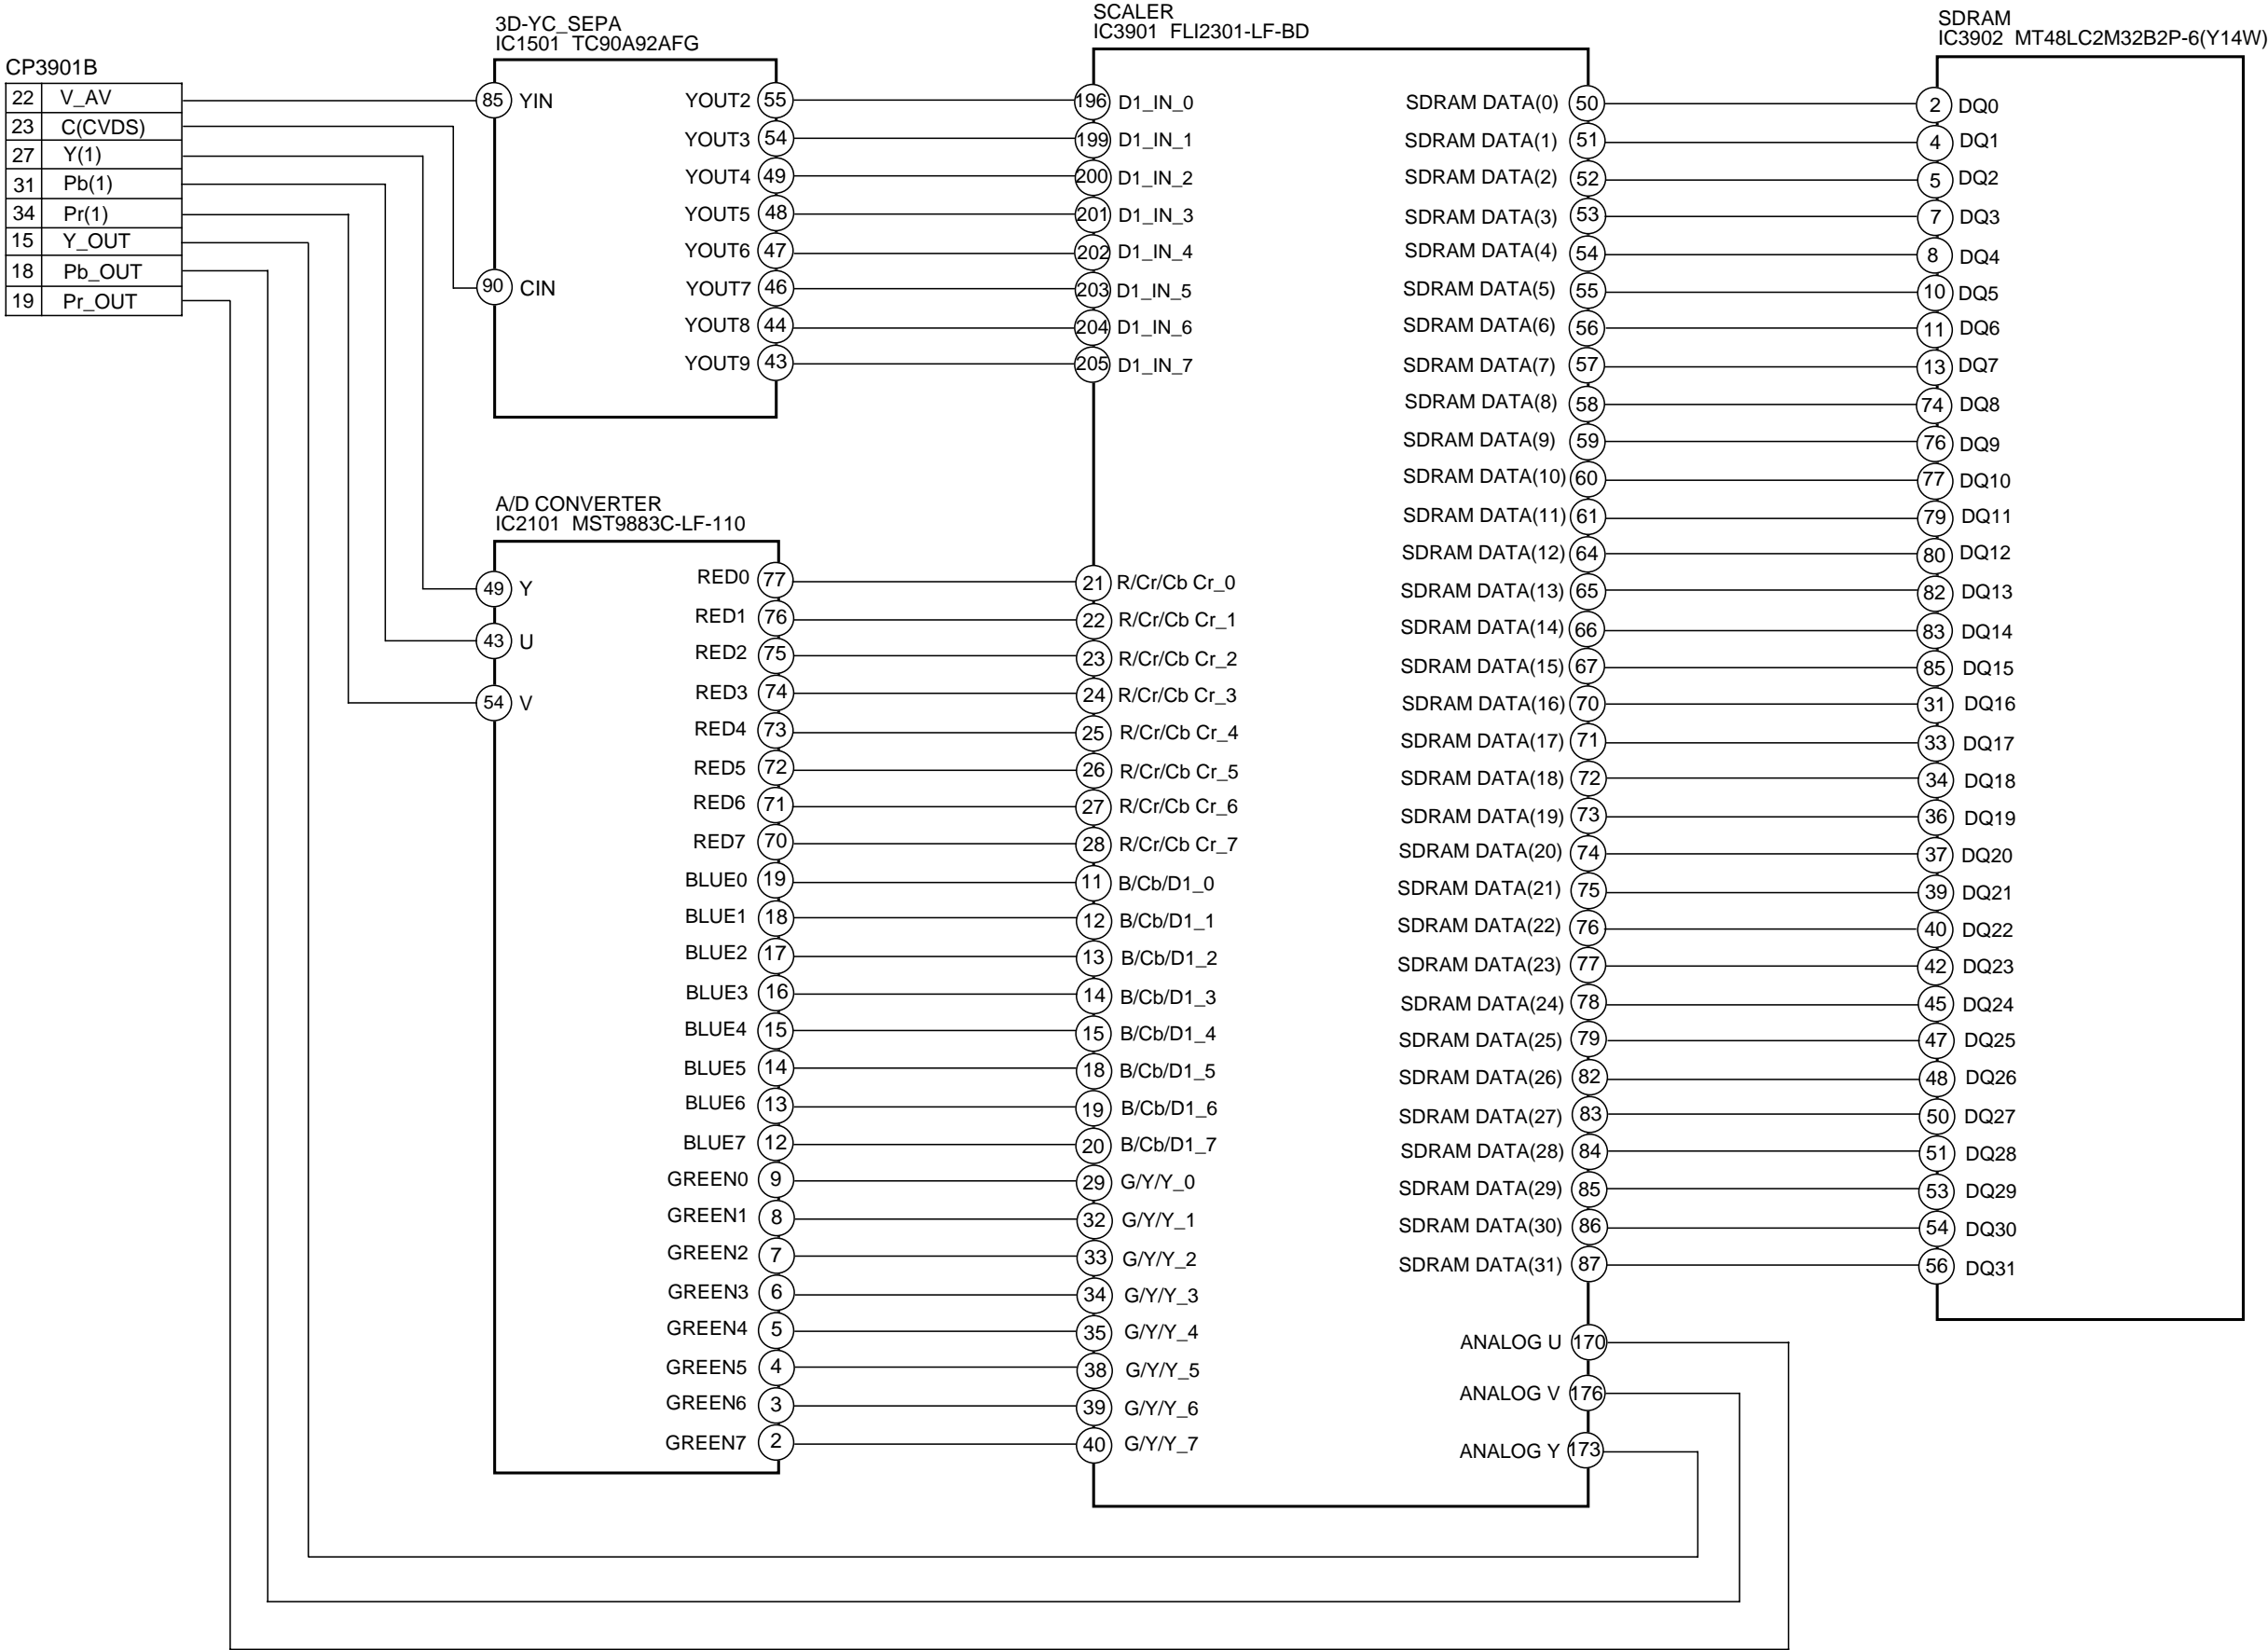

**PRINTED CIRCUIT BOARDS  
MAIN (CHIP MOUNTED PARTS)  
SOLDER SIDE**

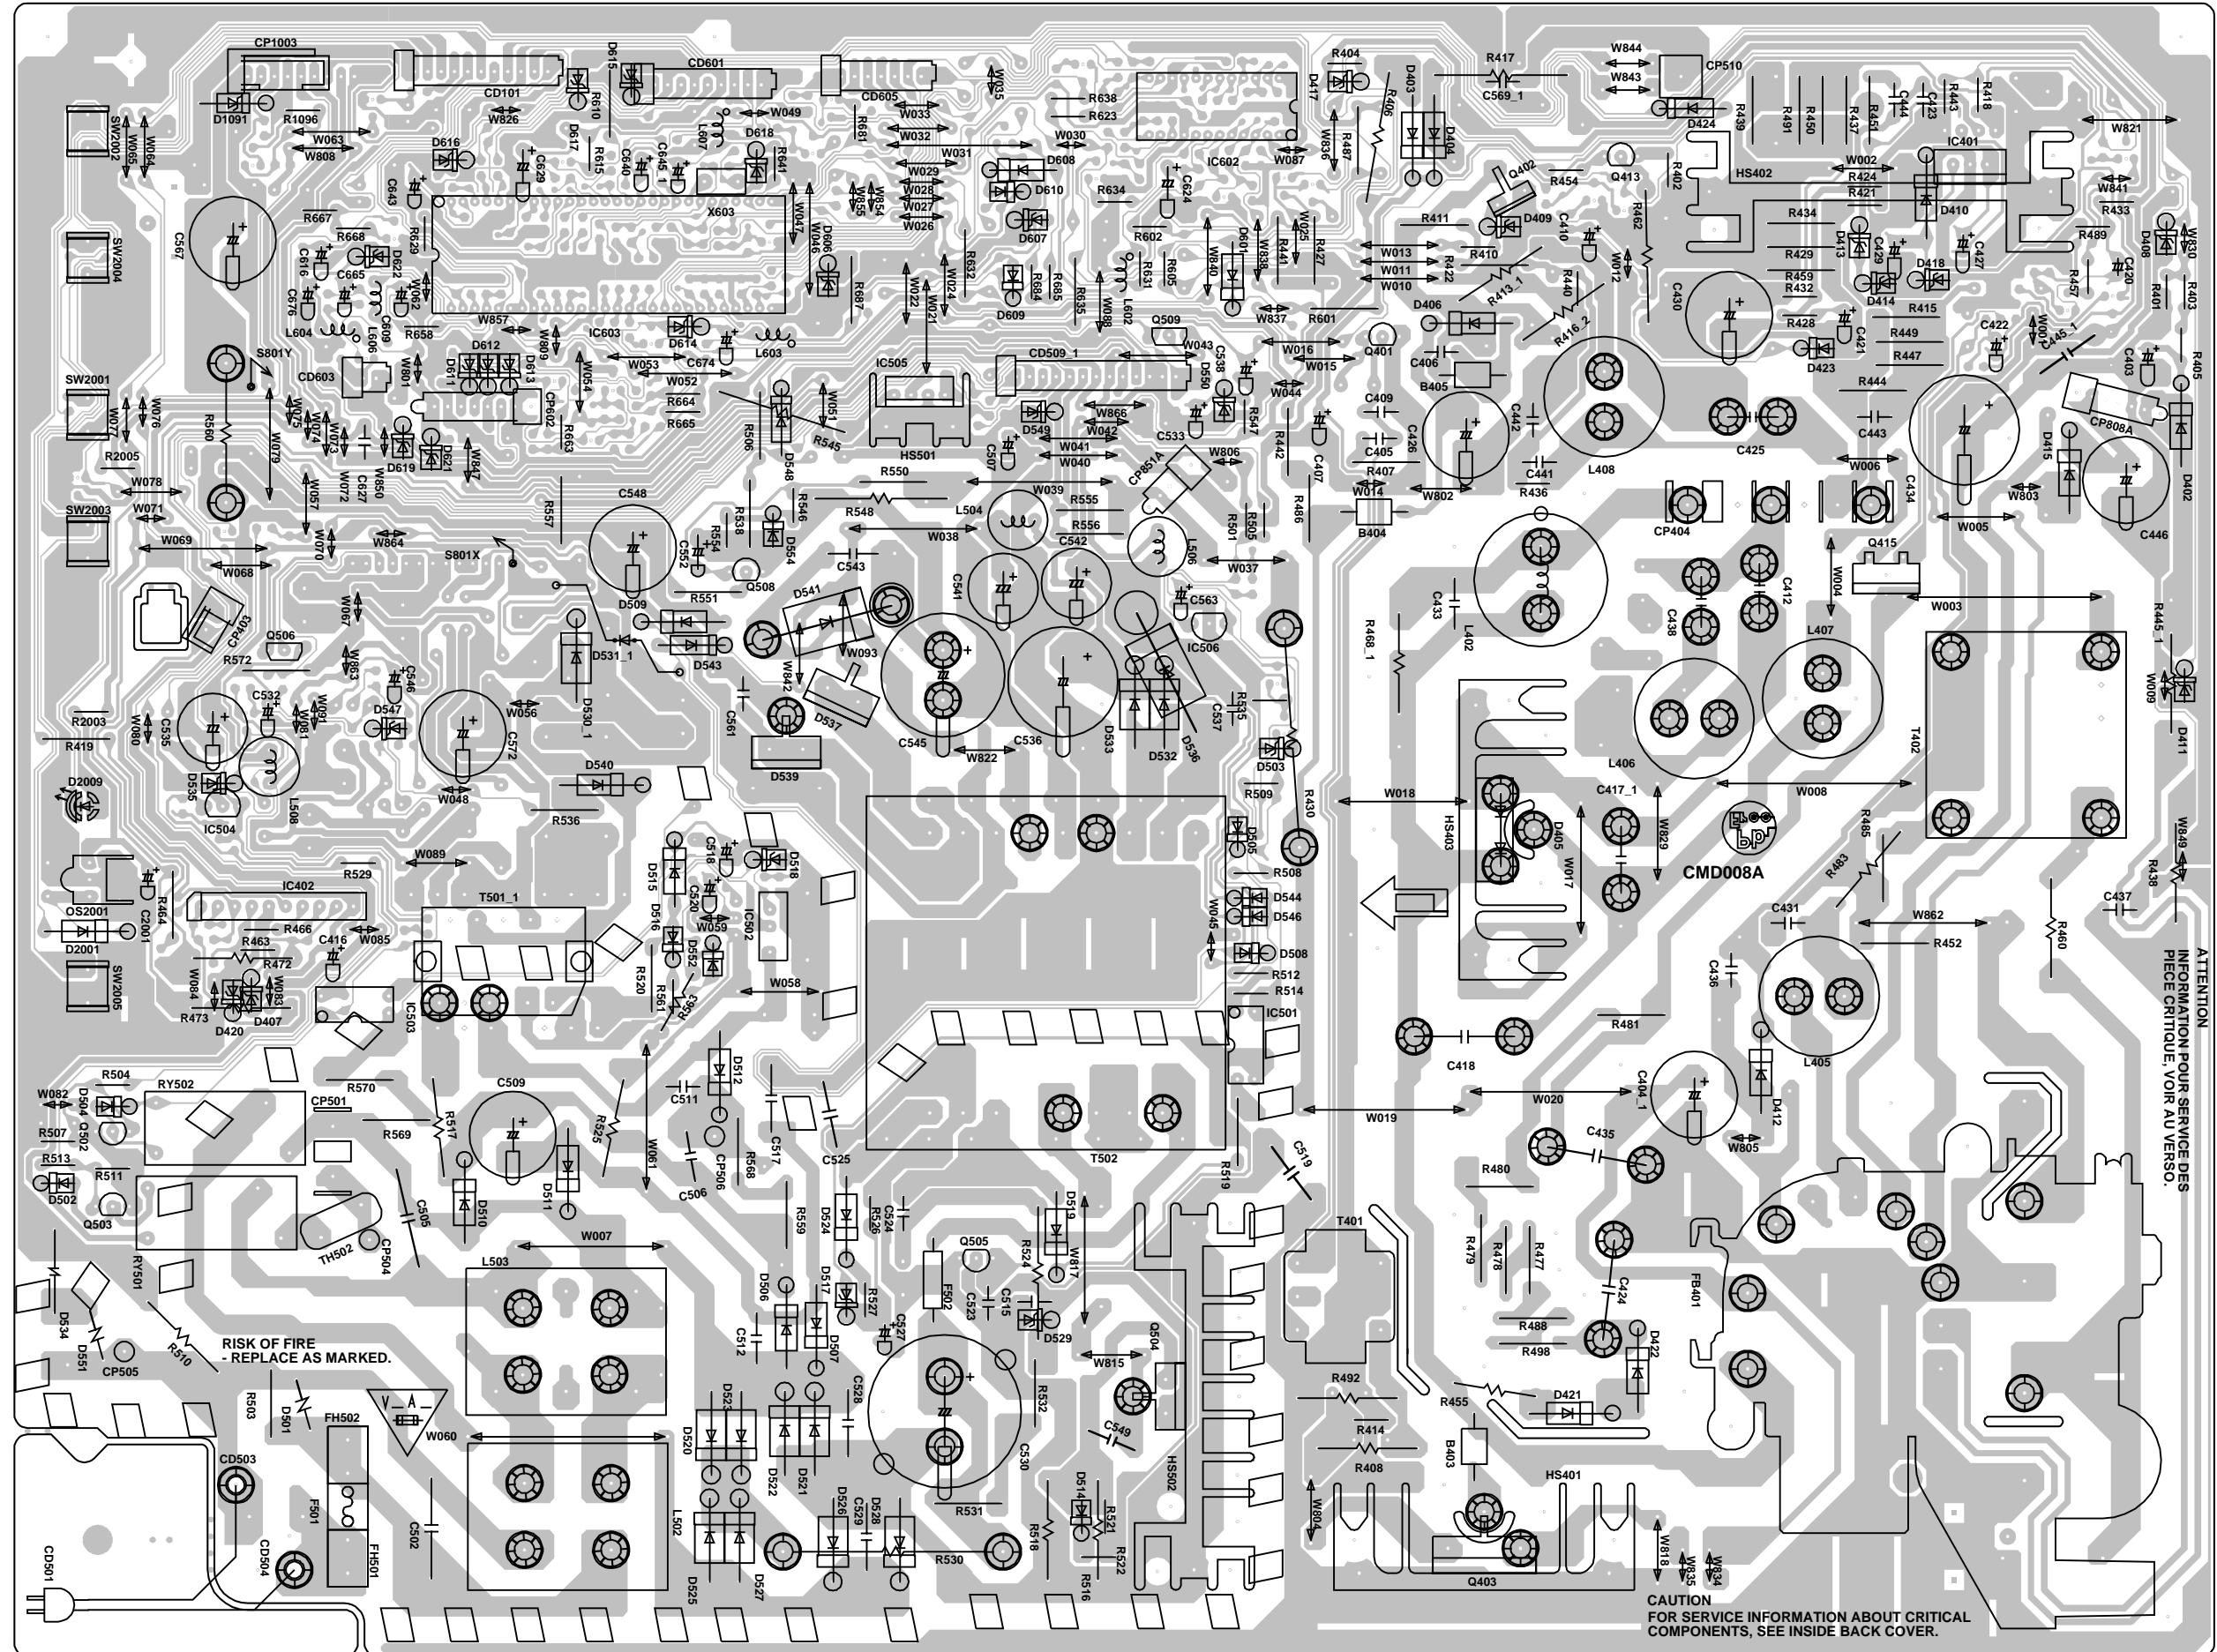


ATTENTION  
INFORMATION POUR SERVICE DES  
PIECE CRITIQUE, VOIR AU VERSO.


CAUTION  
FOR SERVICE INFORMATION ABOUT CRITICAL  
COMPONENTS, SEE INSIDE BACK COVER.

This image shows a detailed grayscale layout of a printed circuit board (PCB). The board is populated with a complex network of white traces on a dark gray background. Numerous components are labeled with alphanumeric codes, including resistors (R), capacitors (C), and integrated circuits (U). The layout is symmetrical and highly organized, with components distributed across the board. The text "CMD008A" is visible in the upper left quadrant.

### AV (CHIP MOUNTED PARTS) SOLDER SIDE

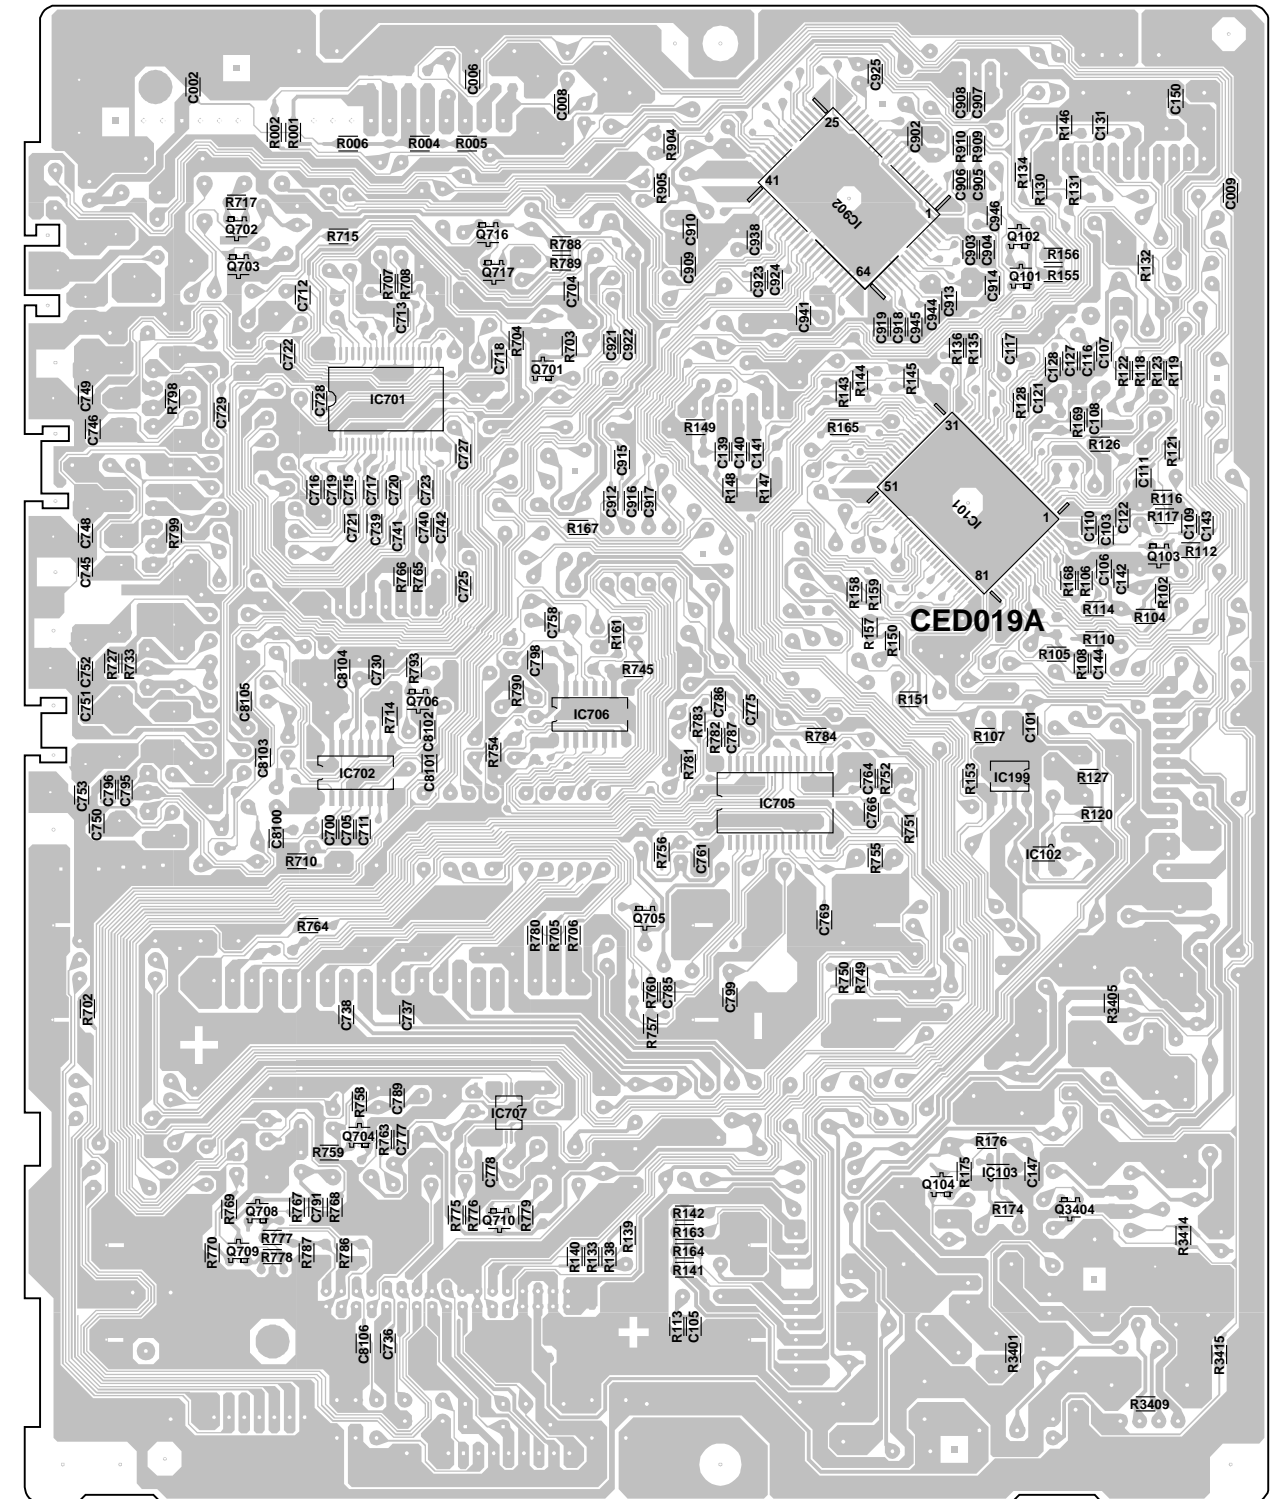


## HD-MI (TOP SIDE)

 




PRINTED CIRCUIT BOARDS

SCALER (TOP SIDE)

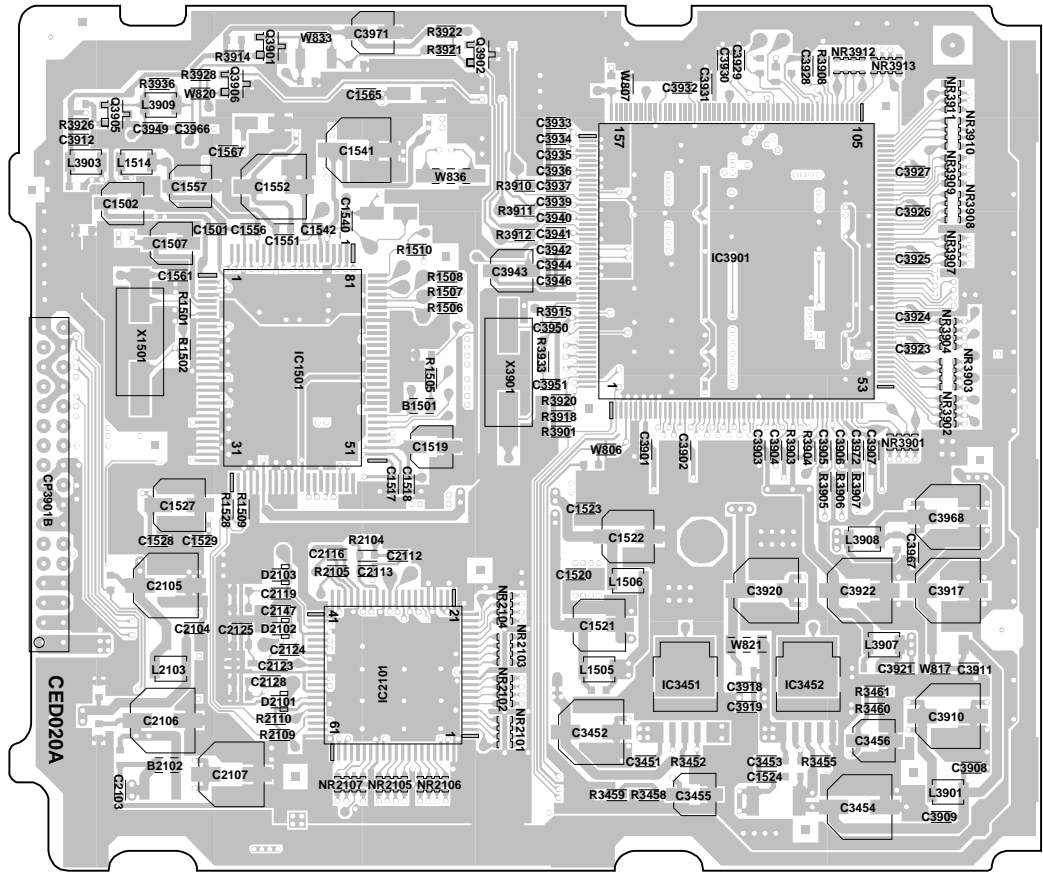


CHROMA/PROGRESSIVE/PIN SCHEMATIC DIAGRAM (MAIN PCB)

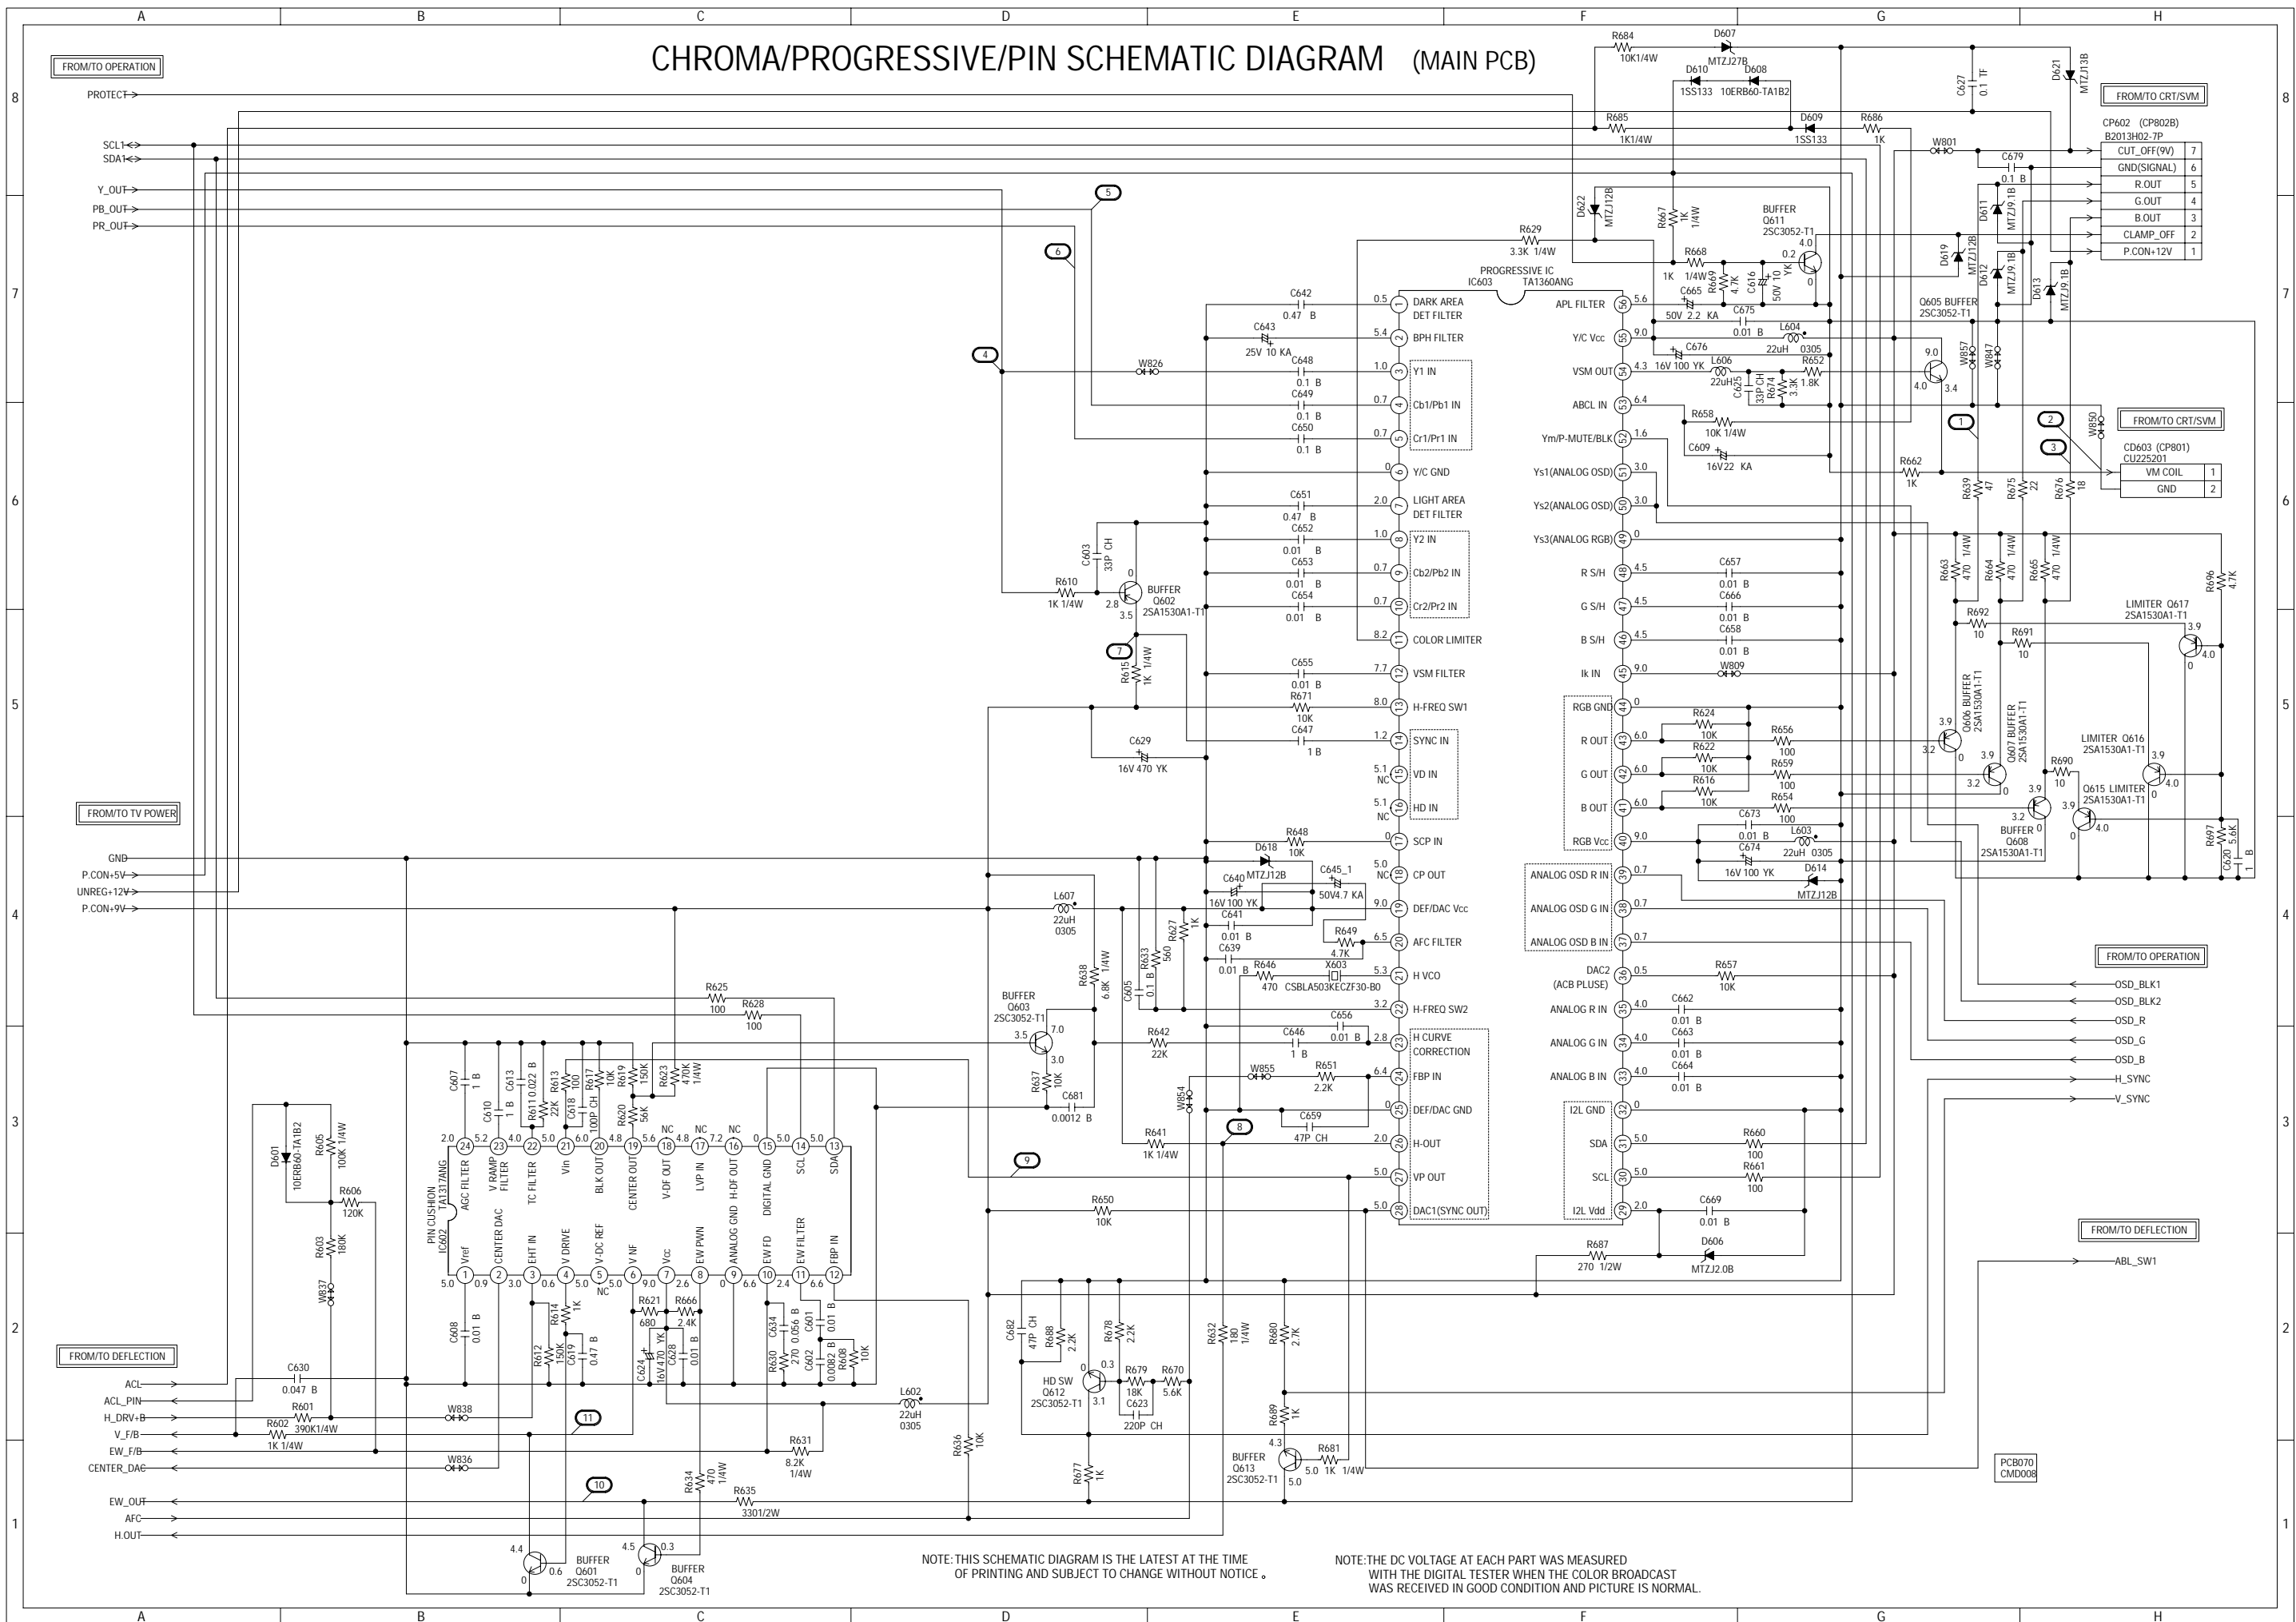



# DEFLECTION SCHEMATIC DIAGRAM (MAINPCB)

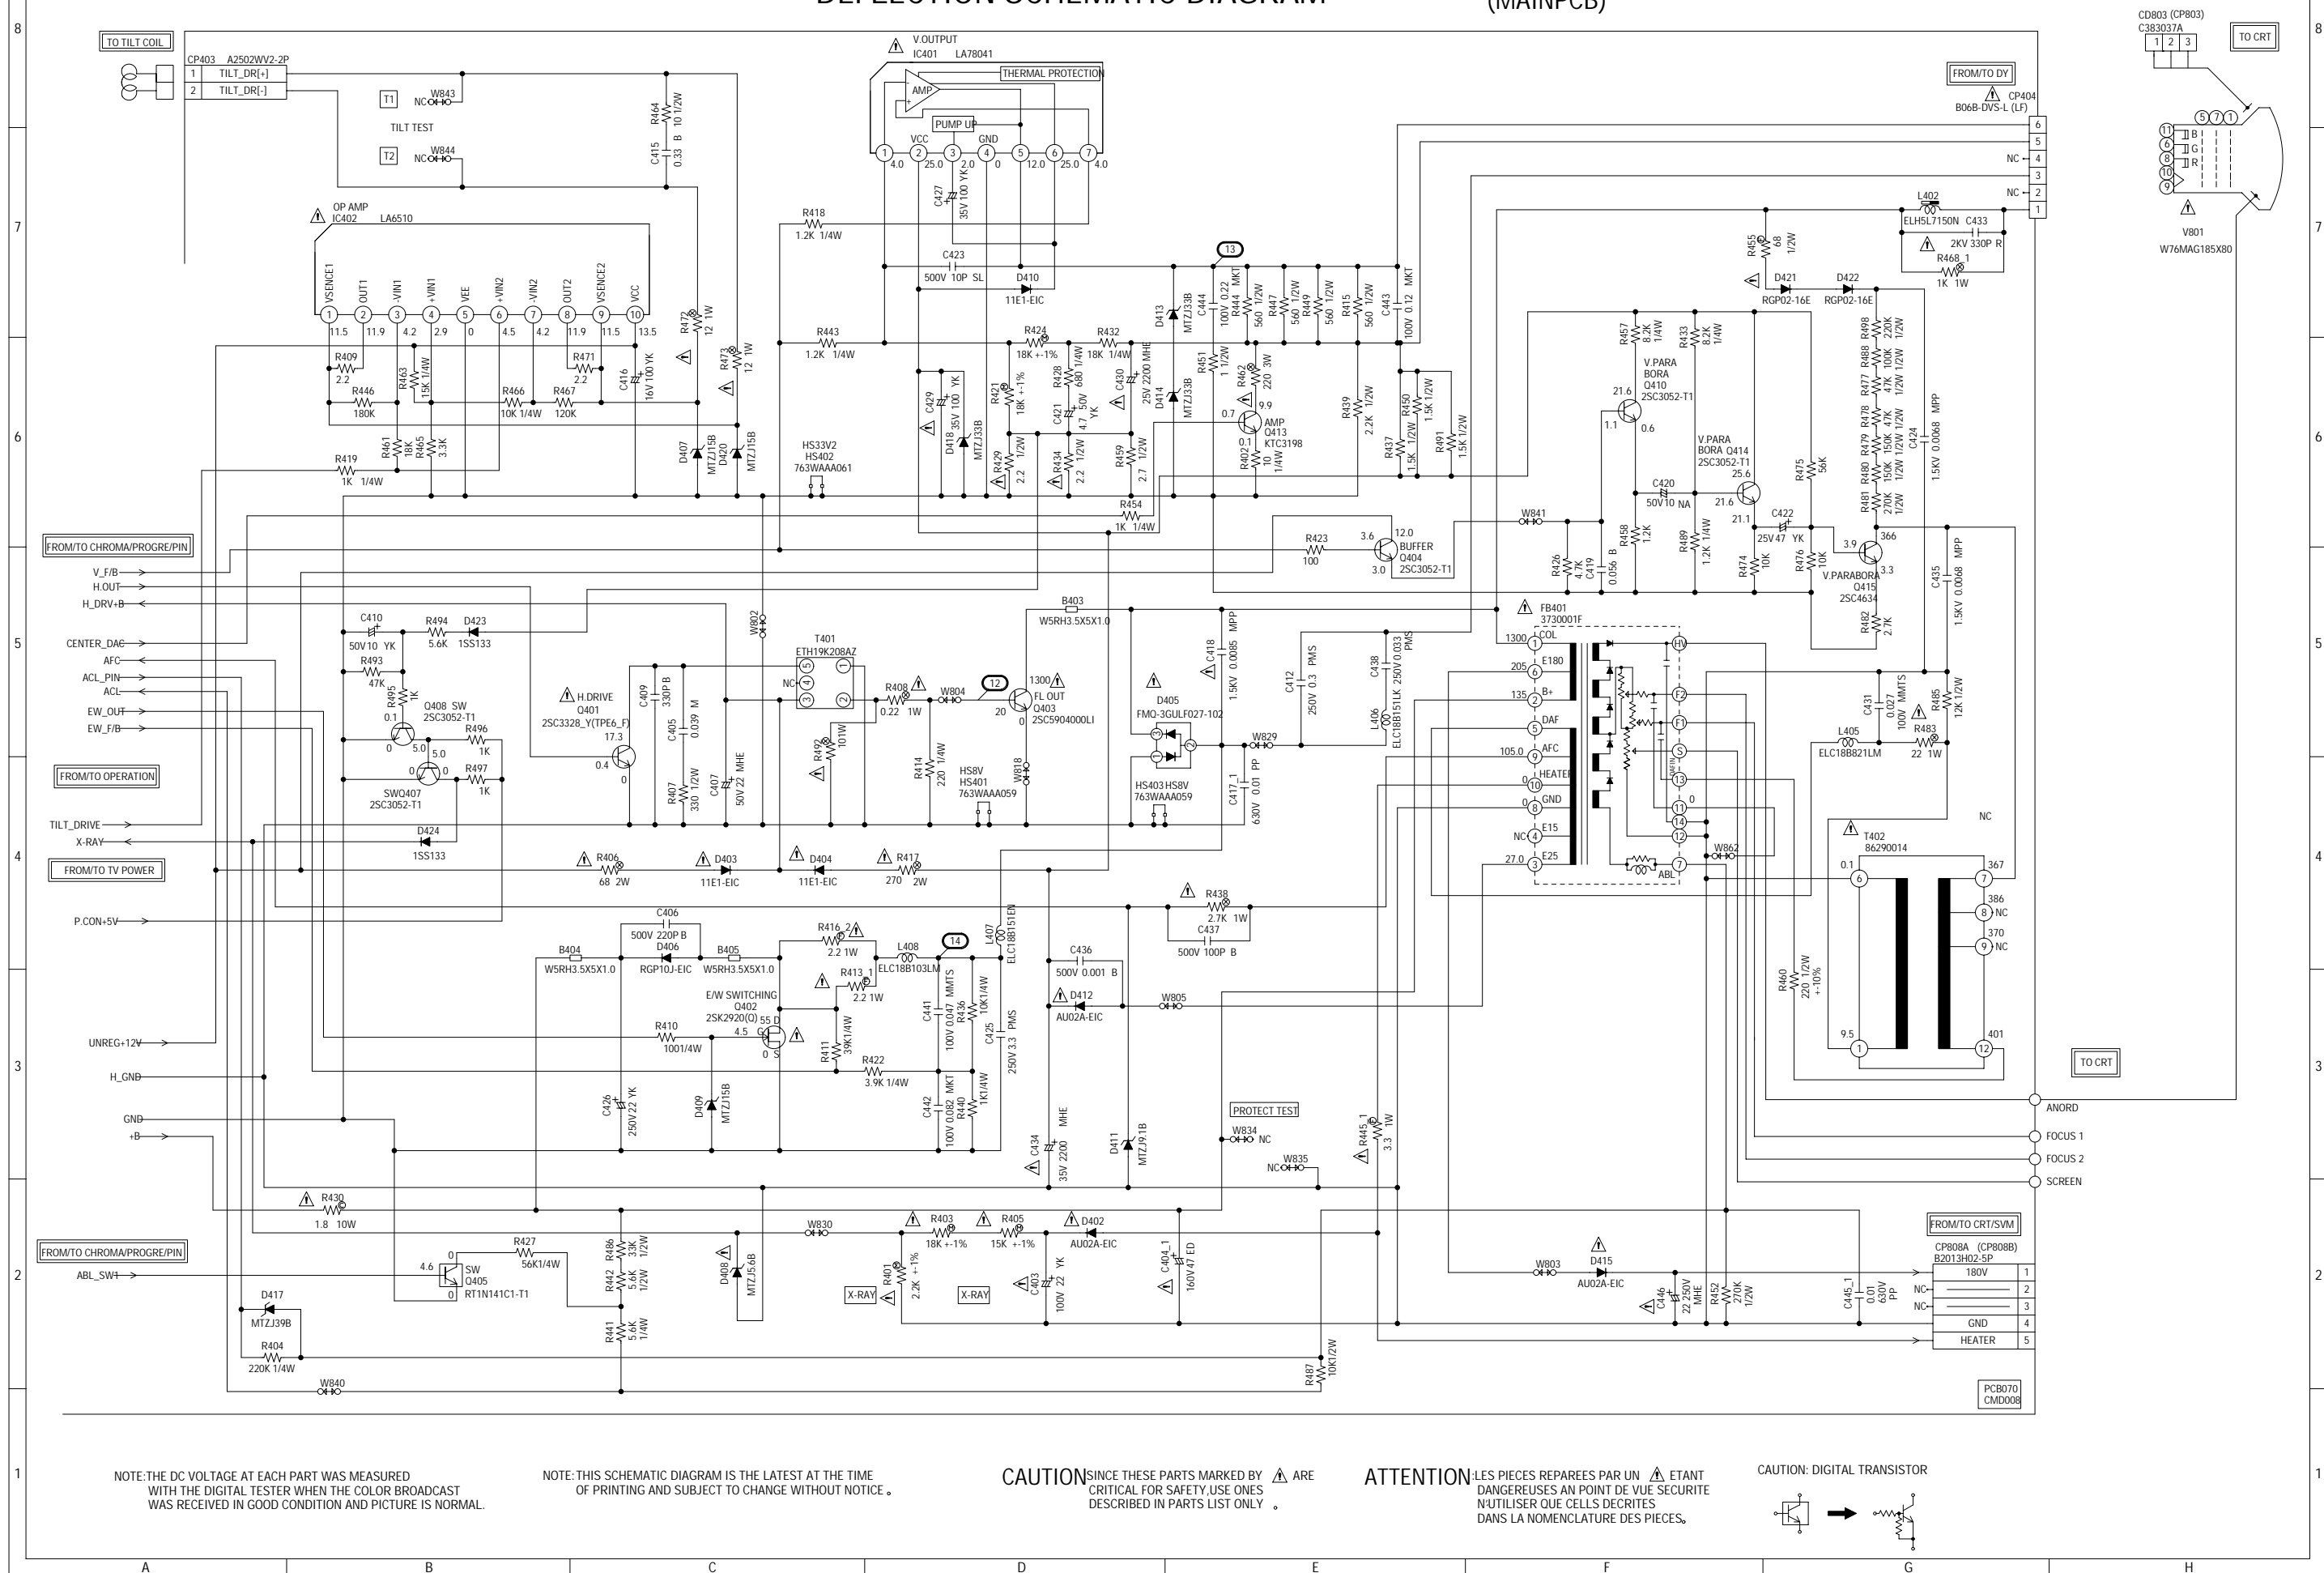

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


**CAUTION** SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

**ATTENTION** LES PIECES REPARÉES PAR UN ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ, N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: DIGITAL TRANSISTOR



# TV POWER SCHEMATIC DIAGRAM (MAIN PCB)

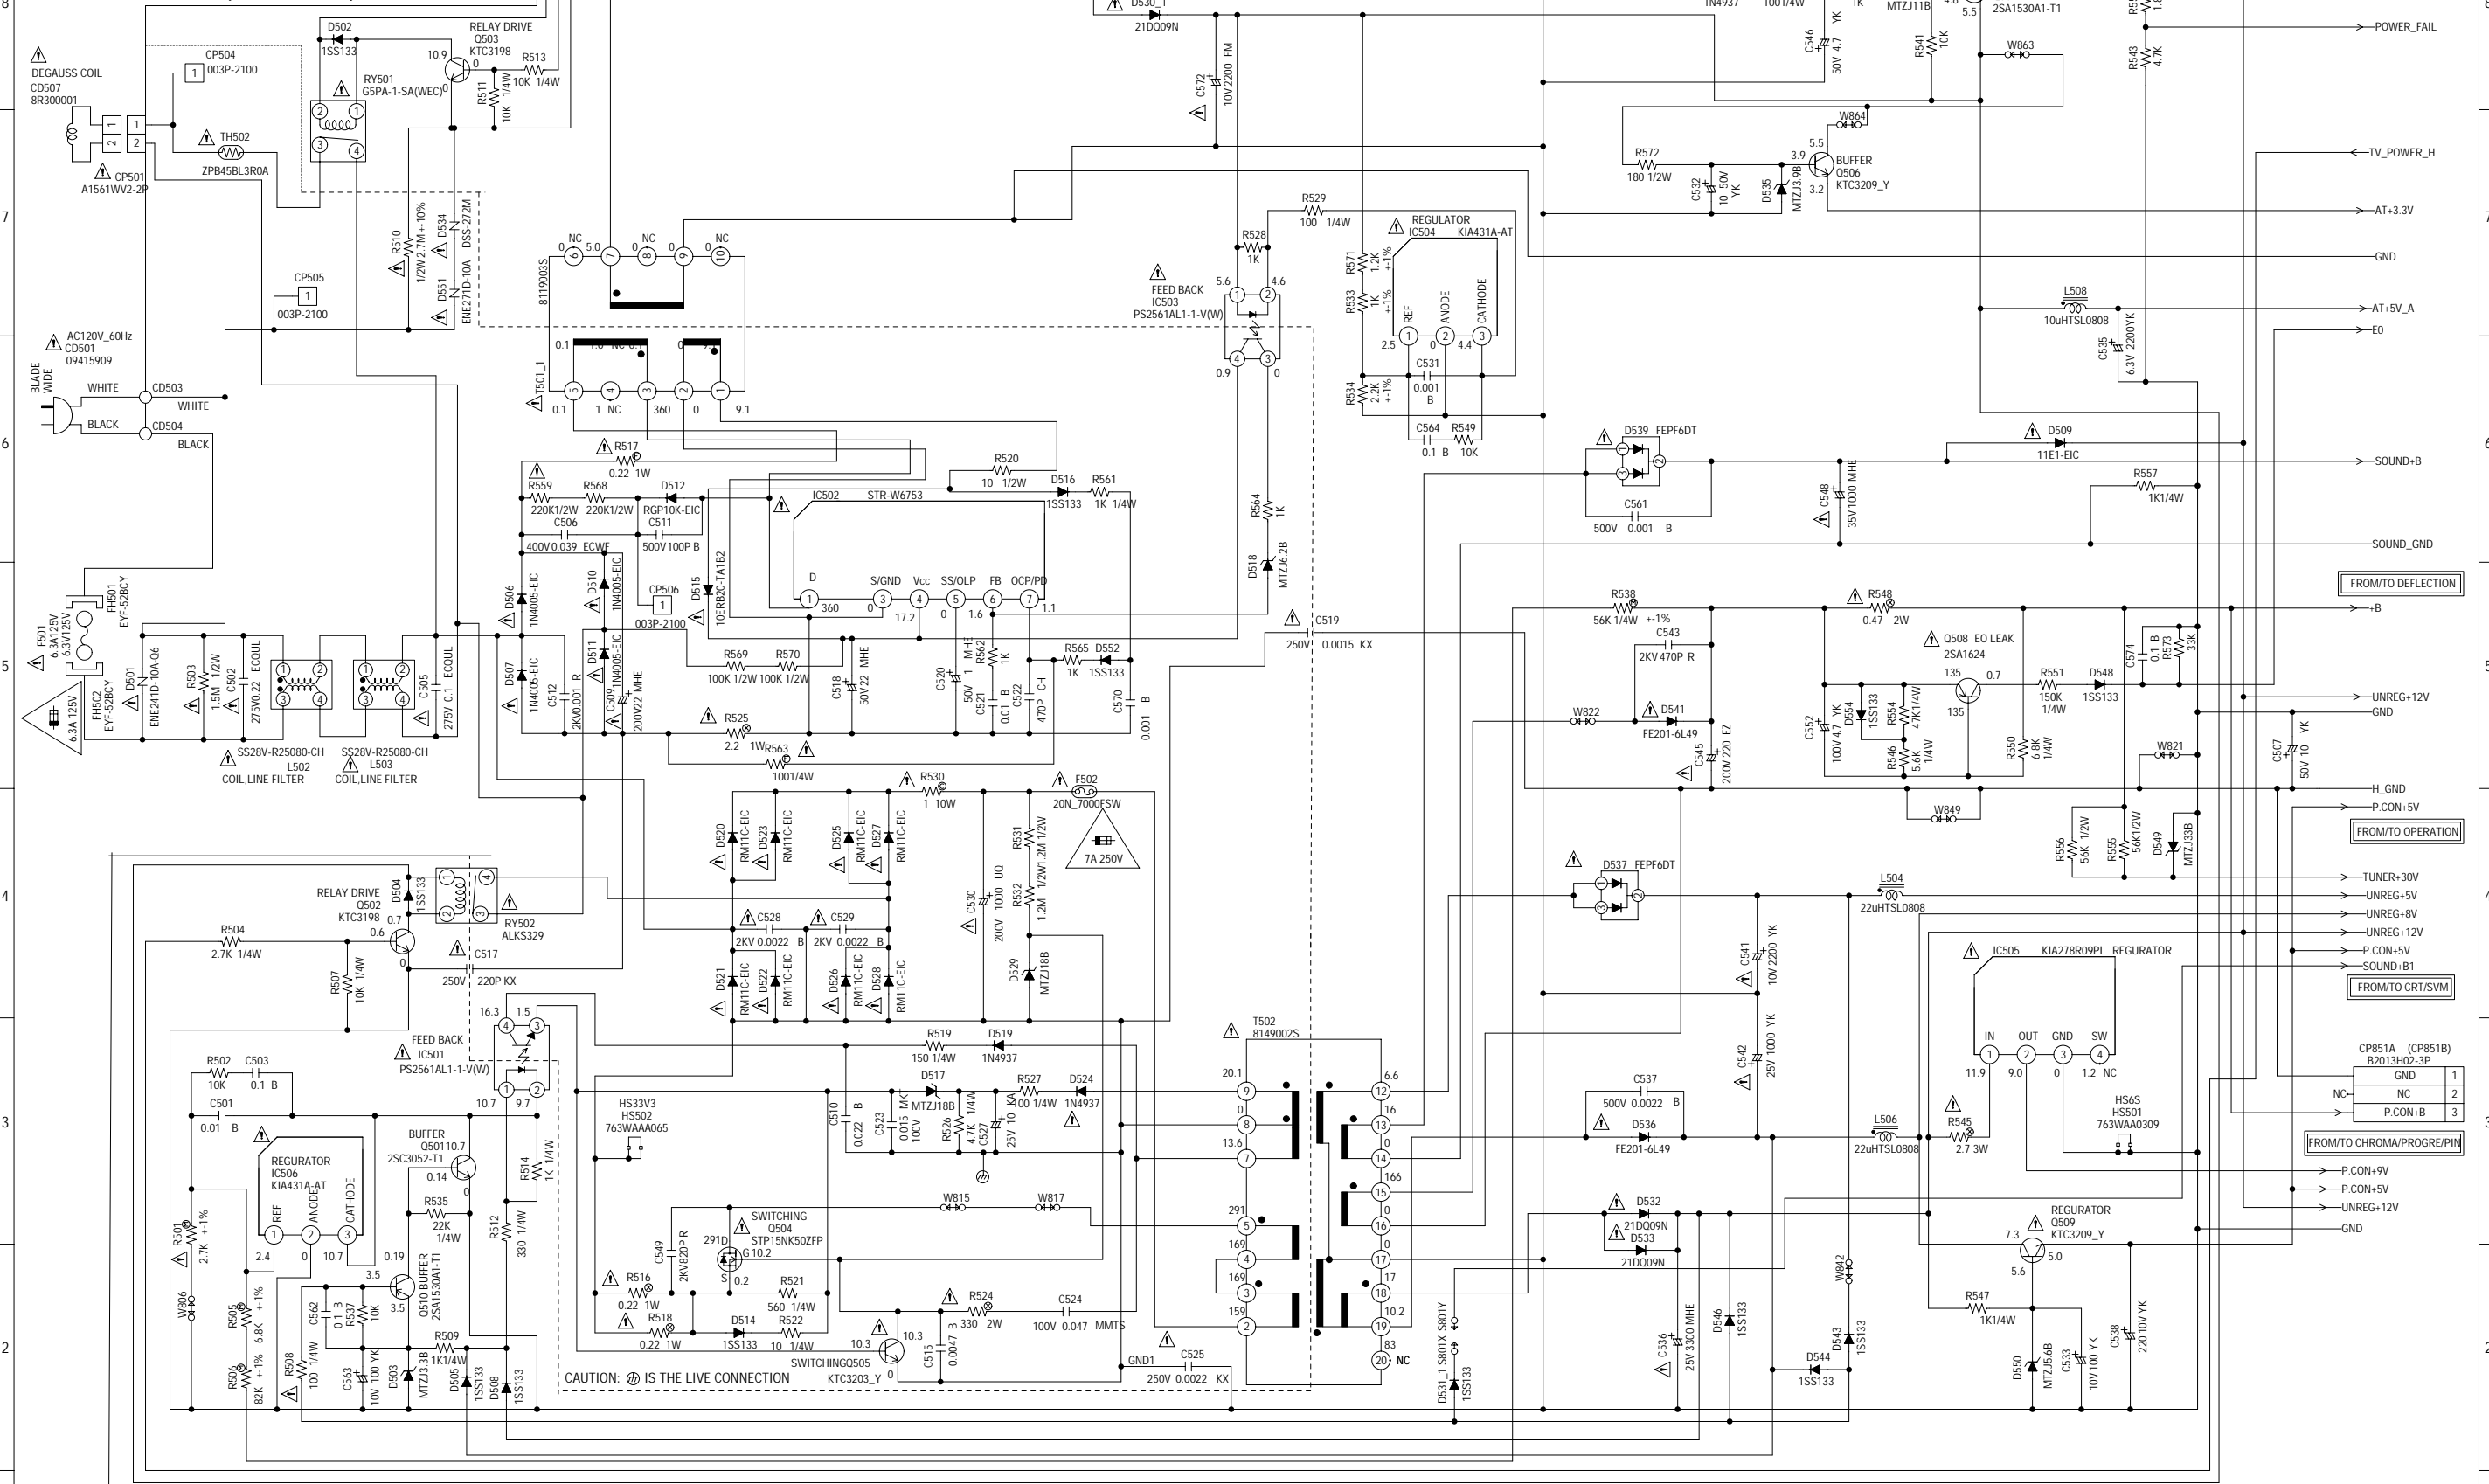

**CAUTION** FOR CONTINUED PROTECTION AGAINST FIRE HAZARD,  
REPLACE ONLY WITH THE SAME TYPE FUSE 6.3A 125V(F501)  
AND 7A 250V(F502)

**ATTENTION** POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE  
N'UTILISER QUE DES FUSIBLE DE MEME TYPE 6.3A 125V (F501)  
ET 7A 250V(F502)

**CAUTION** F502 ARE MANUFACTURED BY SKYGATE CO.,LTD TYPE 20N


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED  
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST  
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.


**CAUTION** SINCE THESE PARTS MARKED BY ARE  
CRITICAL FOR SAFETY, USE ONES  
DESCRIBED IN PARTS LIST ONLY.

**ATTENTION** LES PIECES REPARÉES PAR UN ETANT  
DANGEREUSES AN POINT DE VUE SECURITE  
N'UTILISER QUE CELLES DECRITES  
DANS LA NOMENCLATURE DES PIECES.


NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR.  
THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP  
IS NON POLAR ONE.

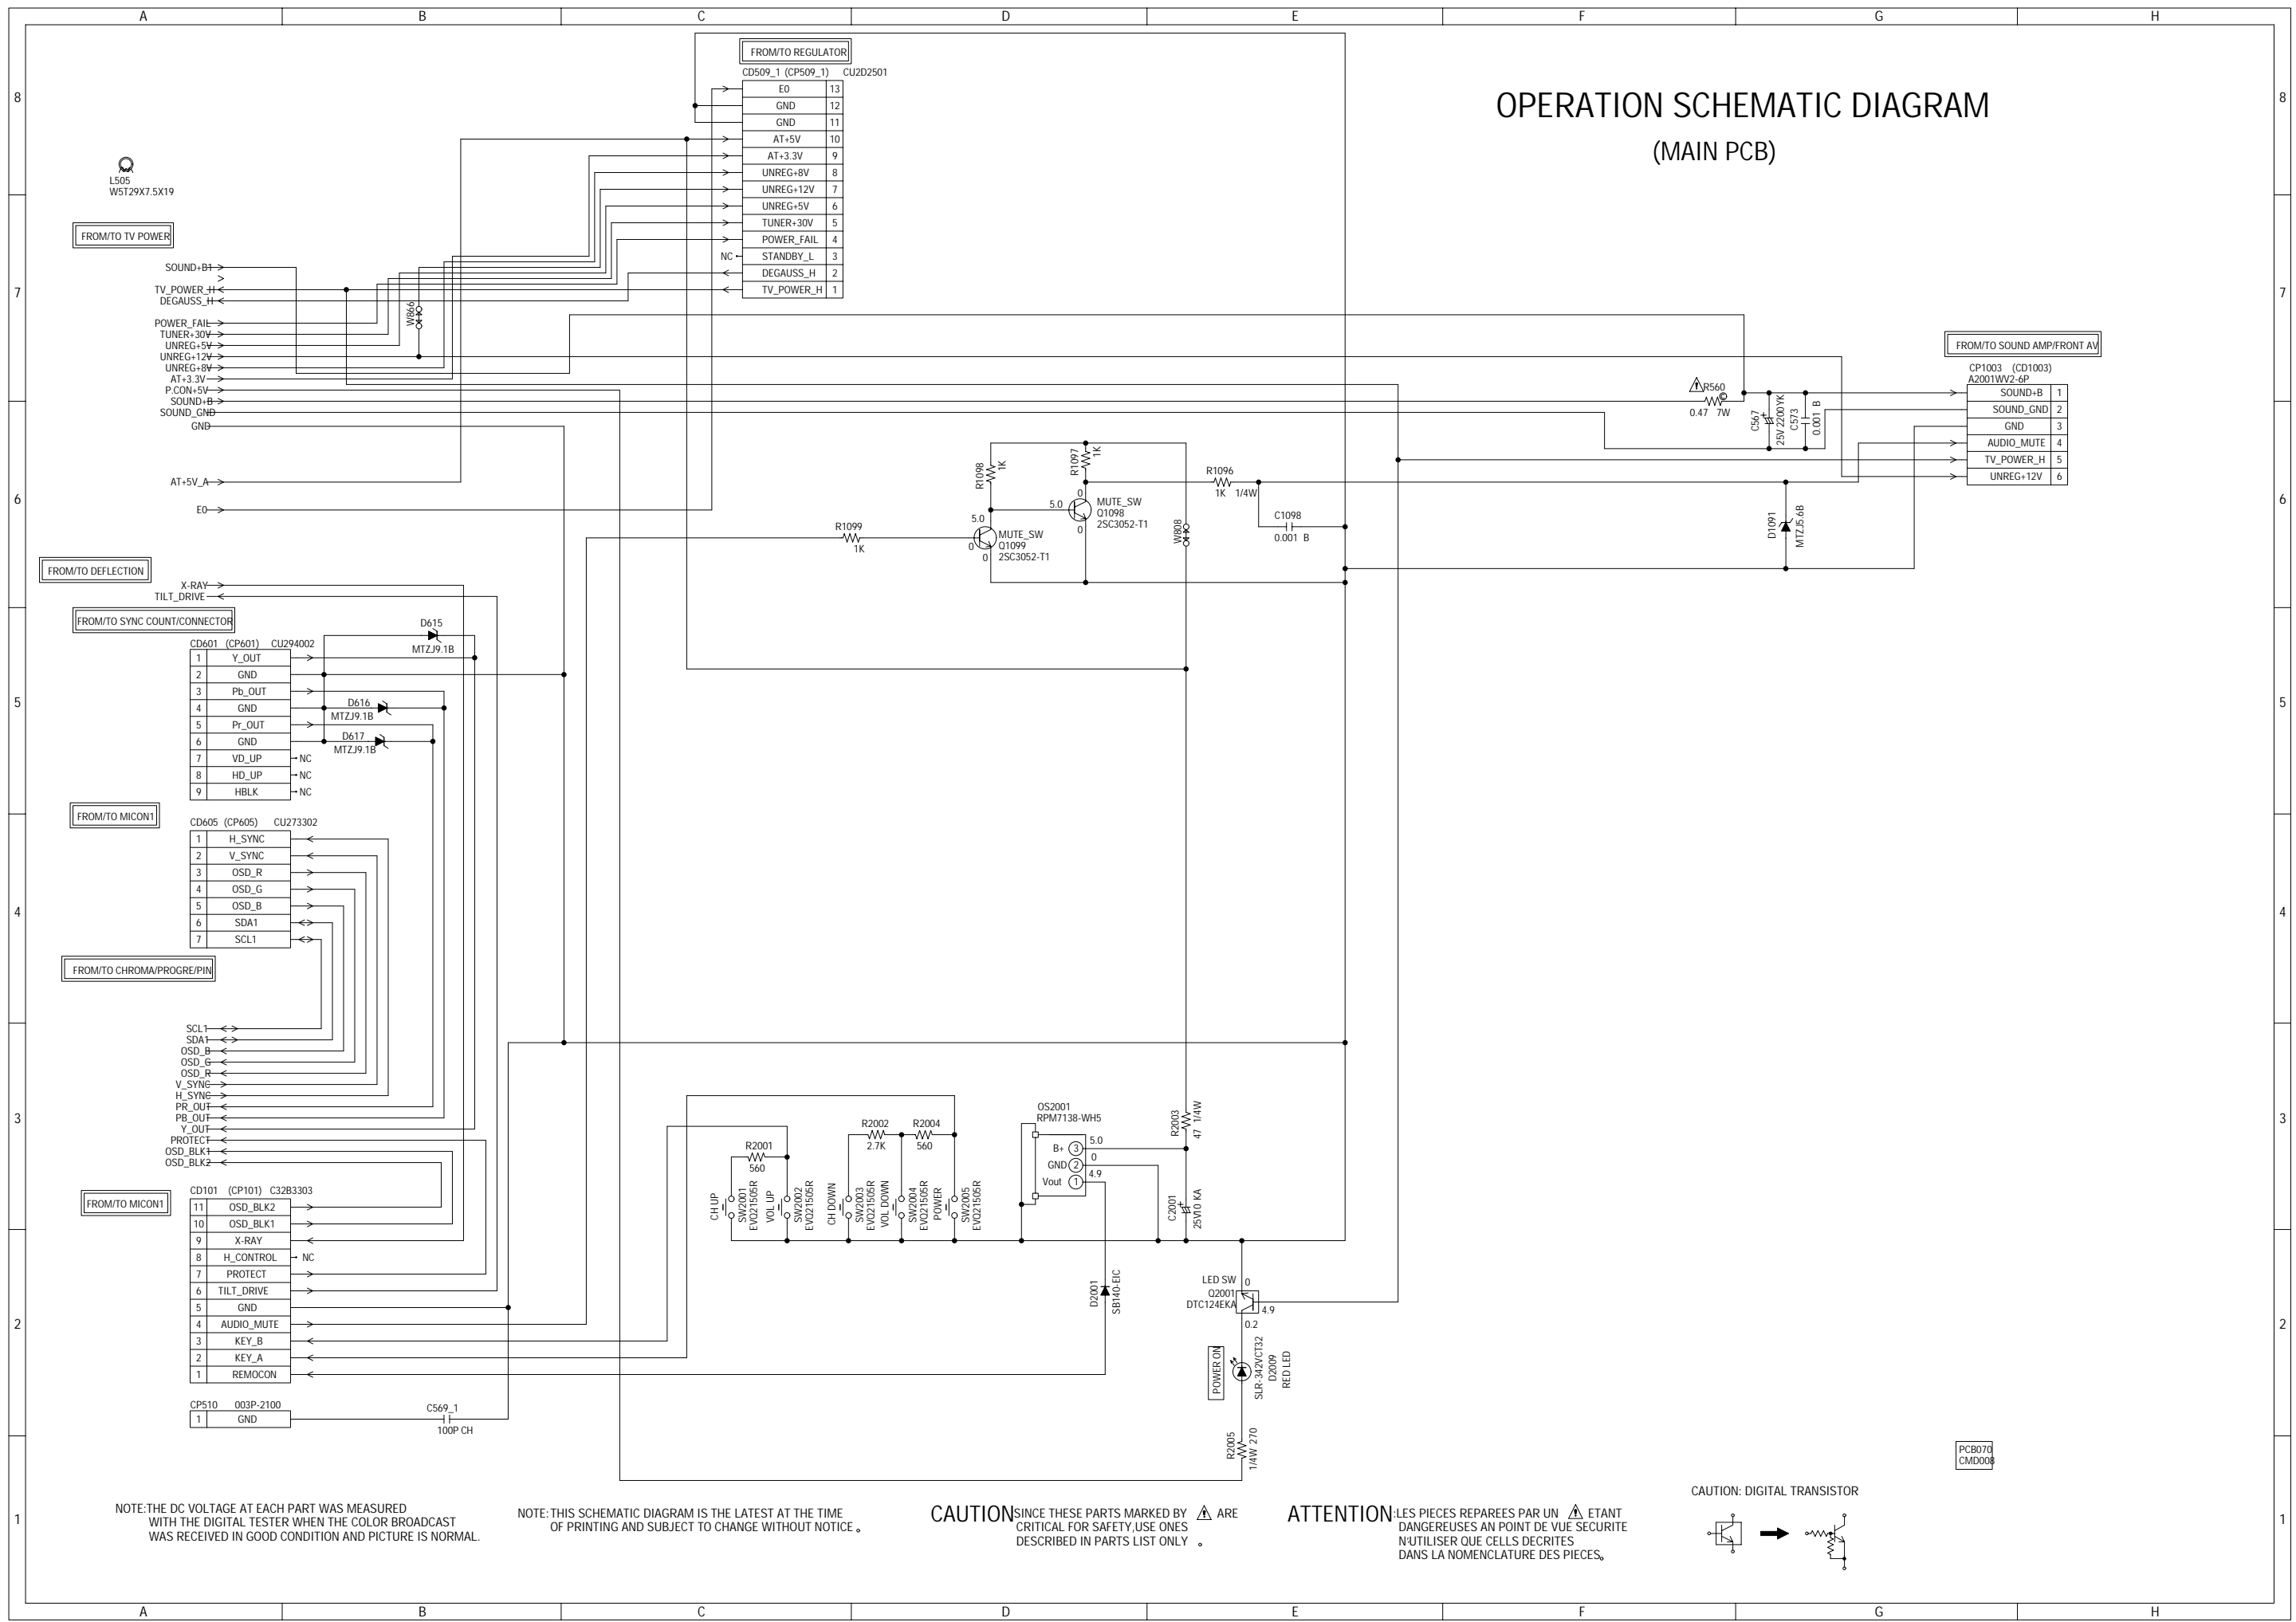

# MICON1 SCHEMATIC DIAGRAM (AV PCB)

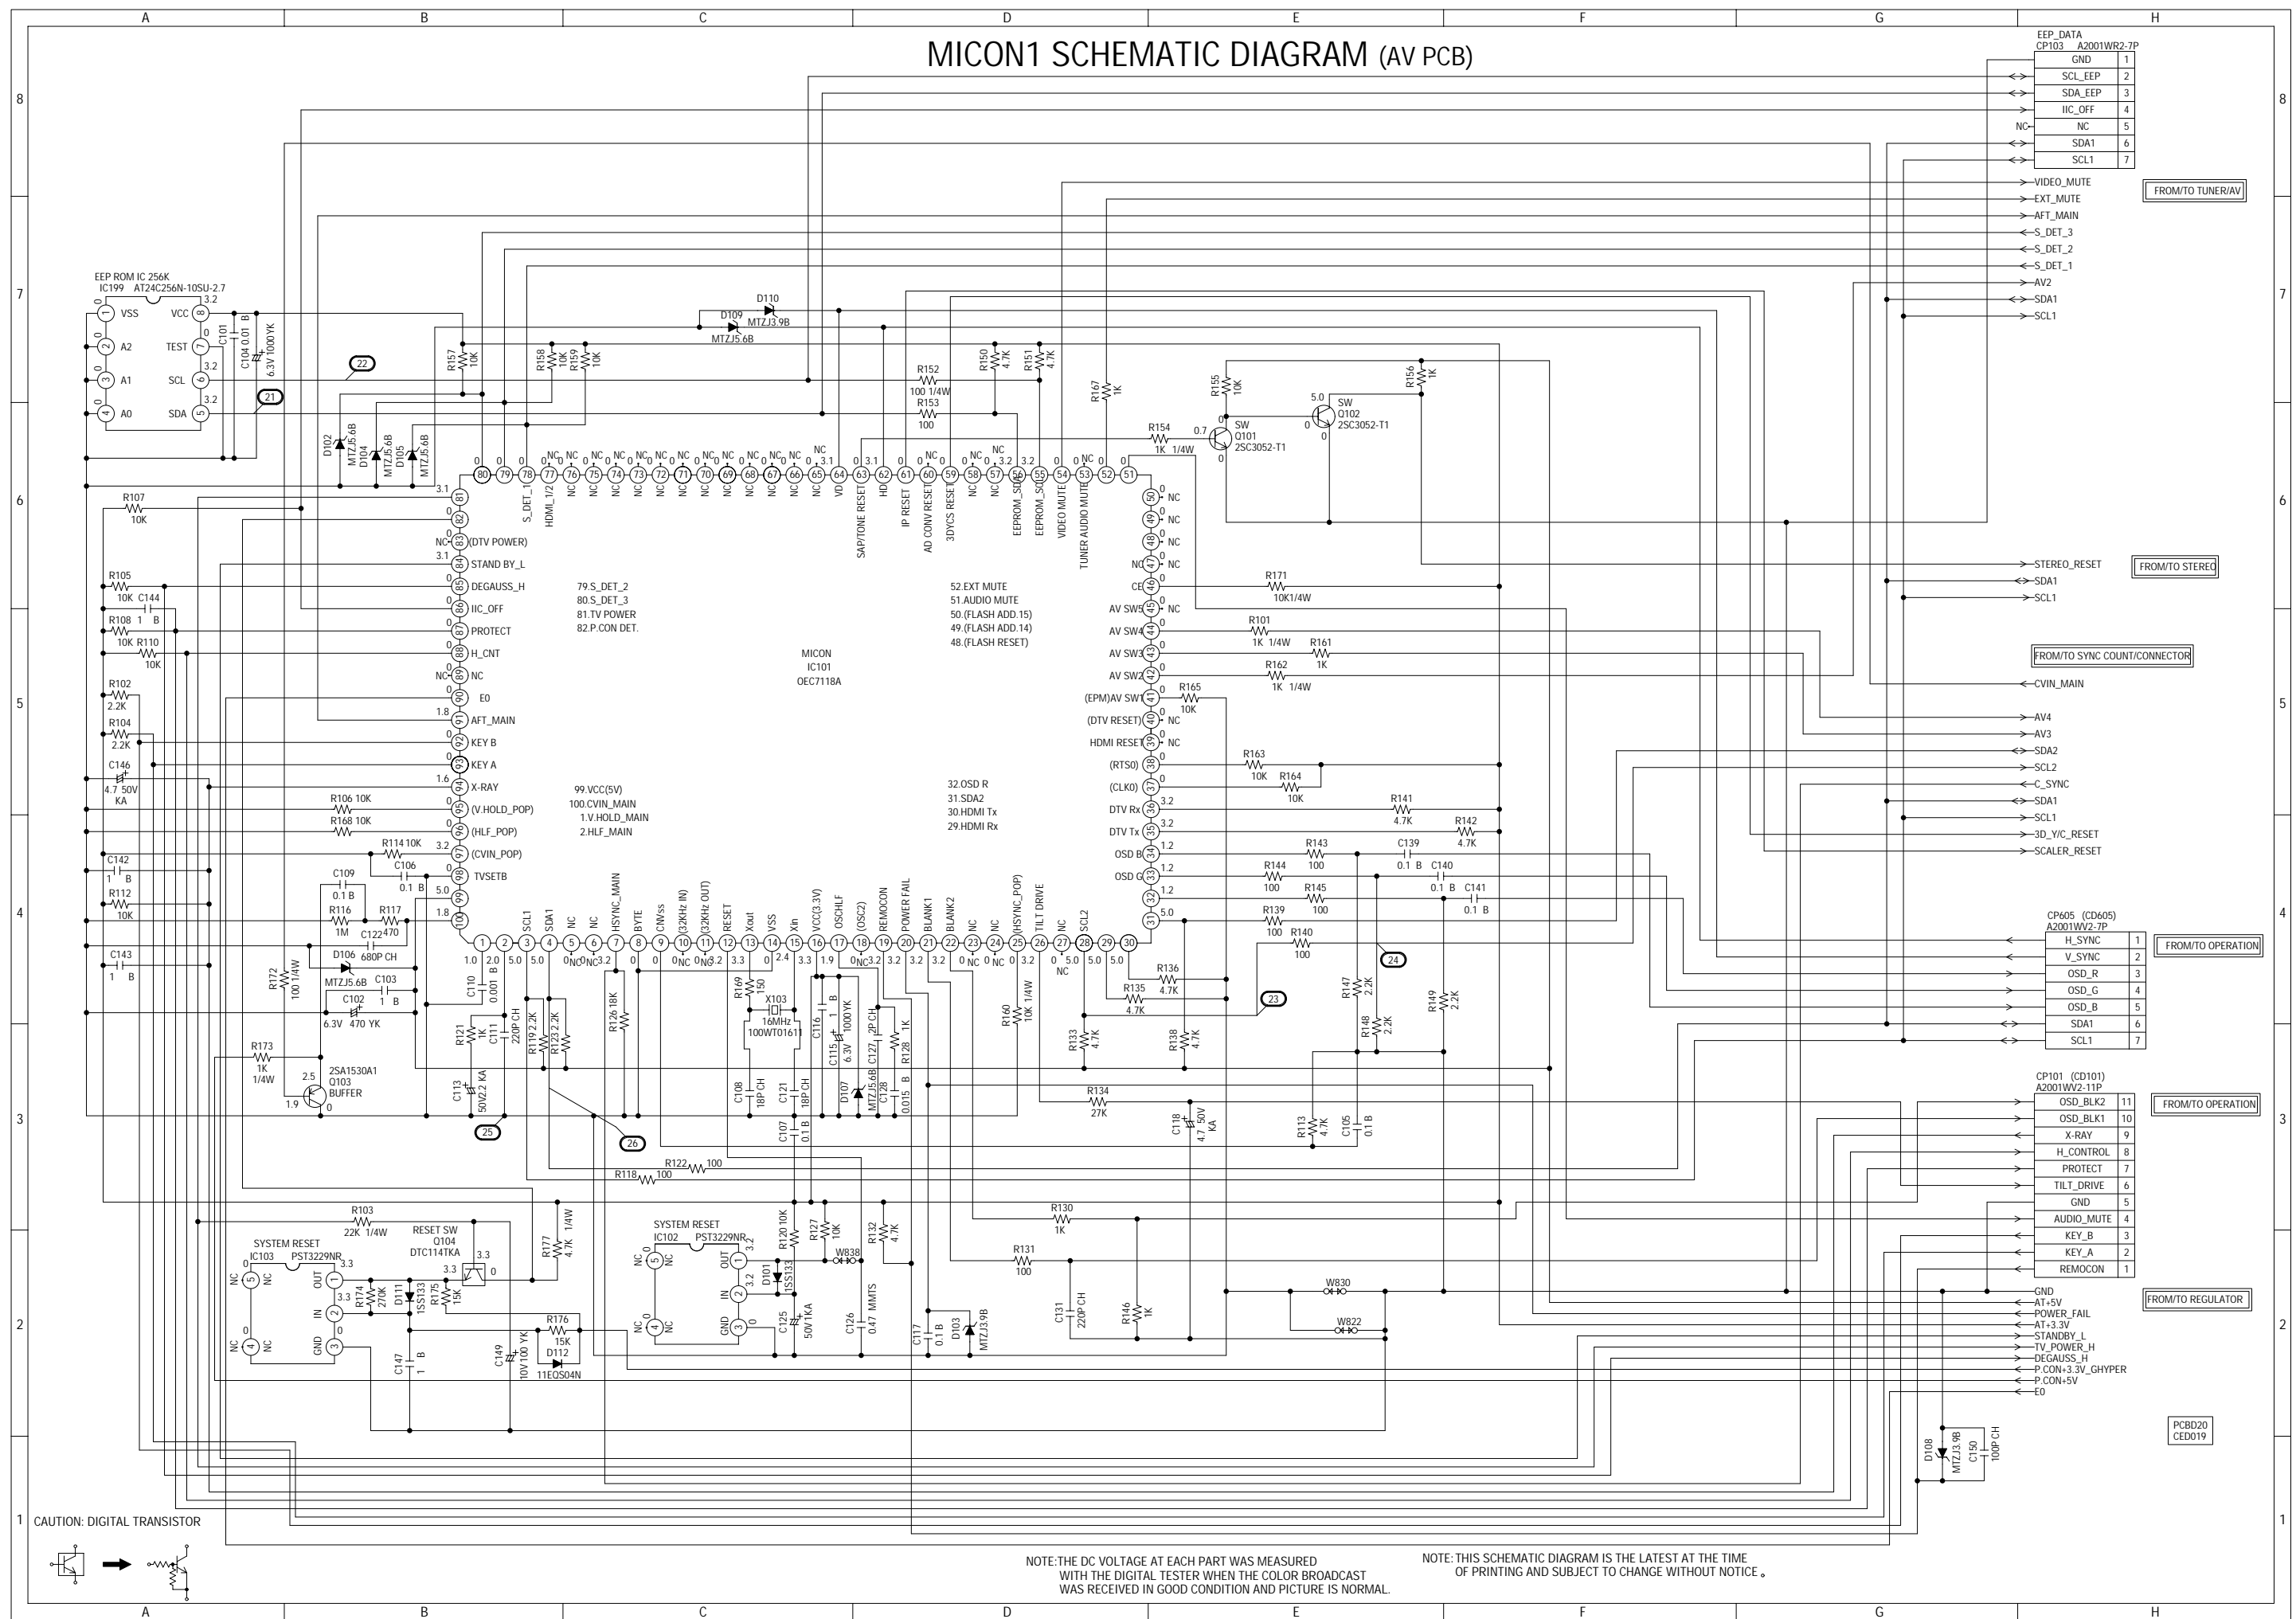

STEREO SCHEMATIC DIAGRAM  
(AV PCB)

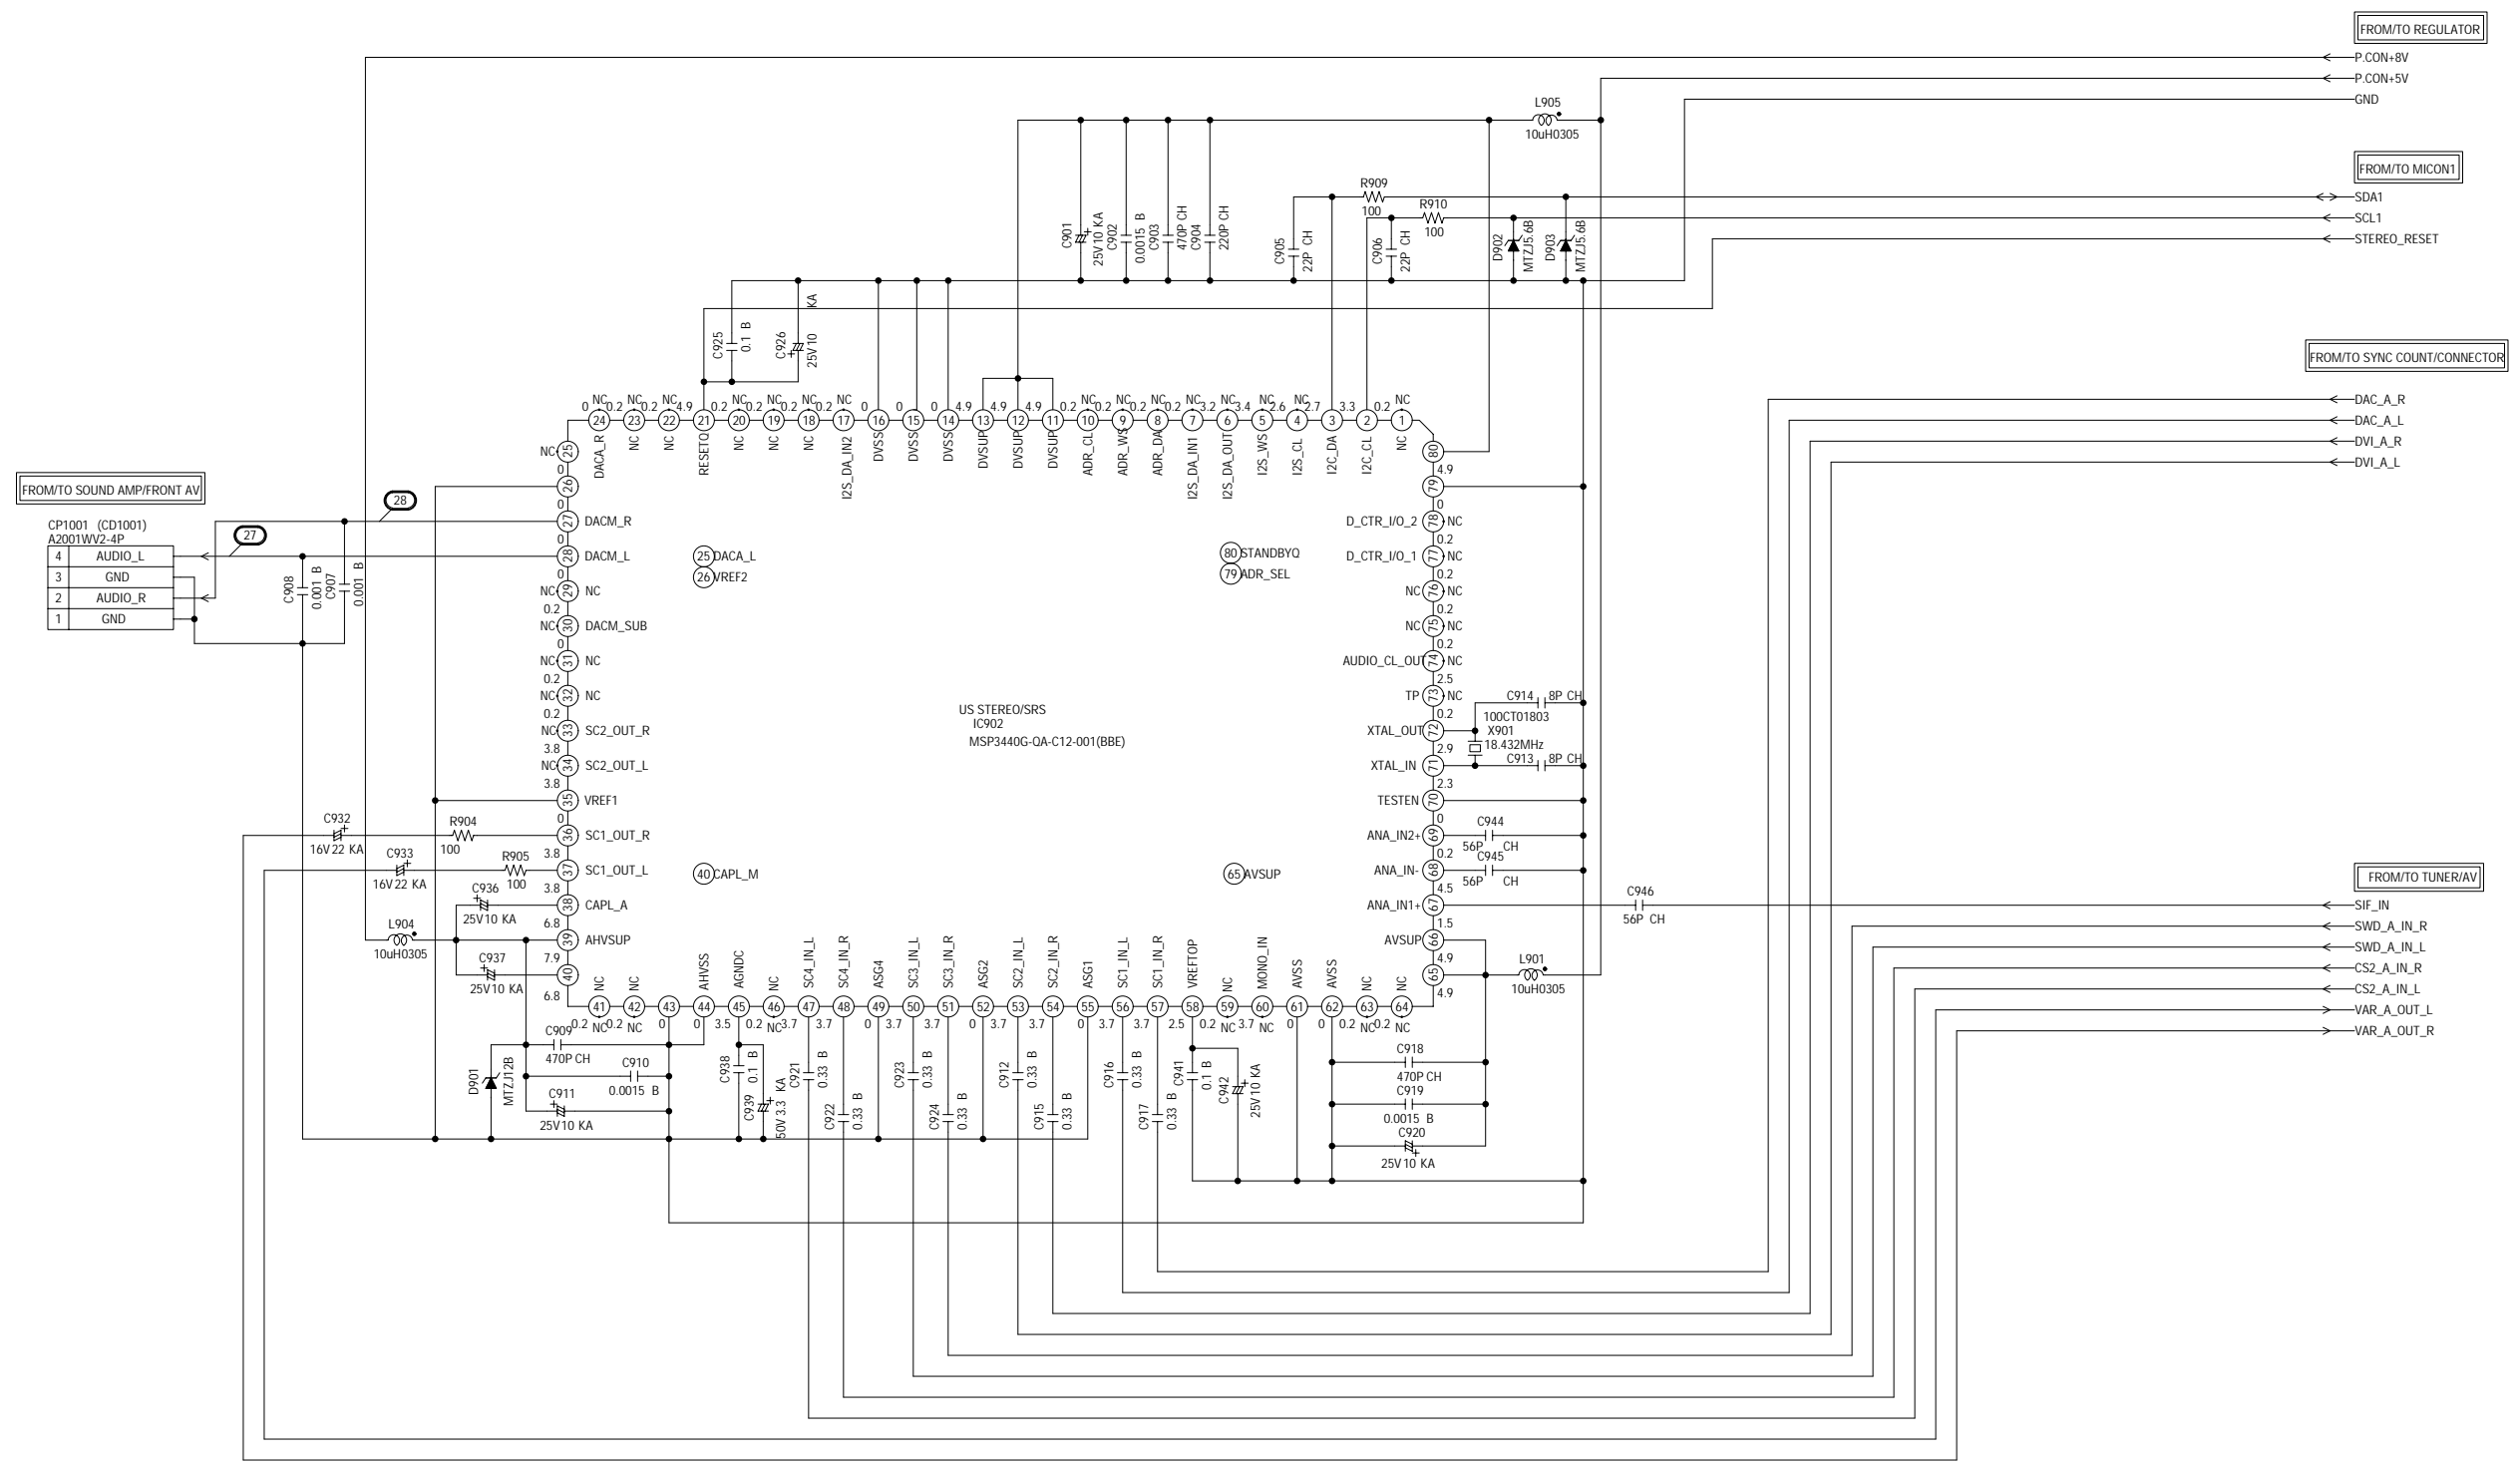


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE .

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED  
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST  
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

PCBD20  
CED019

TUNER/AV SCHEMATIC DIAGRAM (AV PCB)

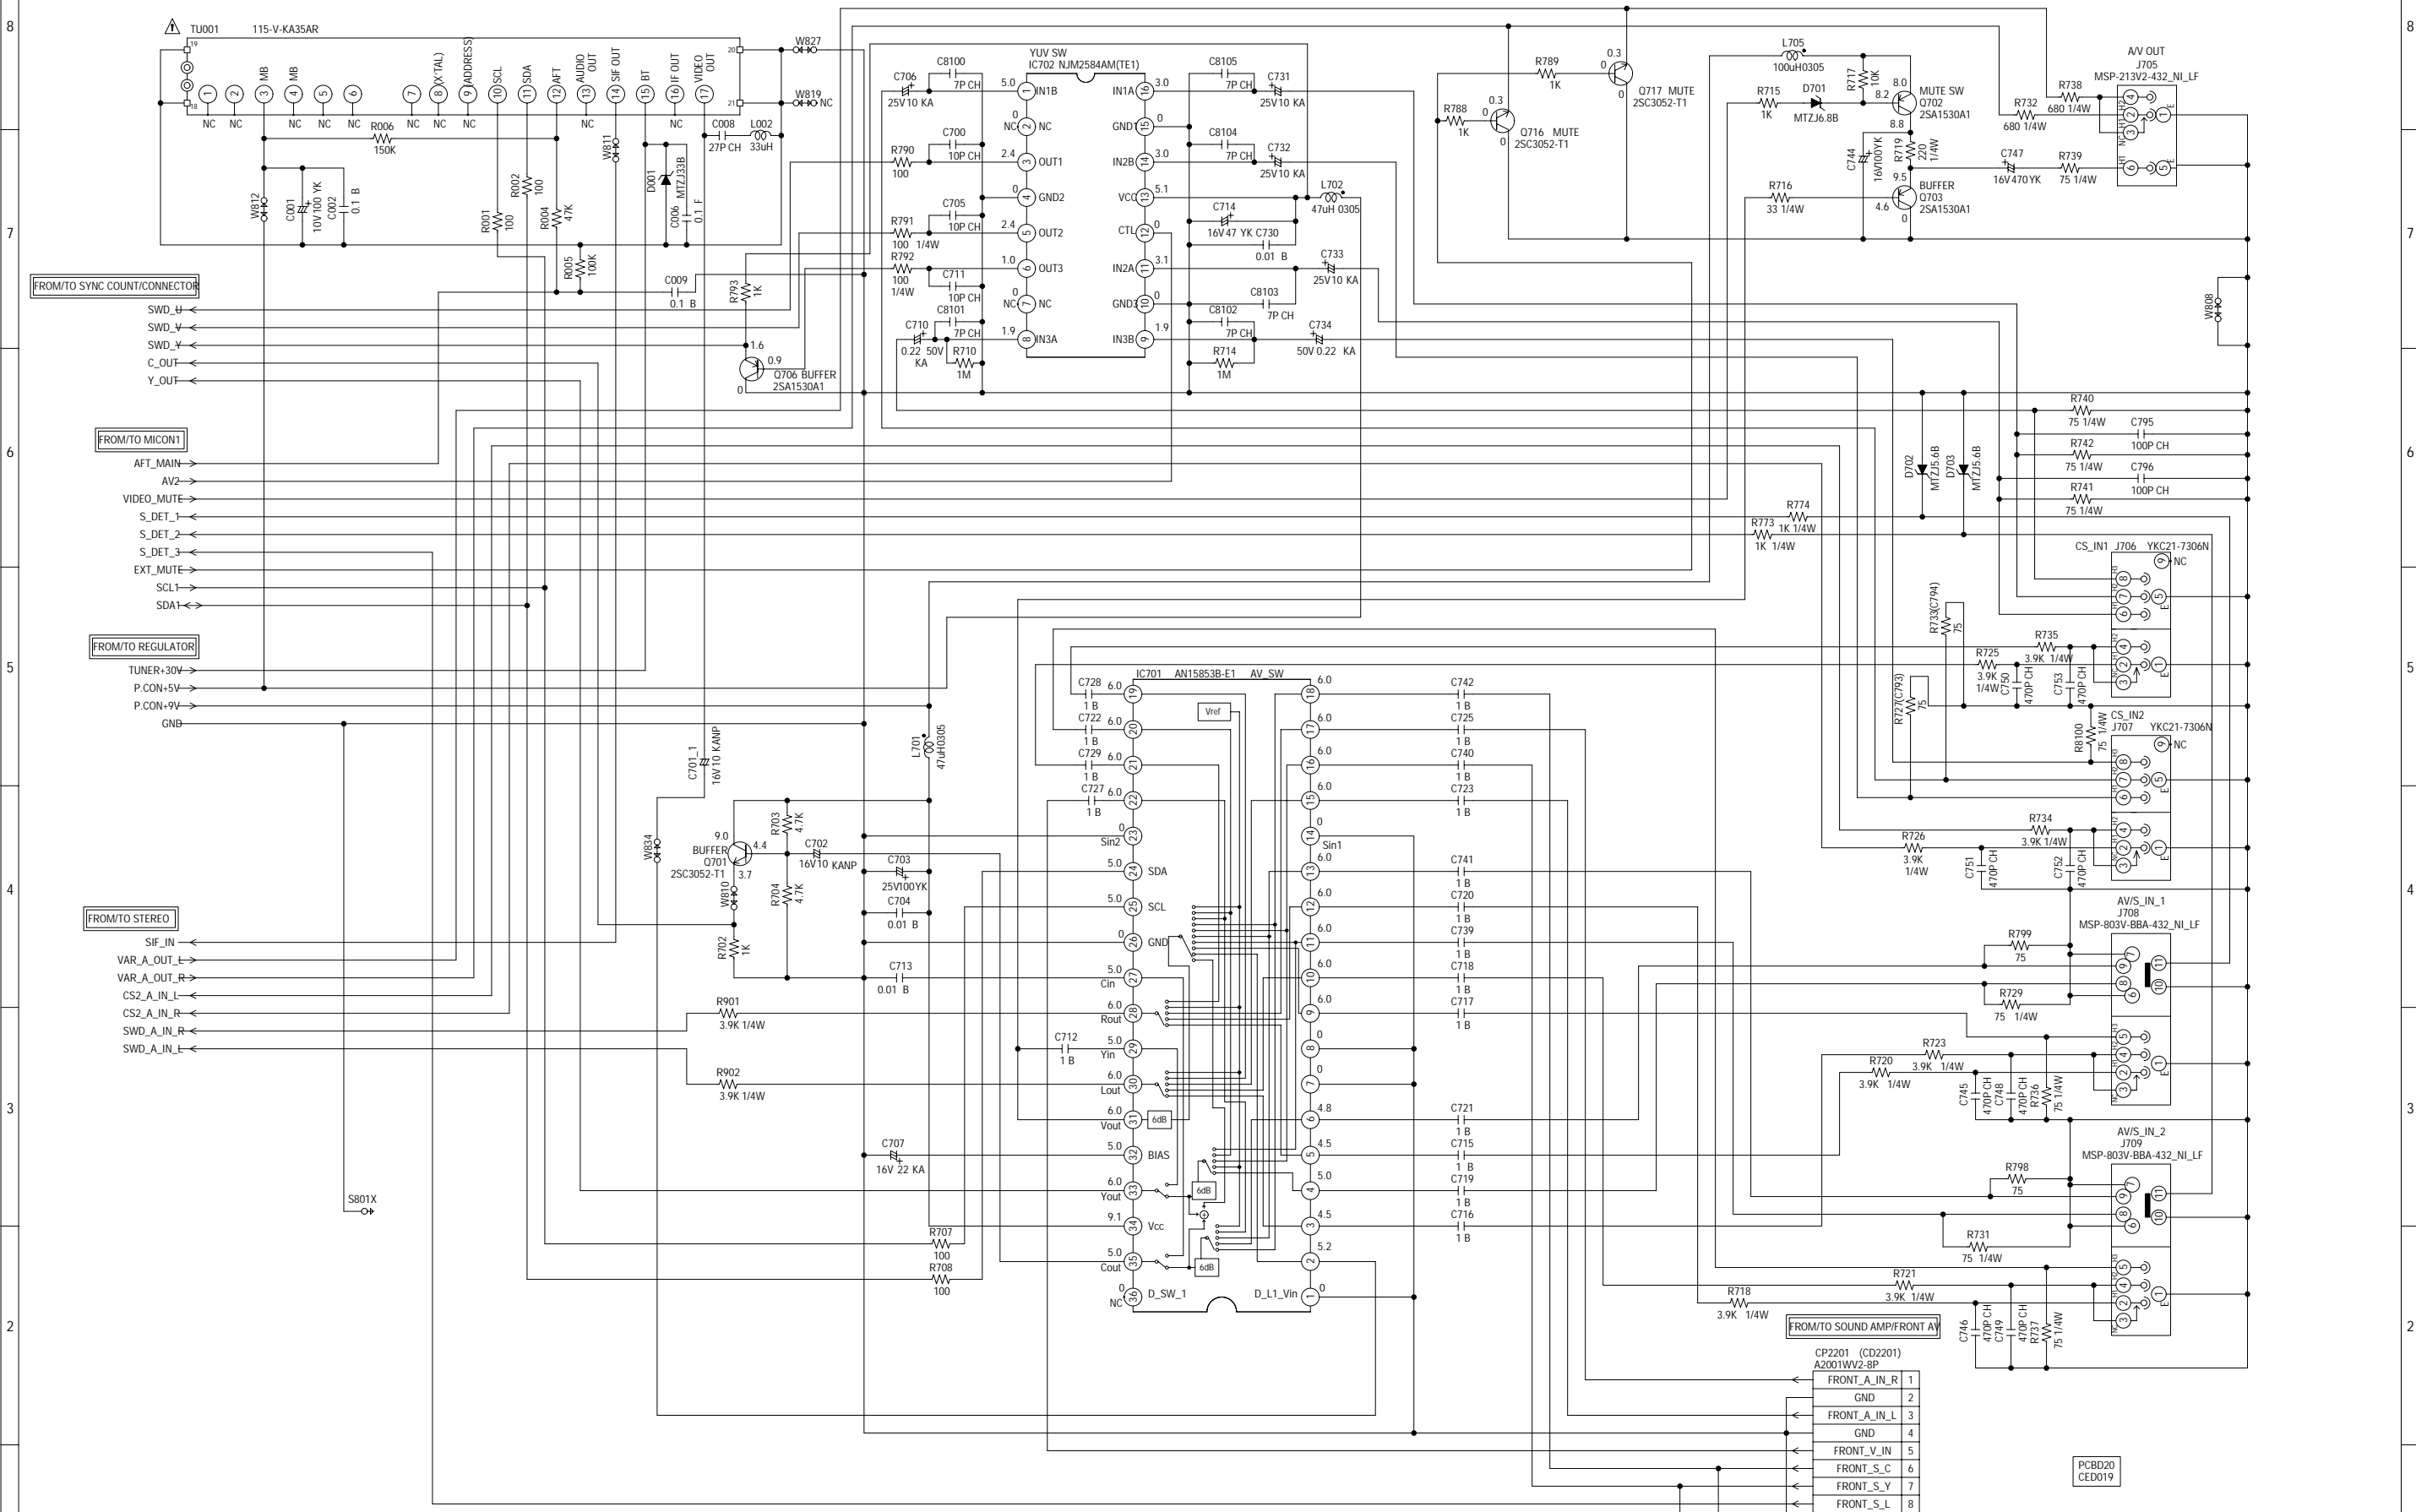

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES À UN POINT DE VUE SÉCURITÉ N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

REGULATOR SCHEMATIC DIAGRAM  
(AV PCB)

FROM/TO OPERATION	
CP509_1 (CD509_1)	
A2001WV2-13P	
13	E0
12	GND
11	GND
10	AT+5V
9	AT+3.3V
8	UNREG+8V
7	UNREG+12V
6	UNREG+5V
5	TUNER+30V
4	POWER_FAIL
3	STANDBY_L
2	DEGAUSS_H
1	TV_POWER_H

FROM/TO STEREO


FROM/TO MICON1


FROM/TO TUNER/AV

FROM/TO SYNC COUNT/CONNECTOR

 
NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE .

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION SINCE THESE PARTS MARKED BY  ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY .


ATTENTION : LES PIECES REPARÉES PAR UN  ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES.

CAUTION: DIGITAL TRANSISTOR




PCBD20  
CED019

# SYNC COUNT/CONECTOR SCHEMATIC DIAGRAM (AV PCB)

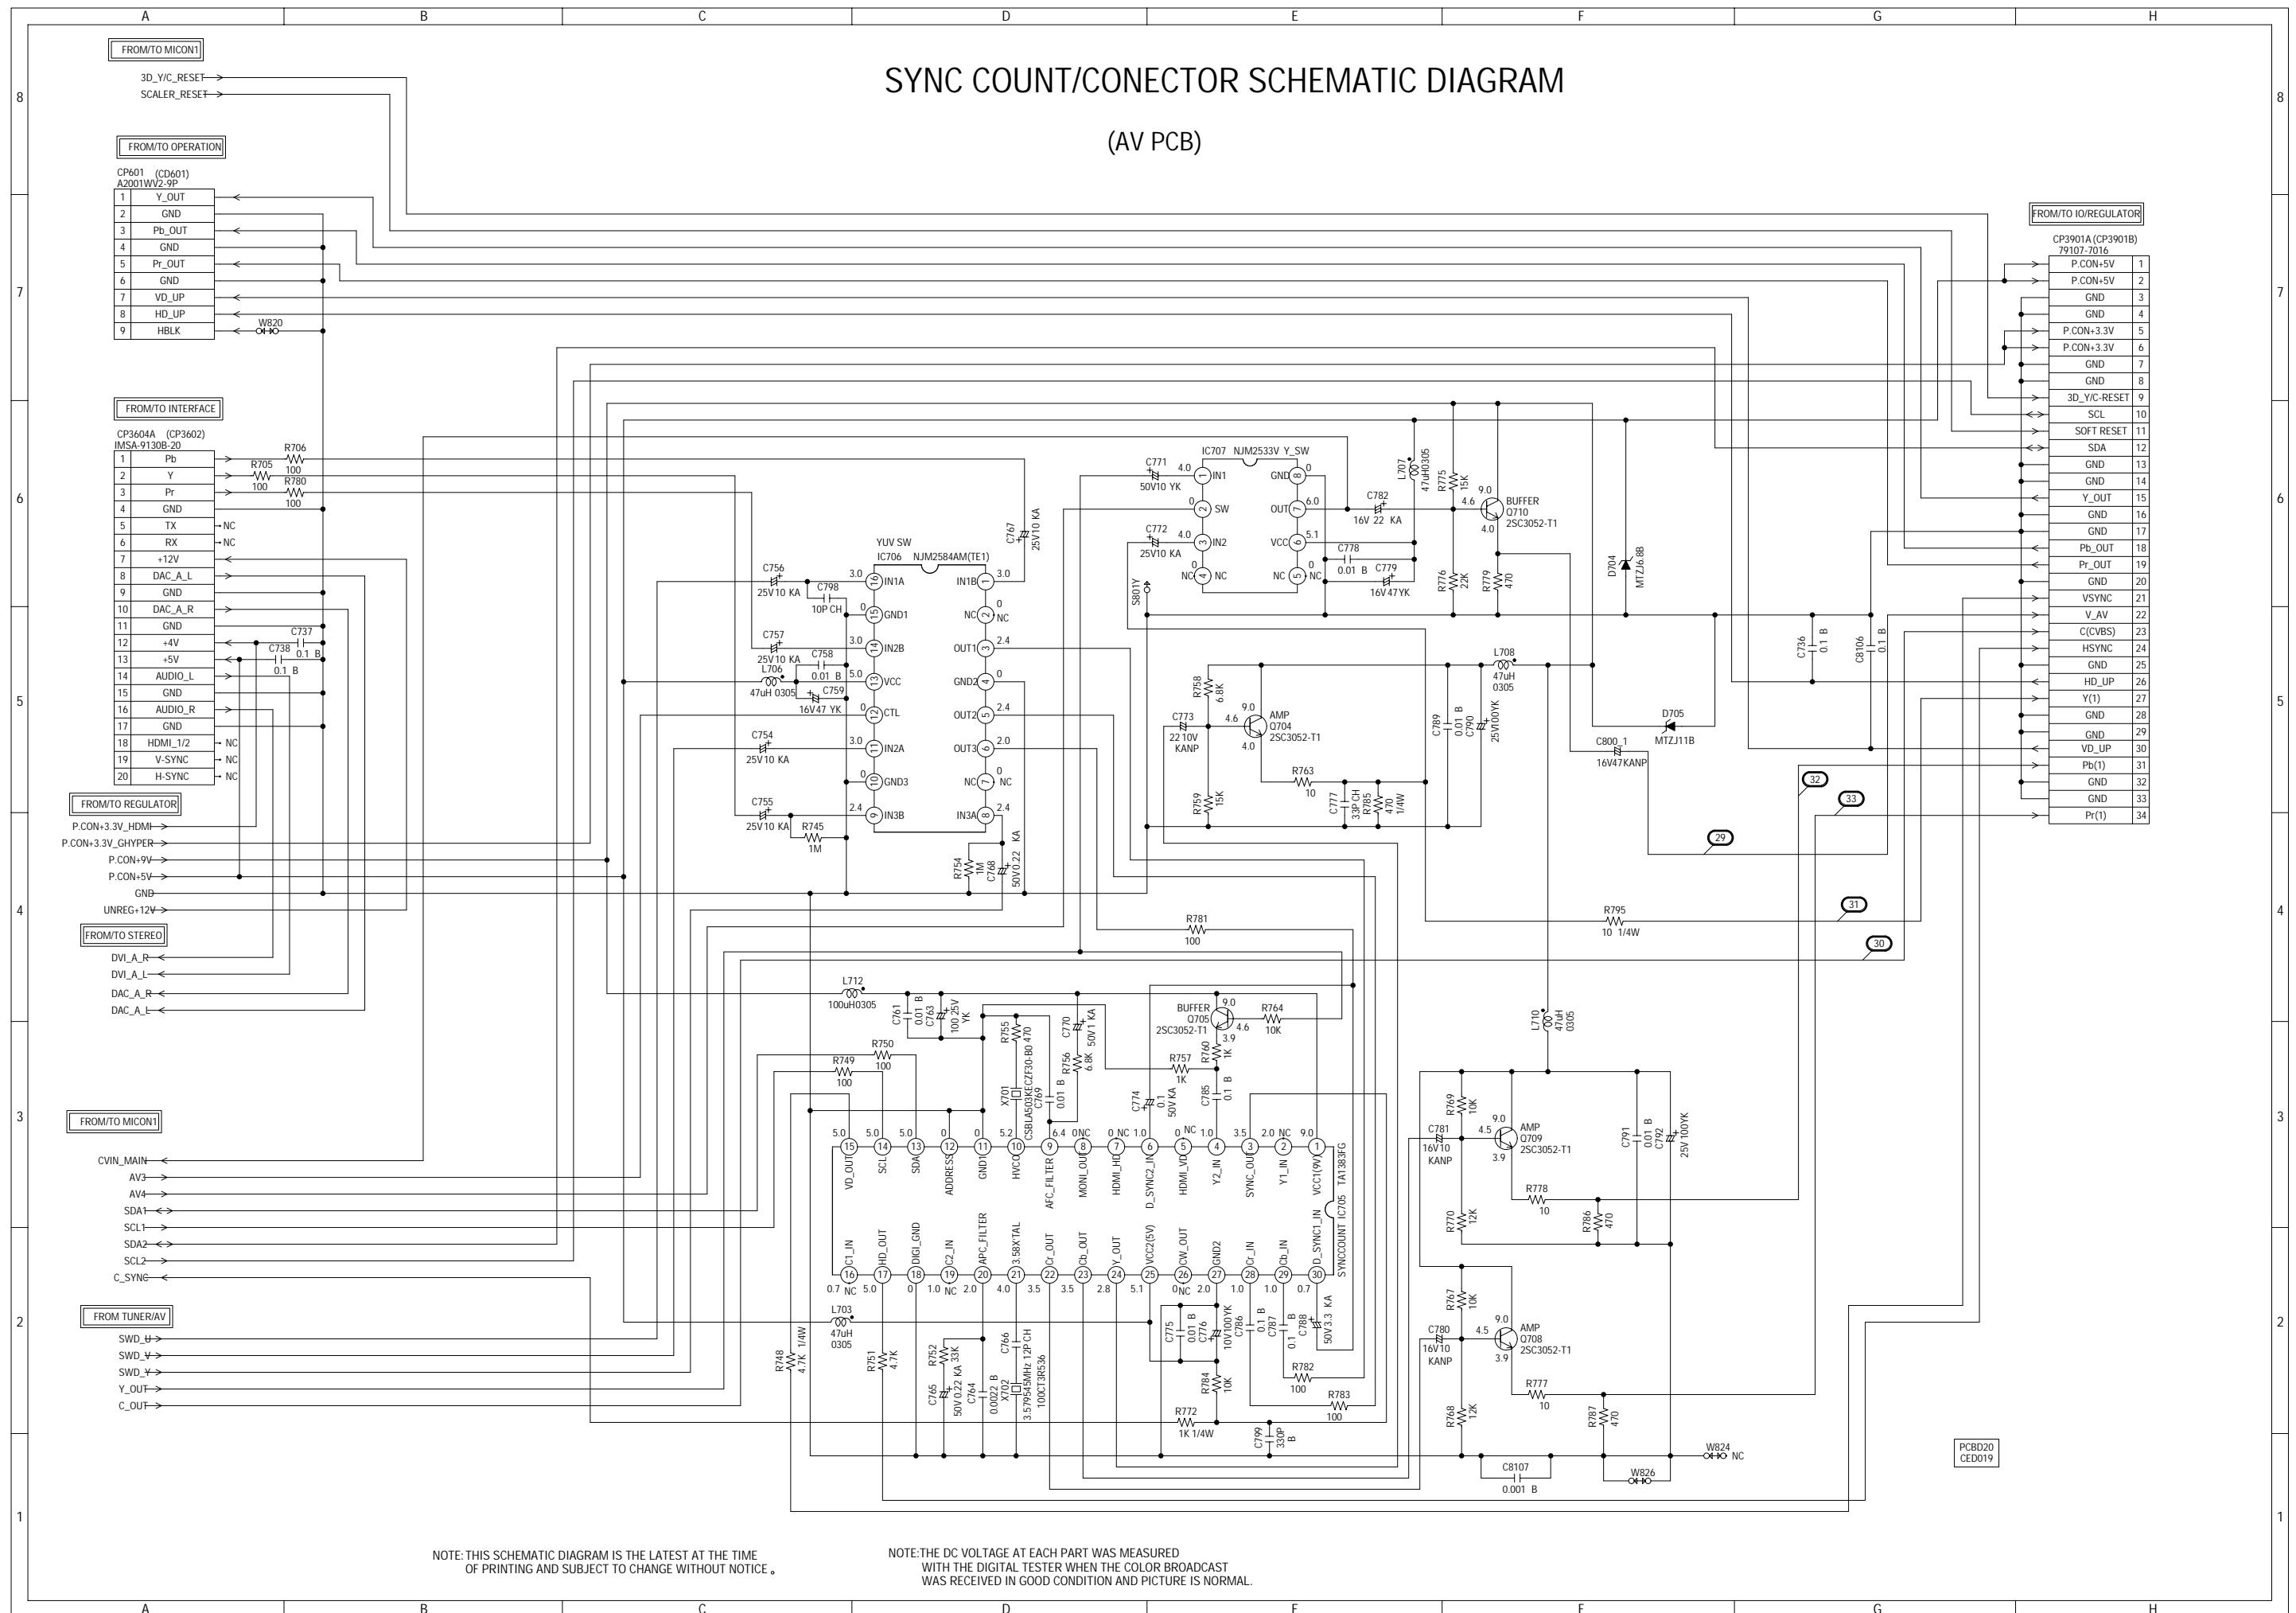



INTERFACE SCHEMATIC DIAGRAM  
(HD-MI PCB)

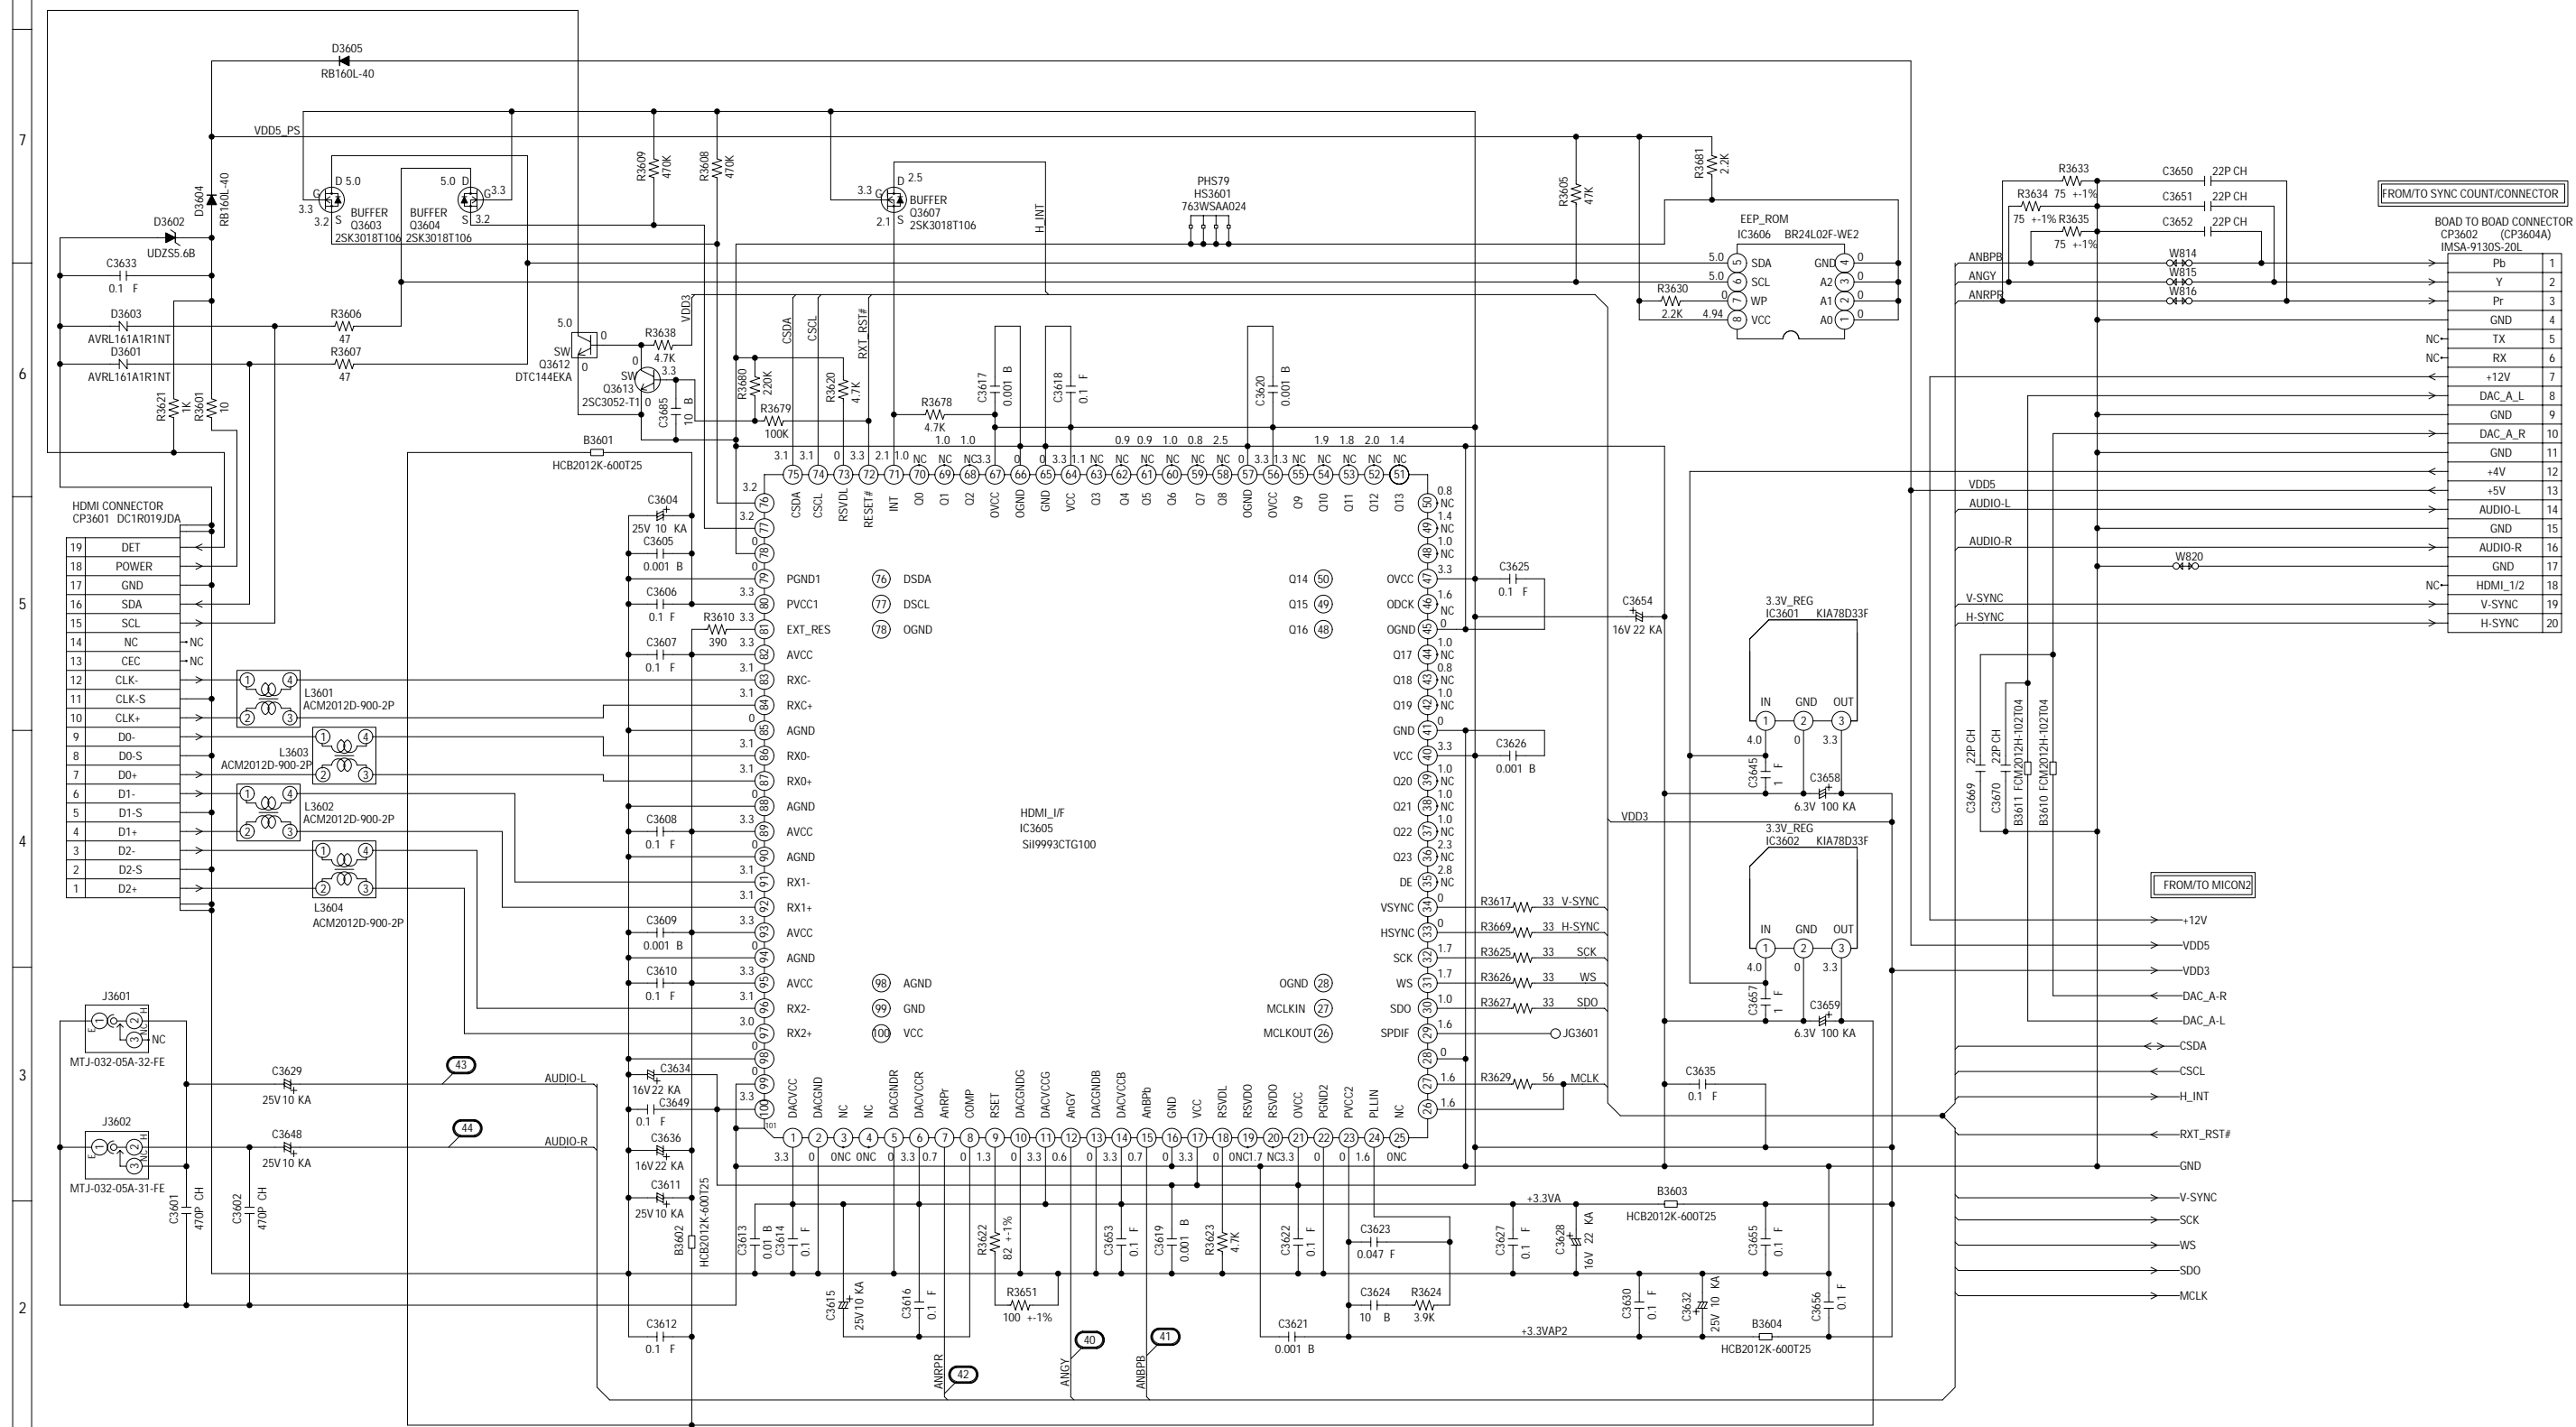

FROM/TO SYNC COUNT/CONNECTOR

BOARD TO BOARD CONNECTOR	
CP3602 (CP3604A)	
IMSA-9130S-20L	
Pb	1
Y	2
Pr	3
GND	4
TX	5
RX	6
+12V	7
DAC_A_L	8
GND	9
DAC_A_R	10
GND	11
+4V	12
+5V	13
AUDIO-L	14
GND	15
AUDIO-R	16
GND	17
HDMI_1/2	18
V-SYNC	19
H-SYNC	20

FROM/TO MICON2

- +12V
- VDD5
- VDD3
- DAC\_A-R
- DAC\_A-L
- CSDA
- CSCL
- H\_INT
- RXT\_RST#
- GND
- V-SYNC
- SCK
- WS
- SDO
- MCLK


PCBDJ0  
CED011

CAUTION: DIGITAL TRANSISTOR


NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

 (HD-MI PCB)



SOUND AMP/FRONT AV SCHEMATIC DIAGRAM (FRONT JACK PCB)

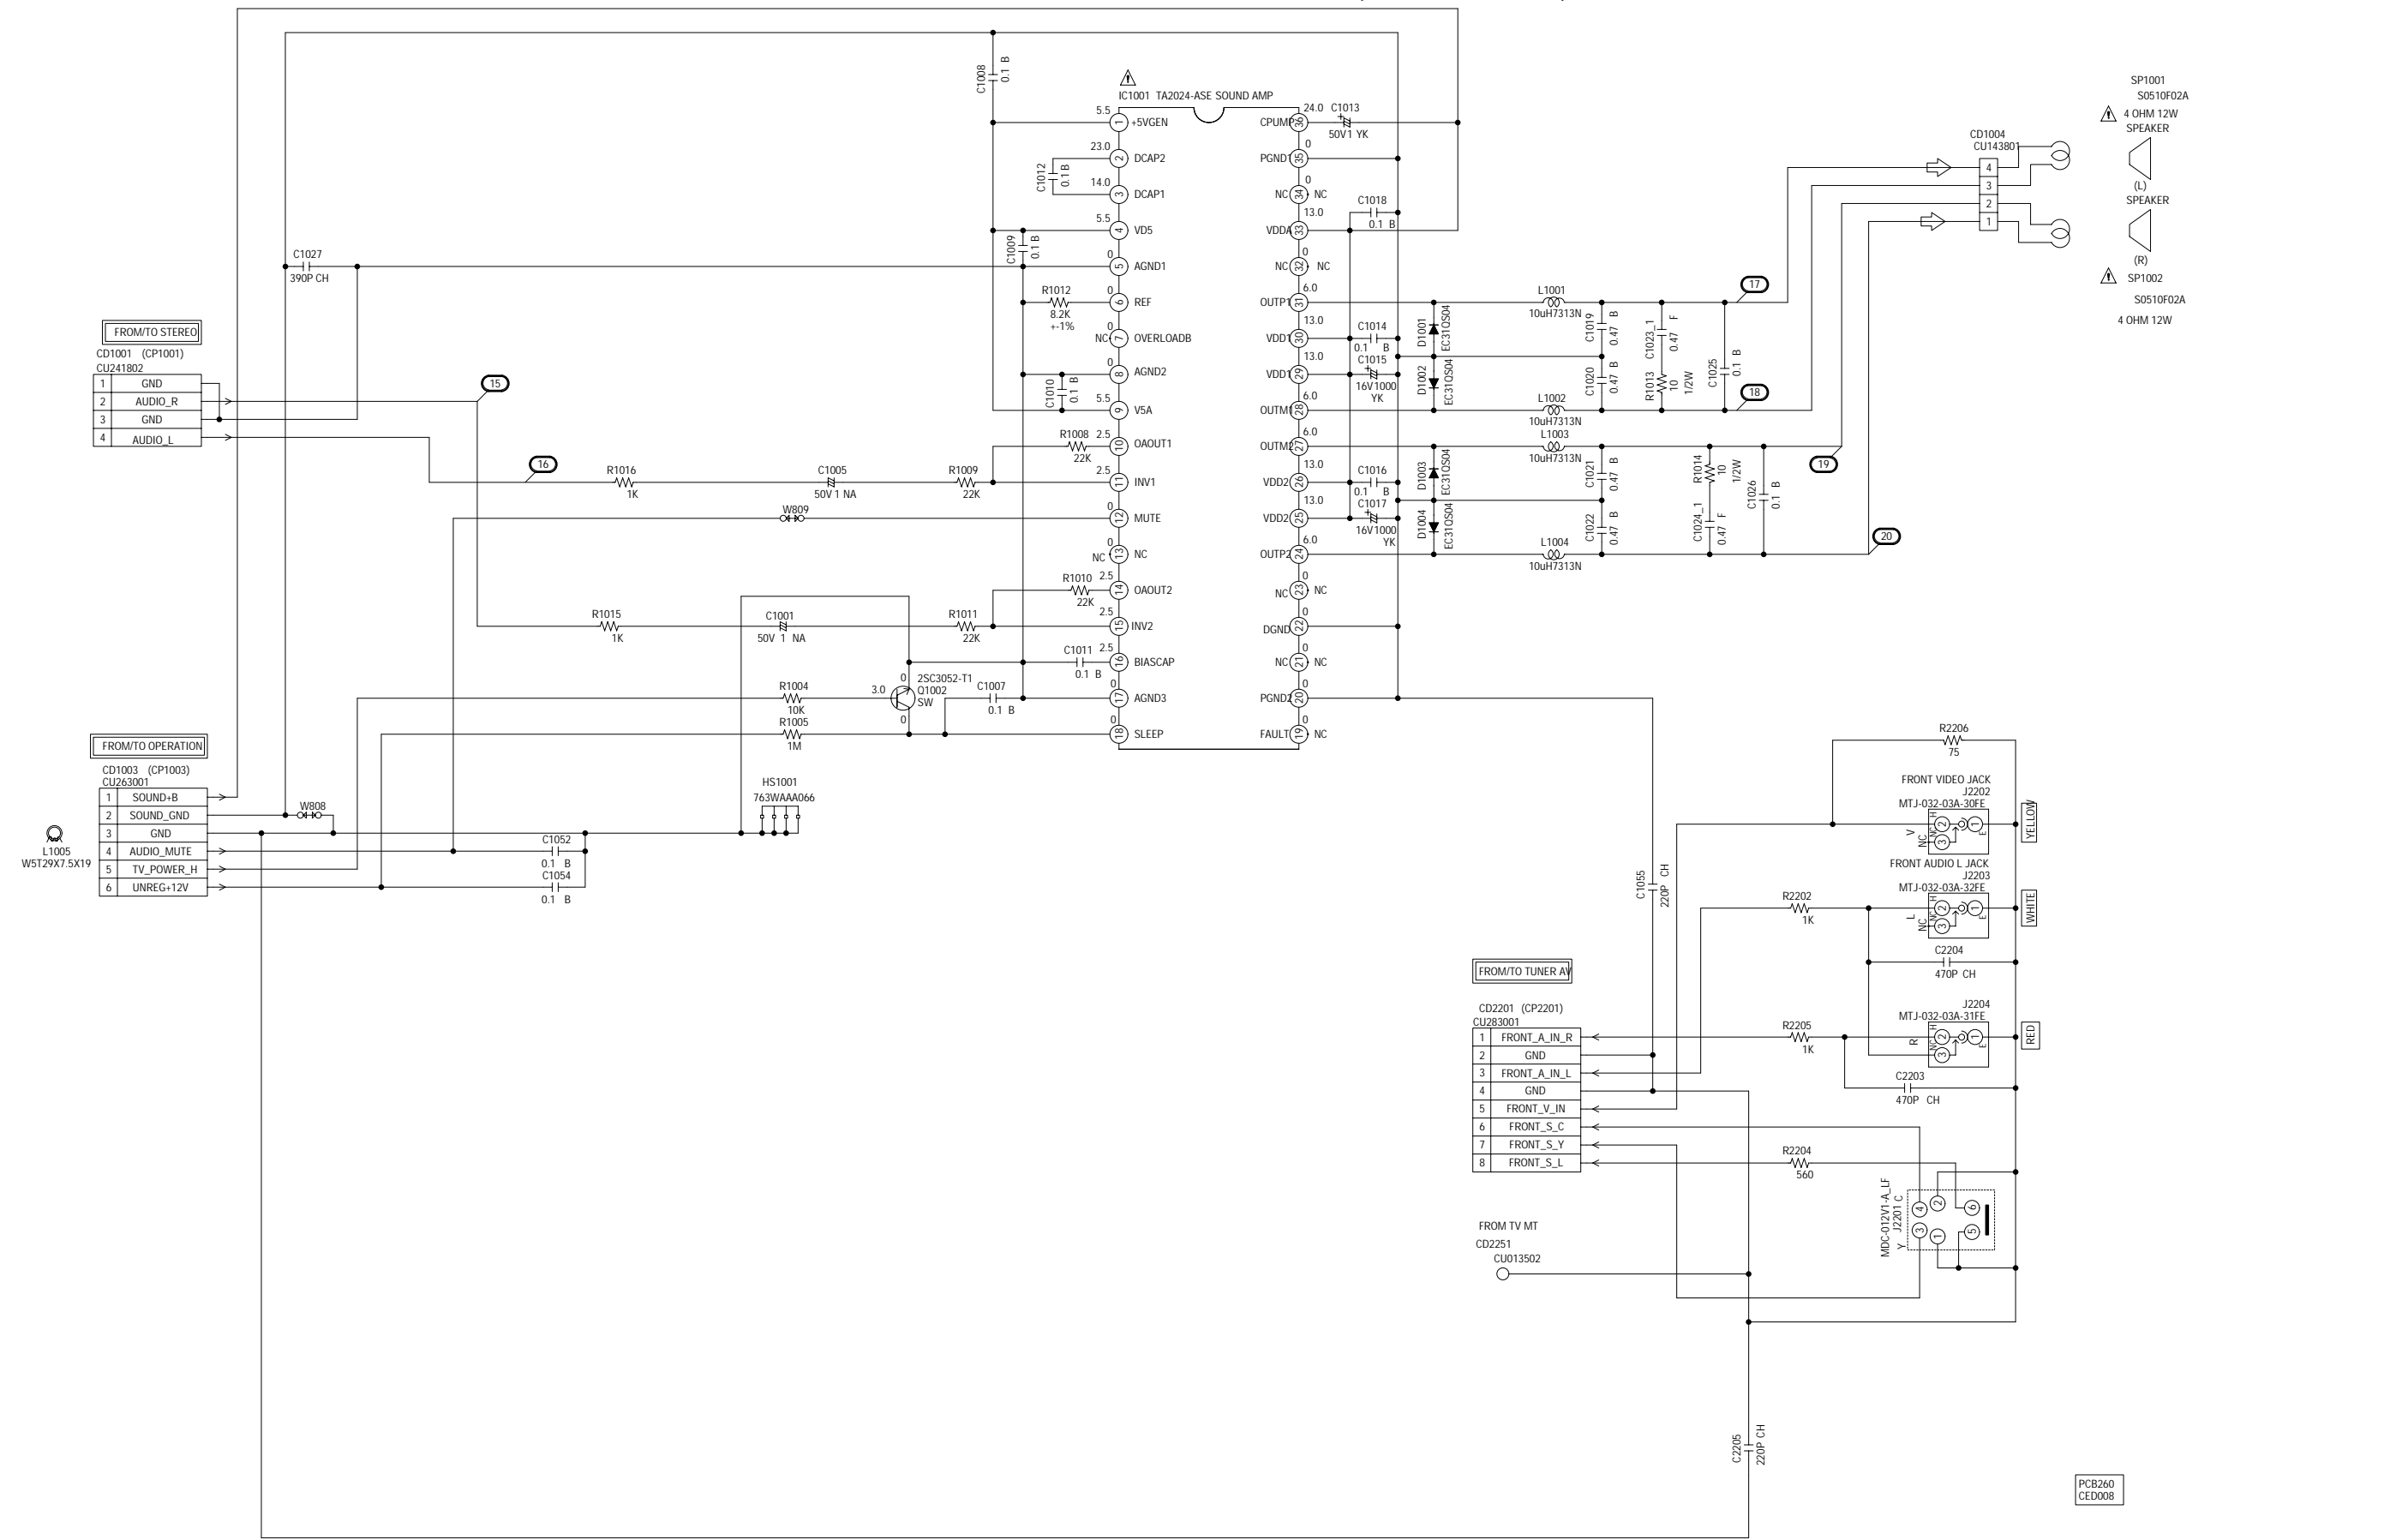

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.


ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ, N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

PCB260  
CED008


# ANALOG/DIGITAL CONVERTER SCHEMATIC DIAGRAM (SCALER PCB)

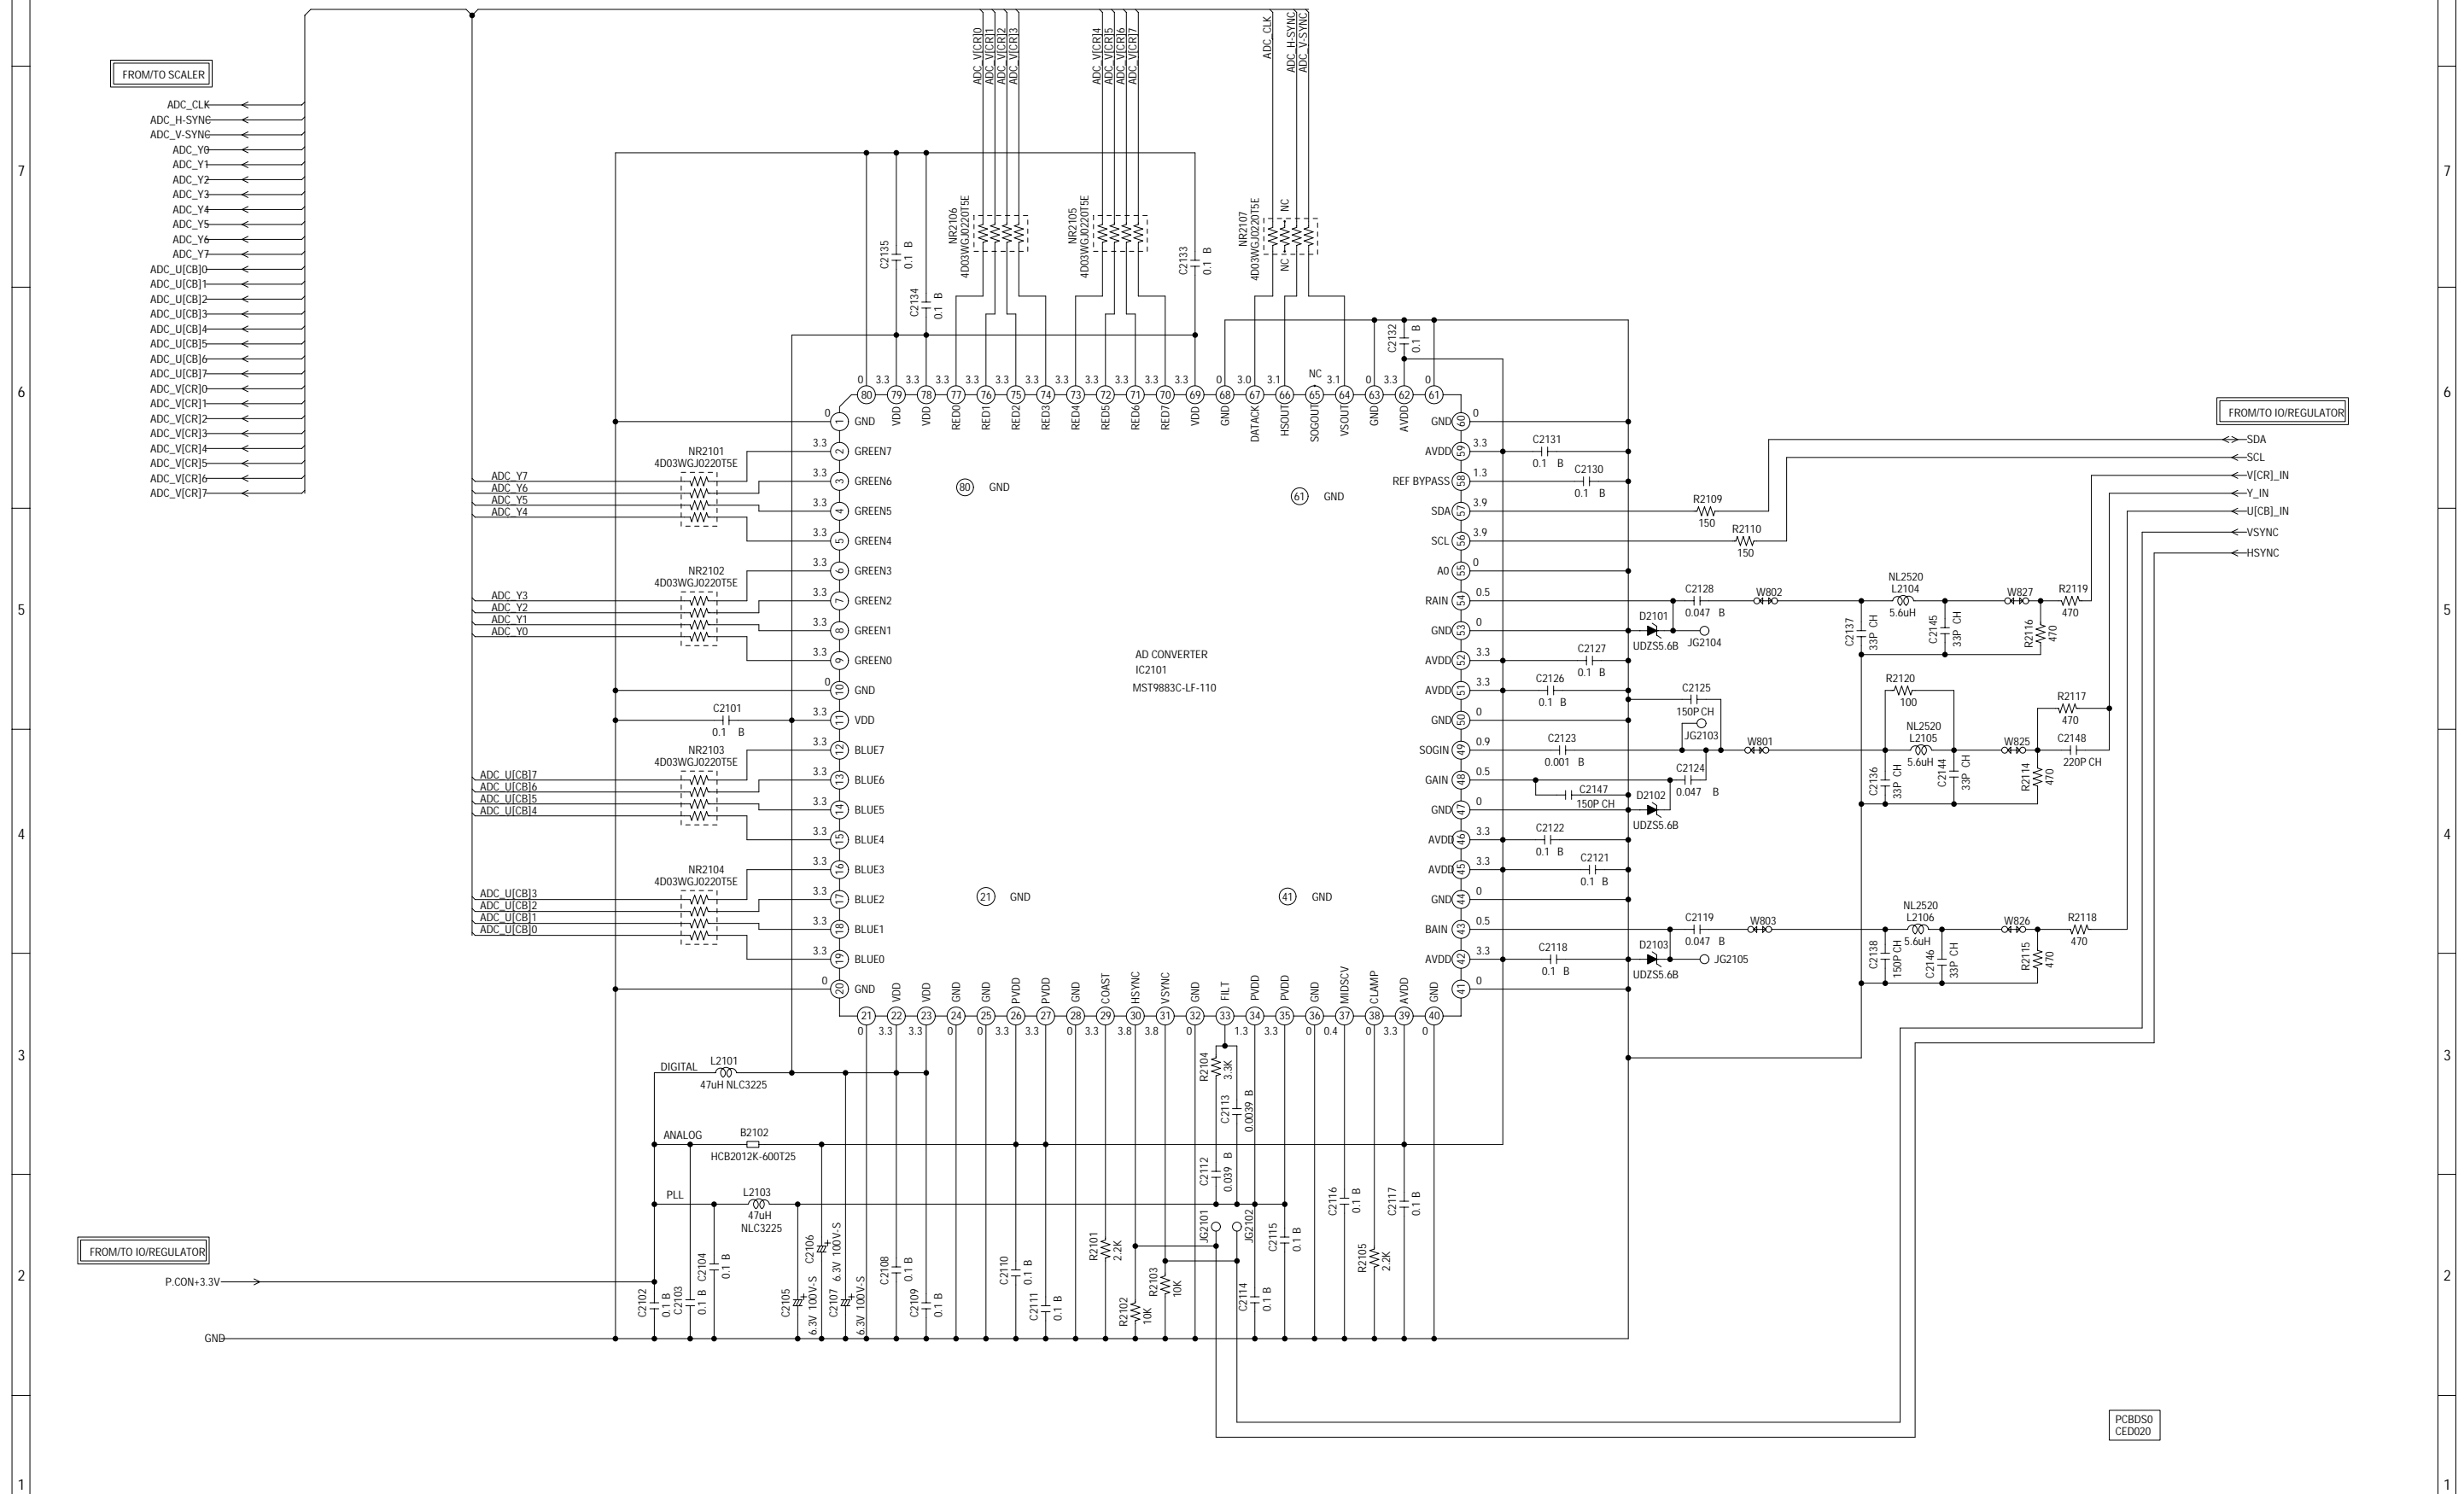

(SCALER PCB)

 

# DIGITAL COMB SCHEMATIC DIAGRAM (SCALER PCB)

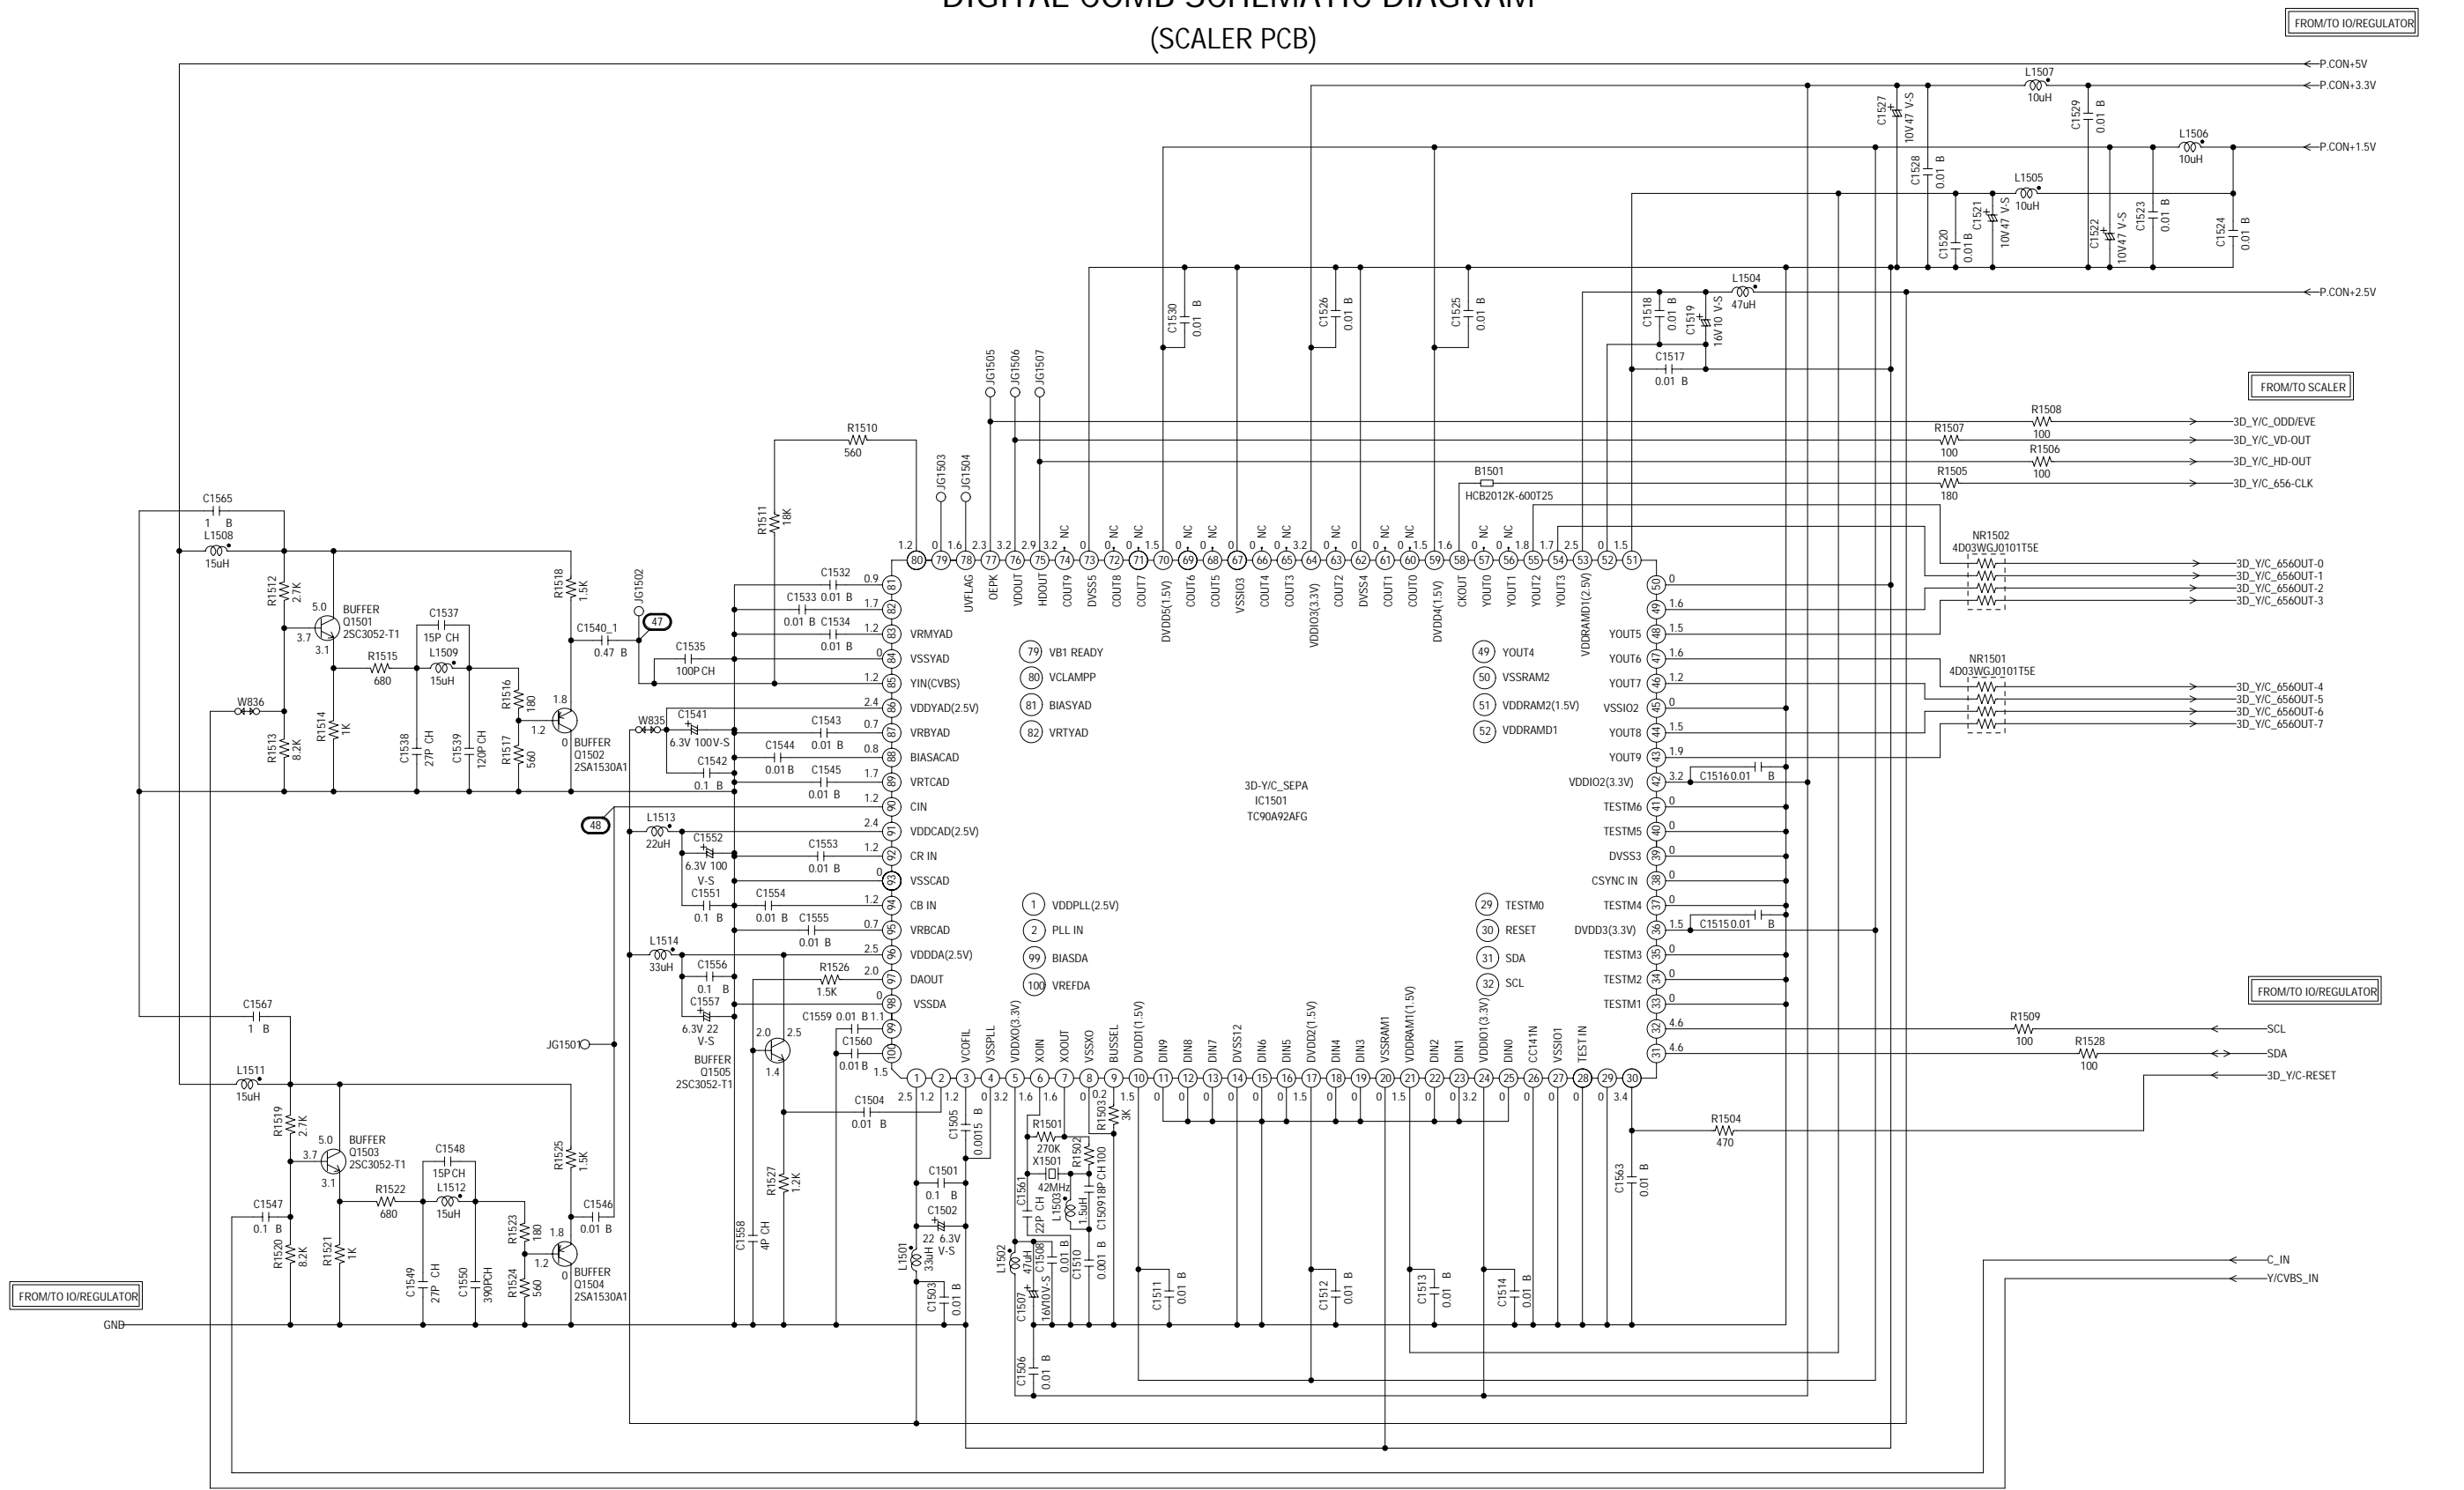


NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED  
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST  
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE:THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE .

PCBDS0  
CED020

SDRAM SCHEMATIC DIAGRAM  
(SCALER PCB)

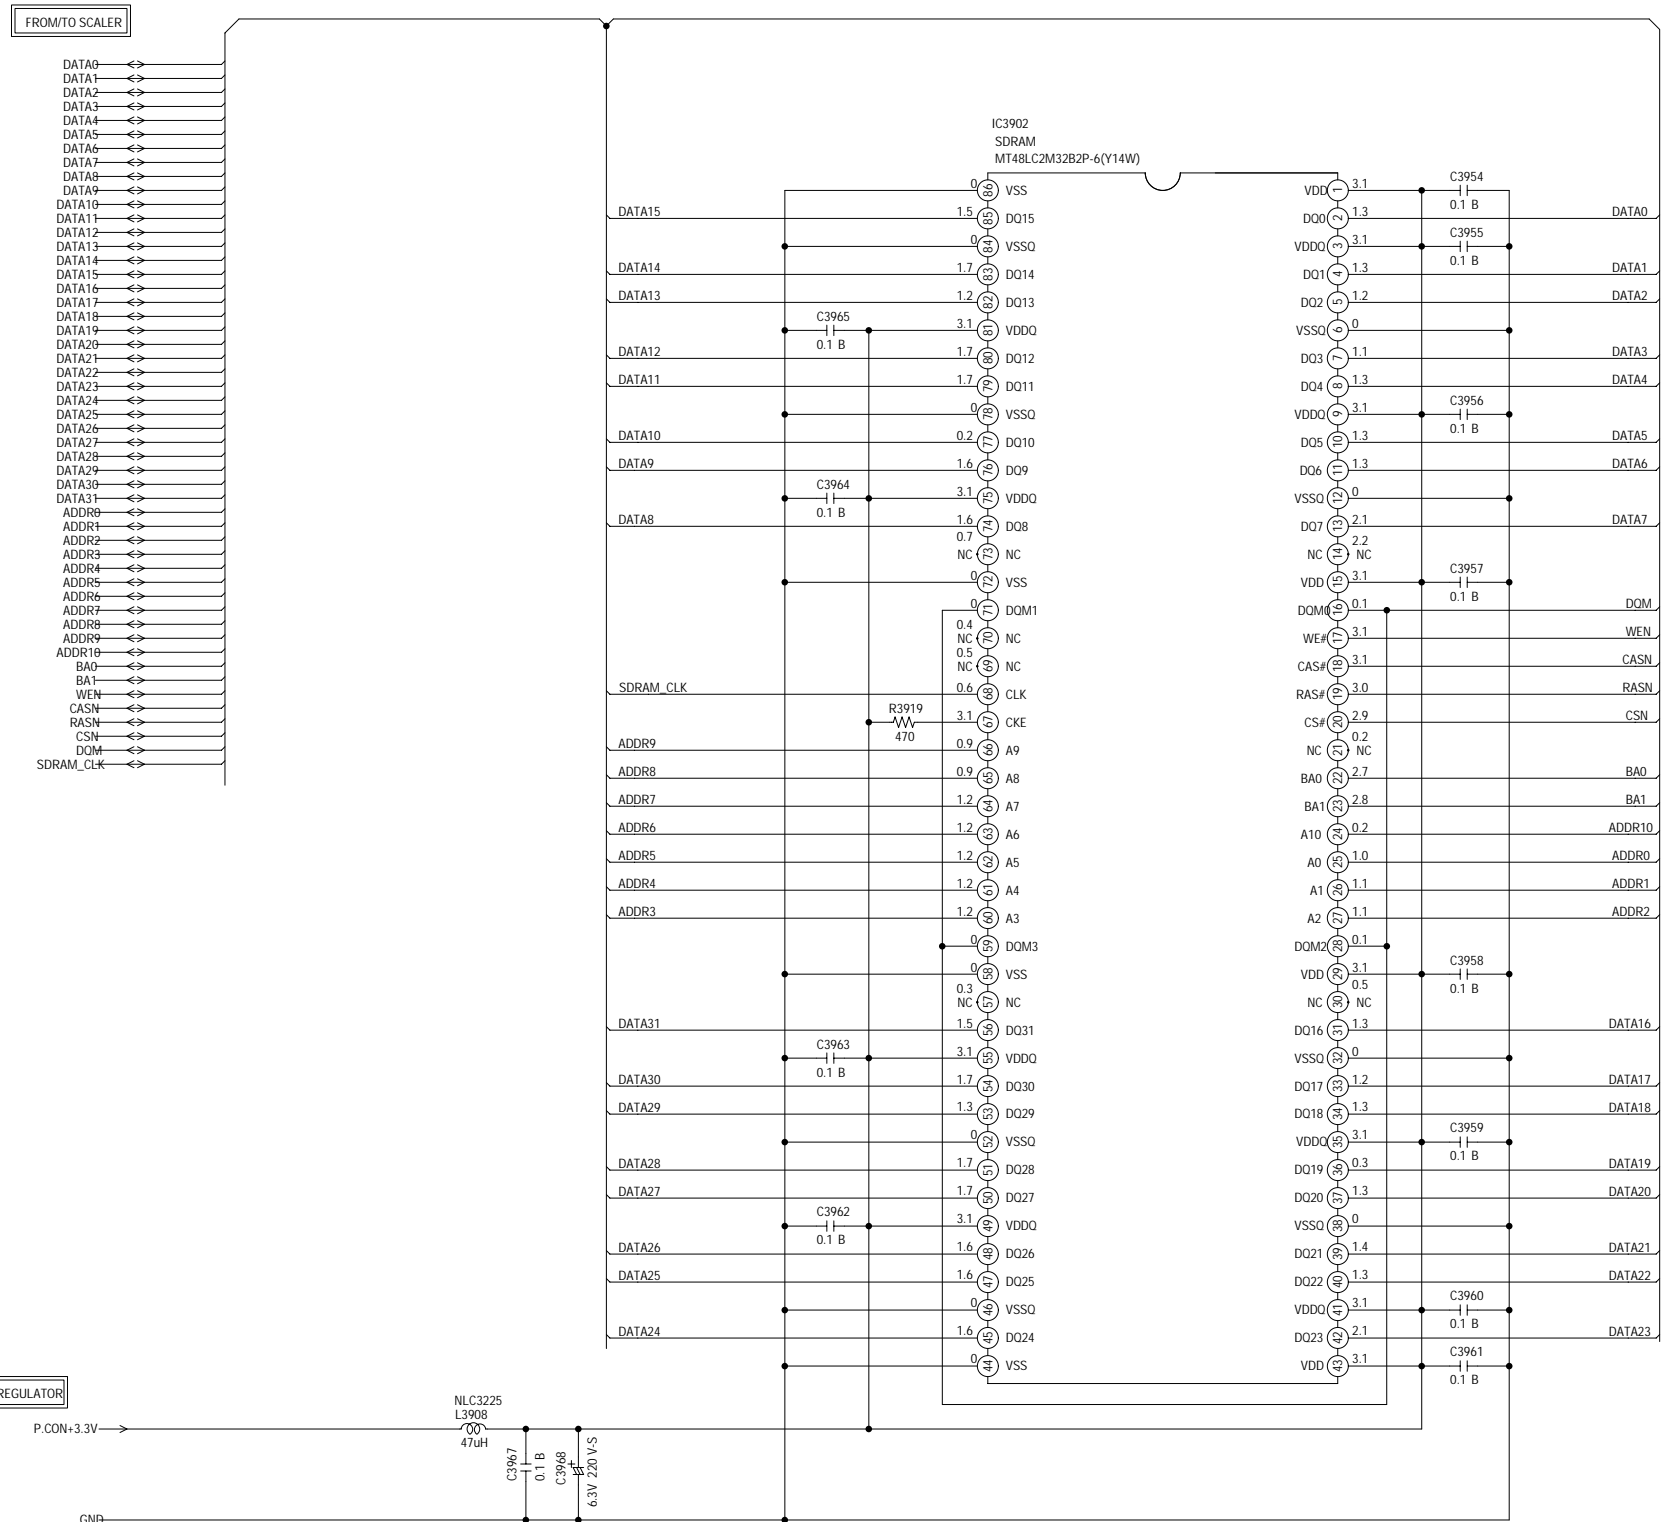


NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED  
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST  
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

PCBDS0  
CED020

# IN//OUT/REGULATOR SCHEMATIC DIAGRAM

(SCALER PCB)

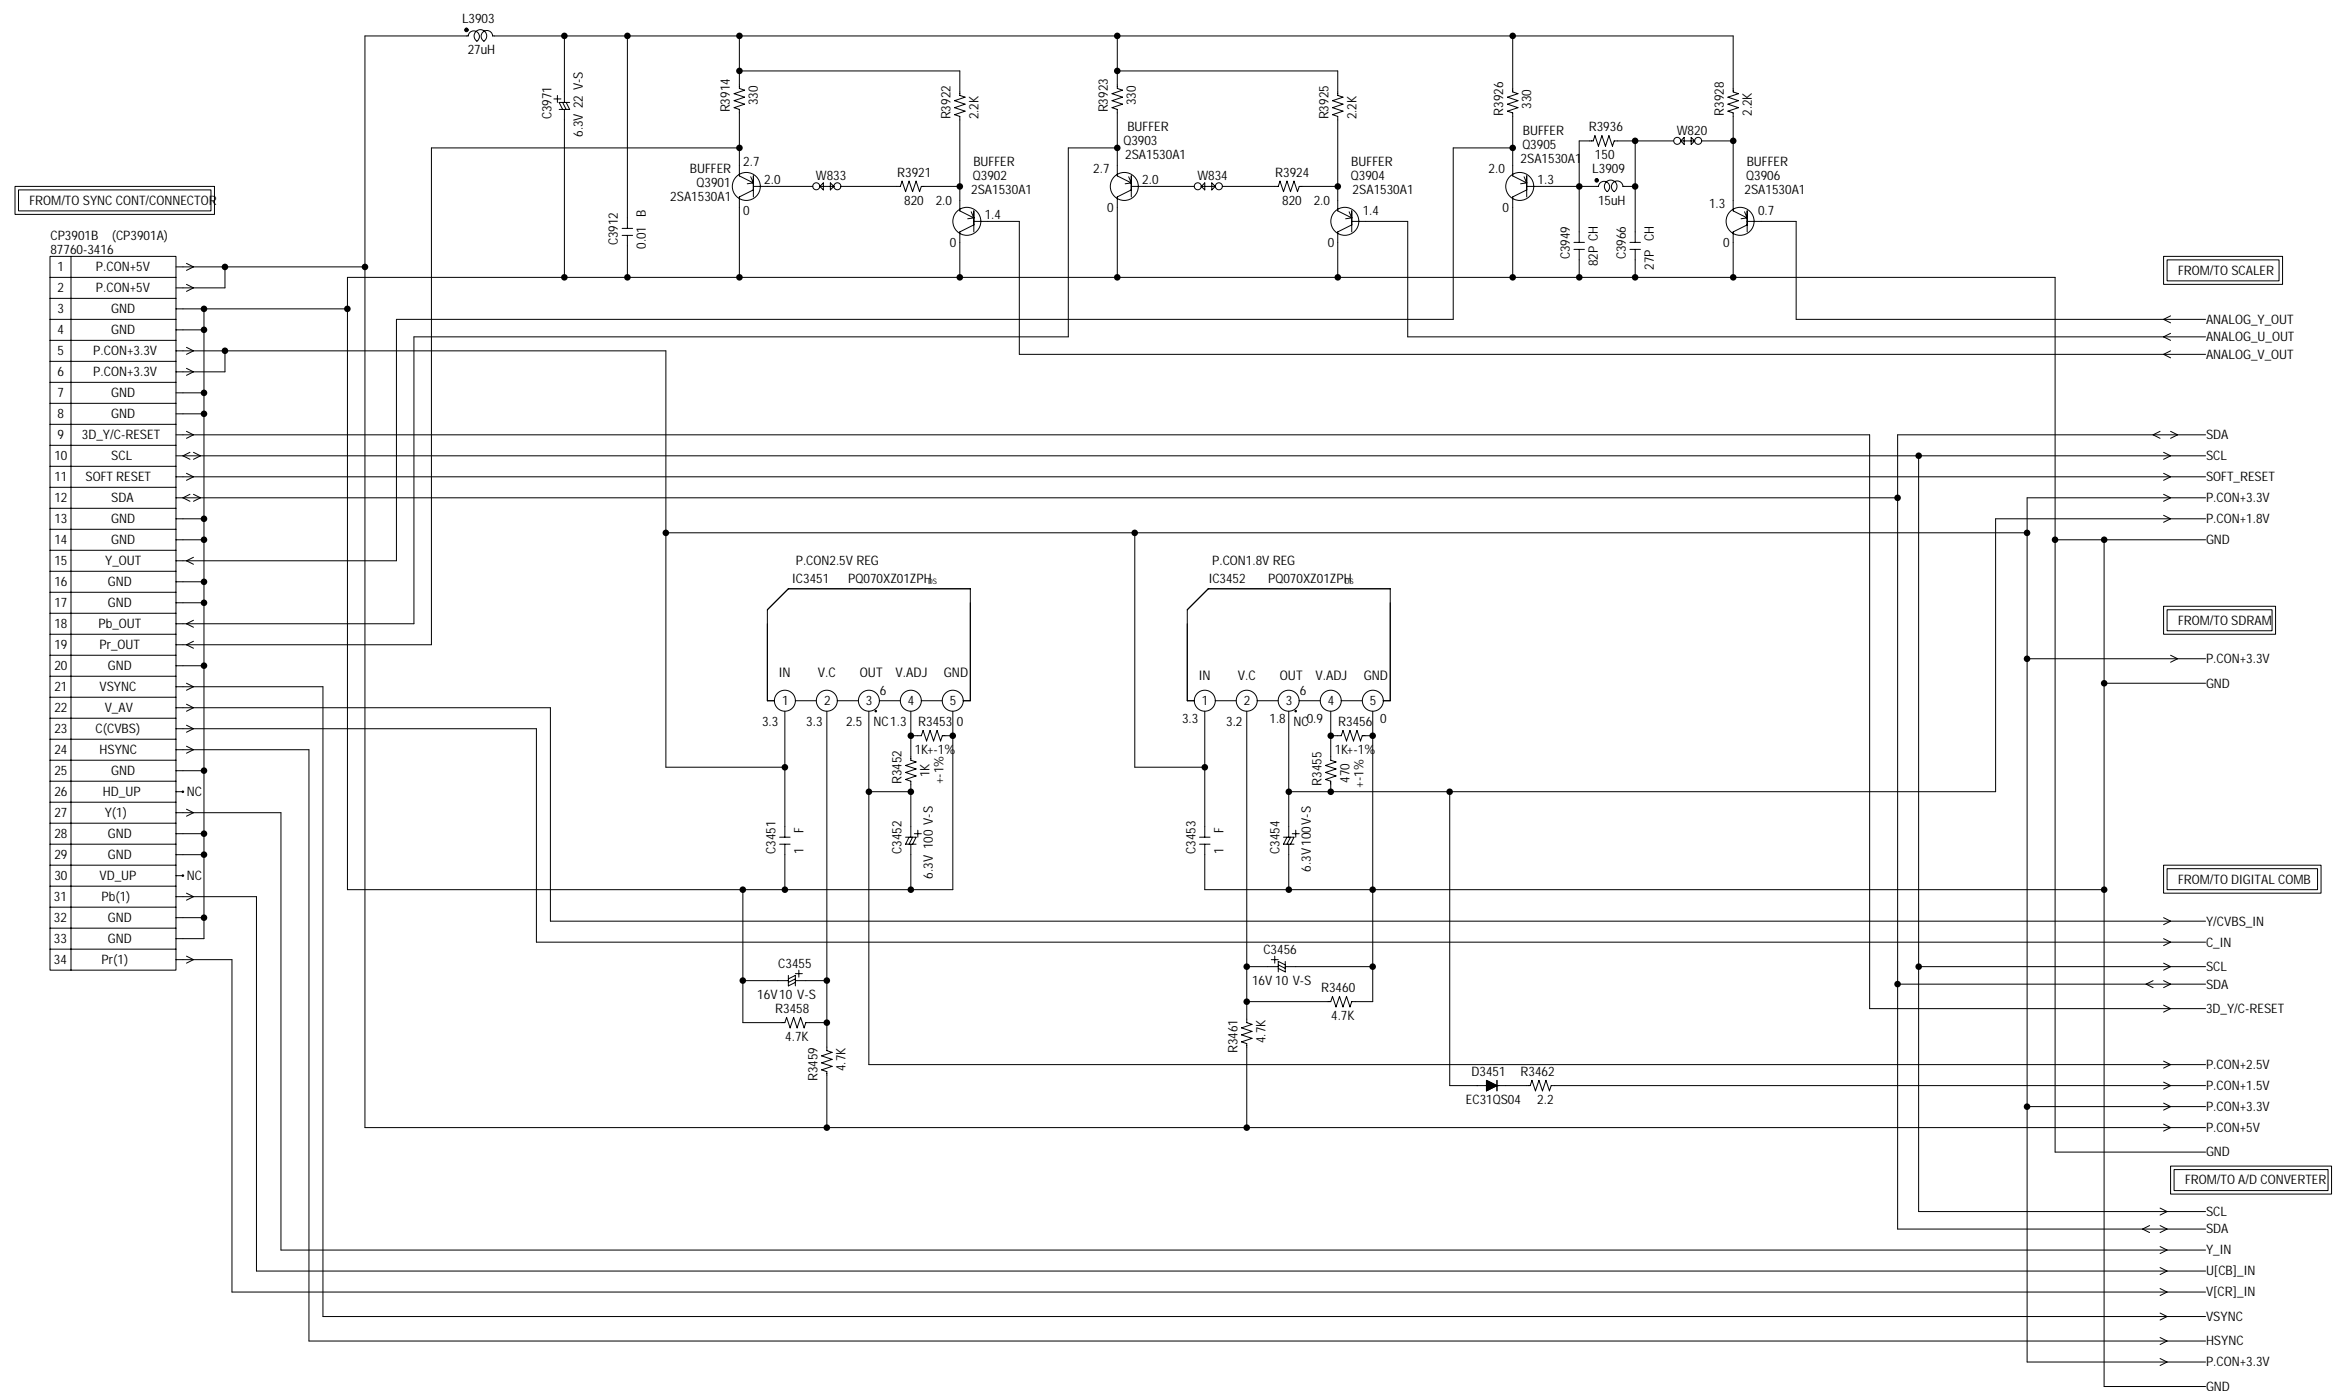


NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED  
WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST  
WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME  
OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.



CRT/SVM SCHEMATIC DIAGRAM (CRT PCB)

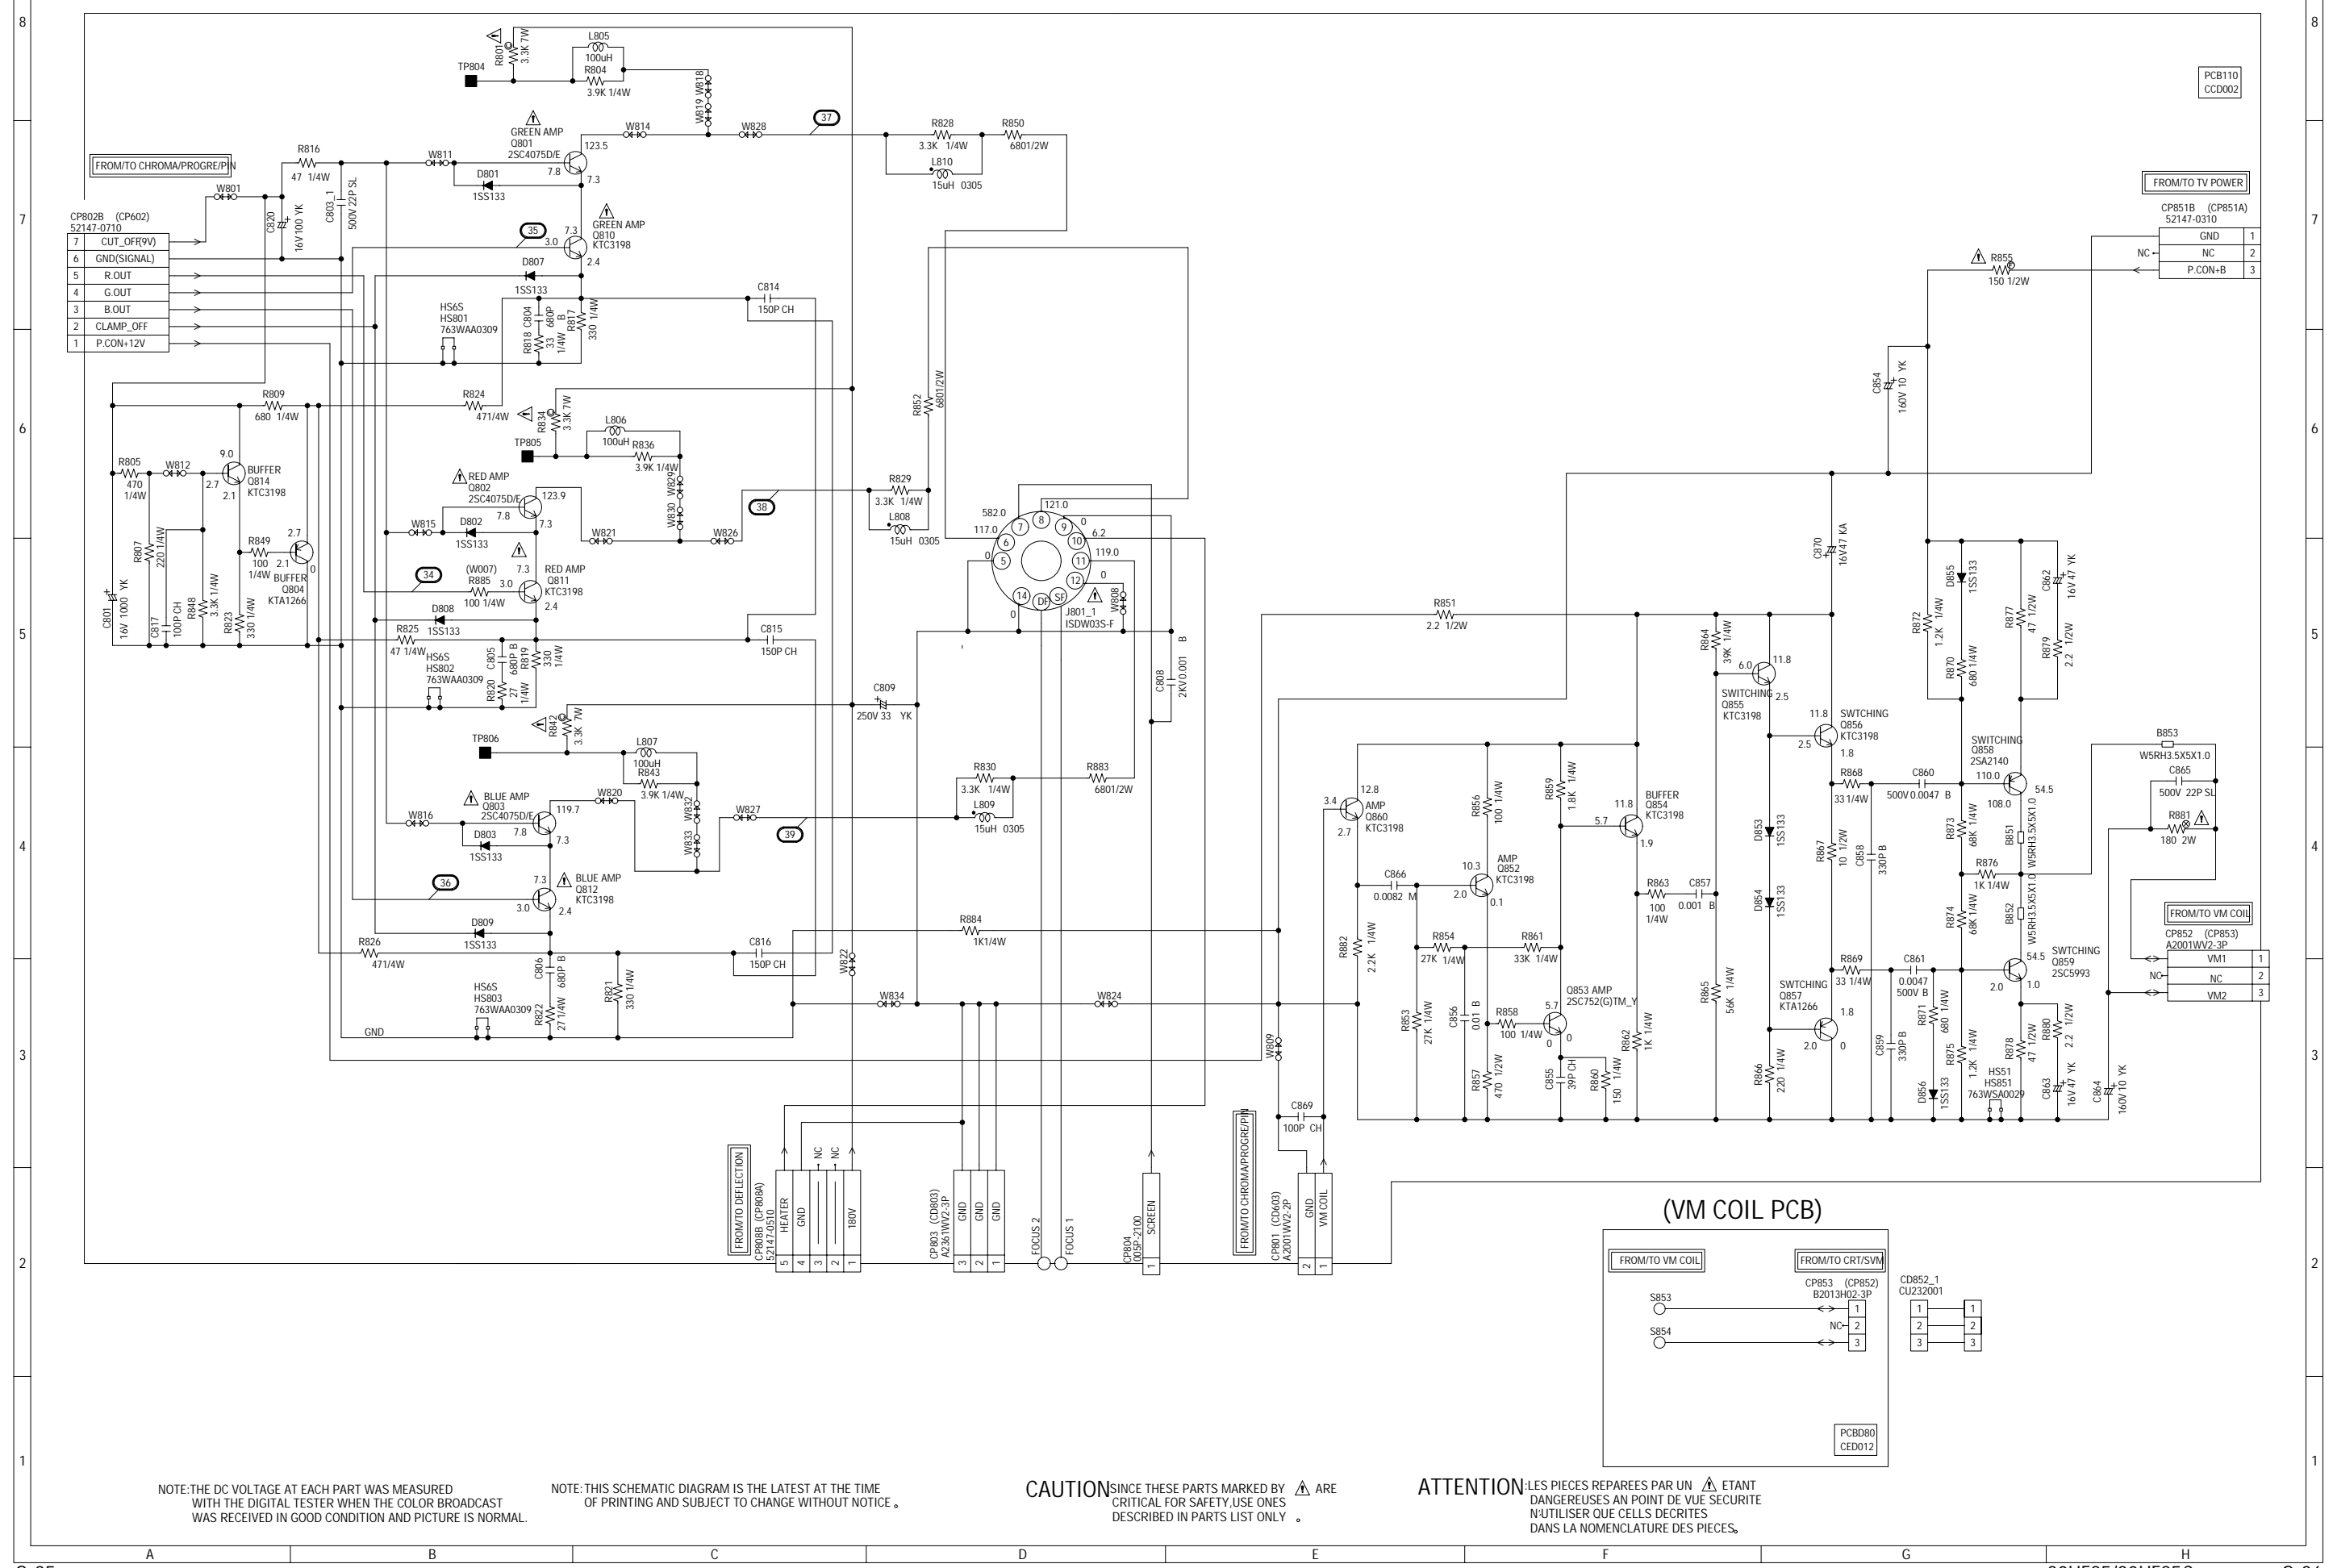

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.
















NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE.

CAUTION: SINCE THESE PARTS MARKED BY ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY.

ATTENTION: LES PIÈCES RÉPARÉES PAR UN ÉTANT DANGEREUSES AU POINT DE VUE SÉCURITÉ, N'UTILISER QUE CELLES DÉCRITES DANS LA NOMENCLATURE DES PIÈCES.

# WAVEFORMS

## CHROMA/PROGRESSIVE/ PIN CUSHION

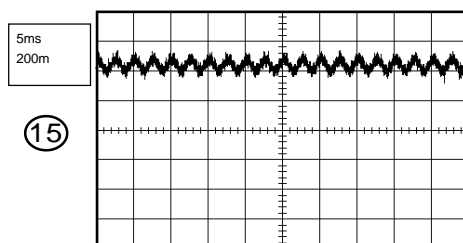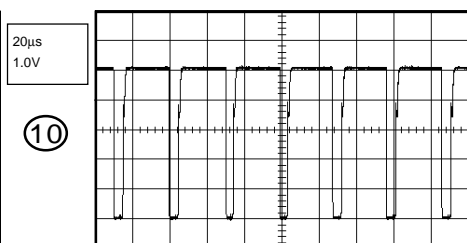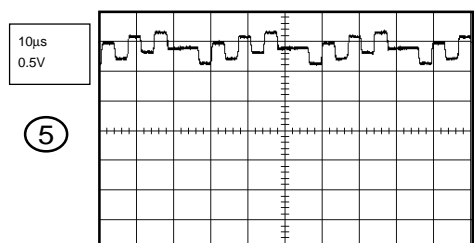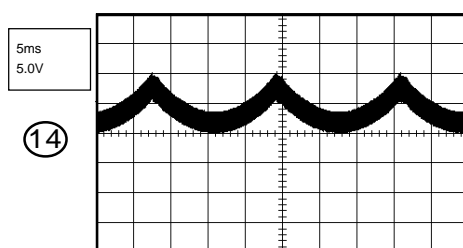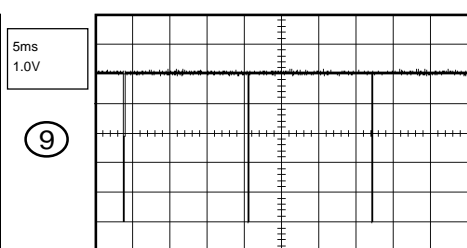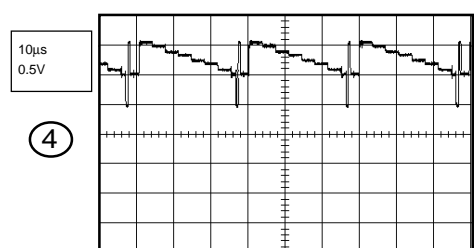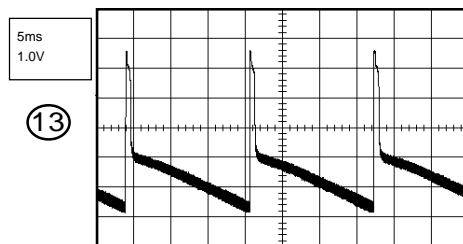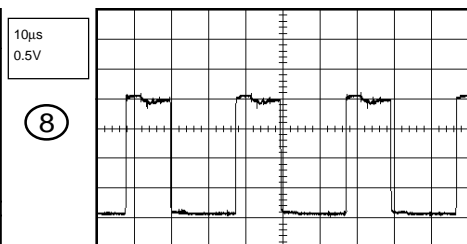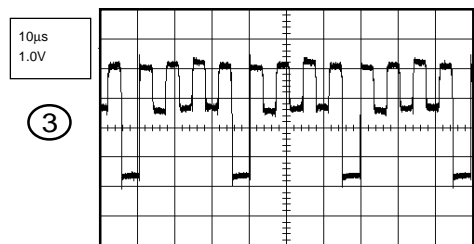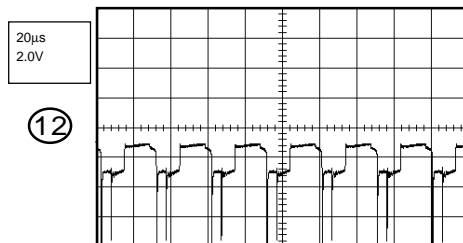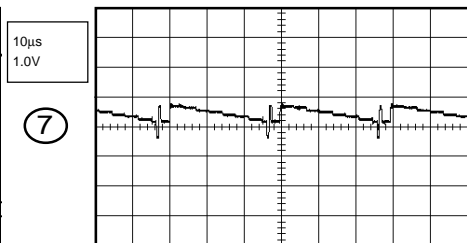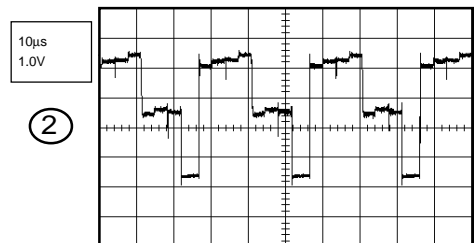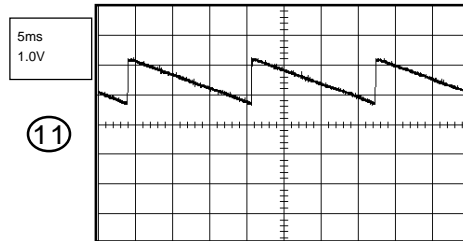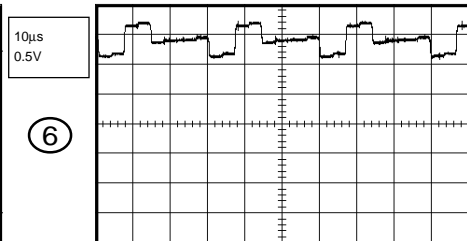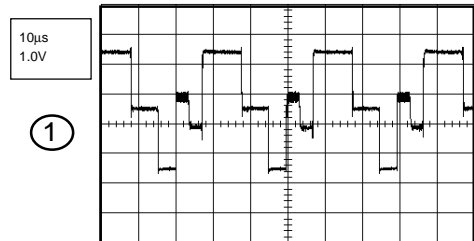






## DEFLECTION

## SOUND AMP/ FRONT AV







**NOTE:** The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

# WAVEFORMS





## MICON1

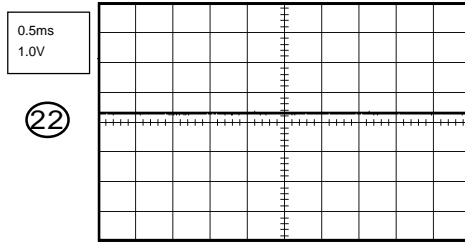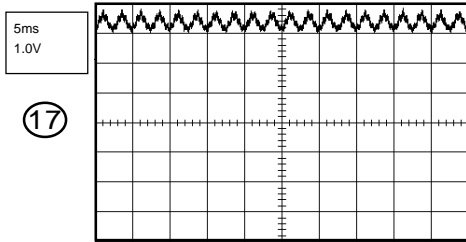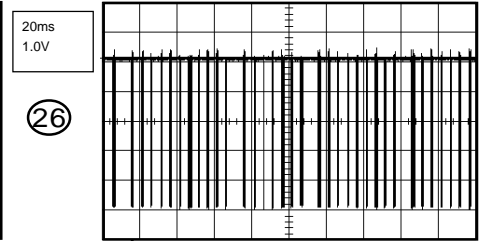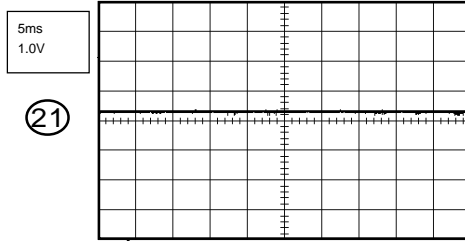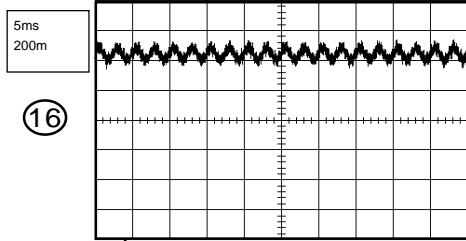

## STEREO




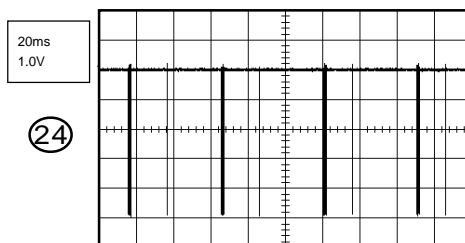
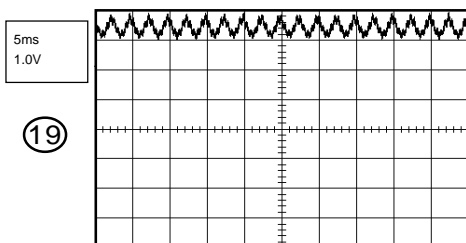
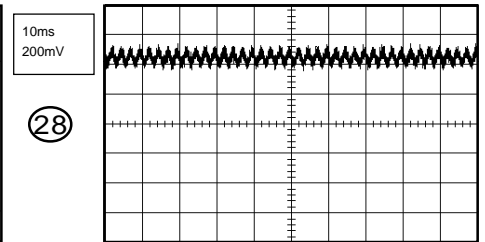
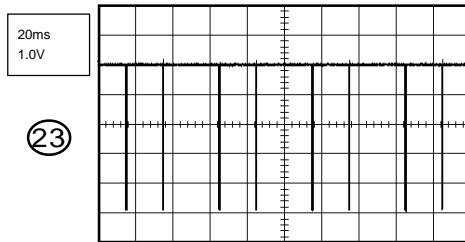
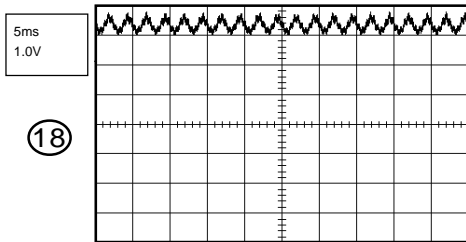
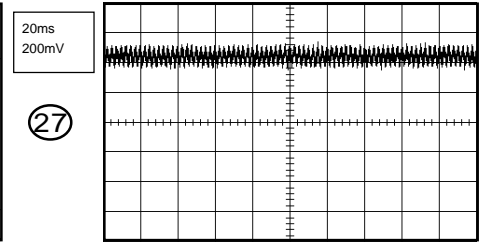


## SYNC COUNT/ CONNECTOR

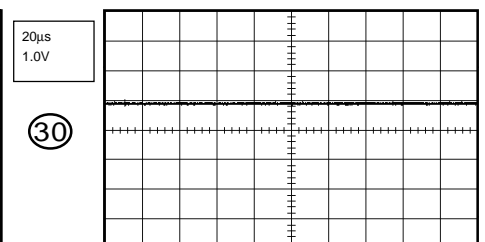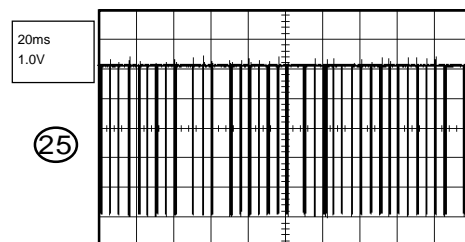
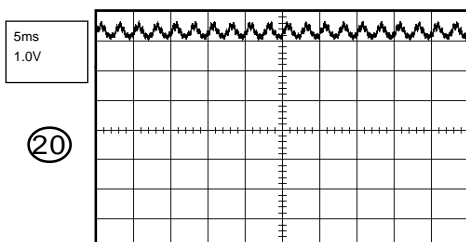
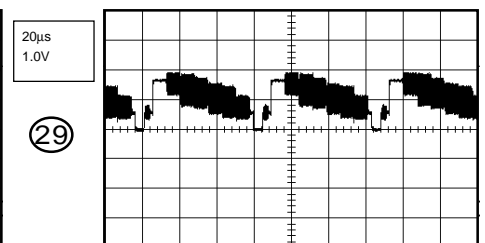


**NOTE:** The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.



## WAVEFORMS

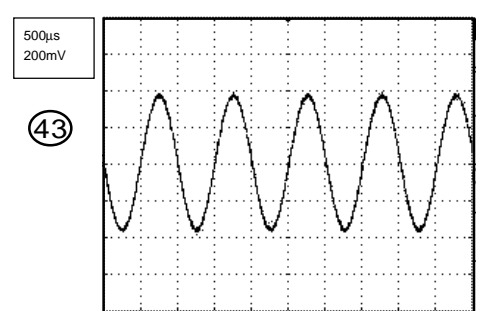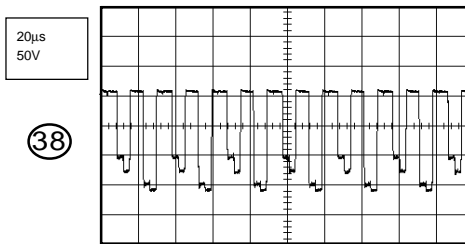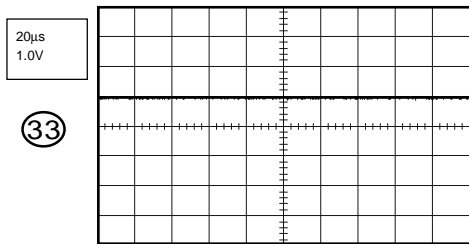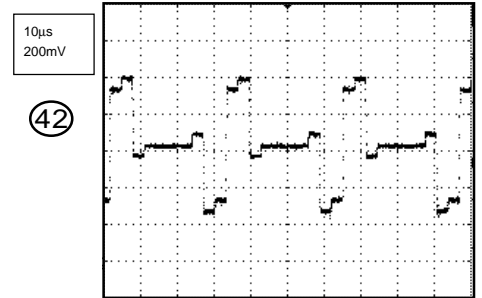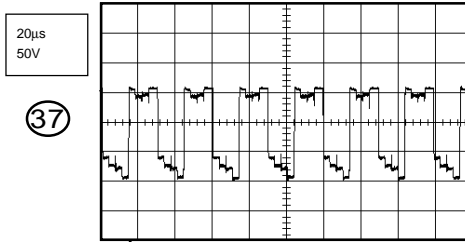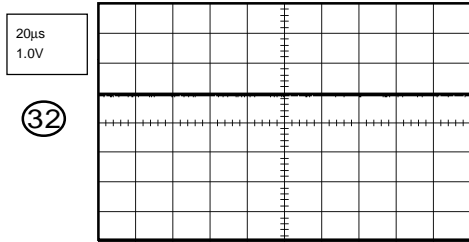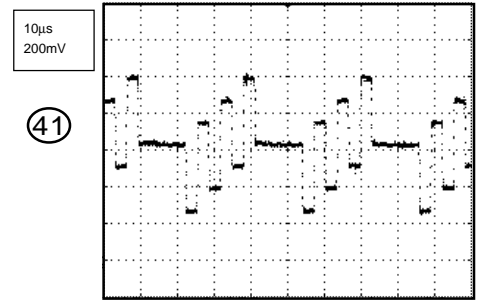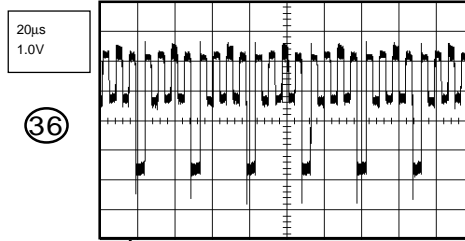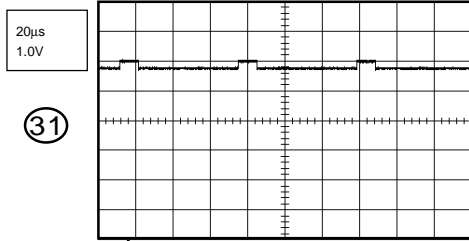


## CRT/CVM

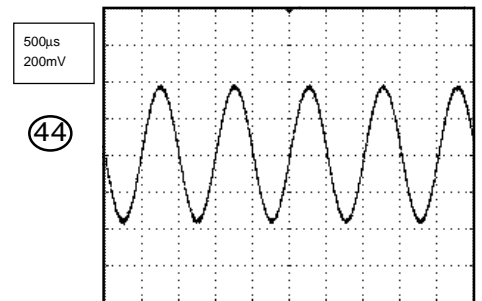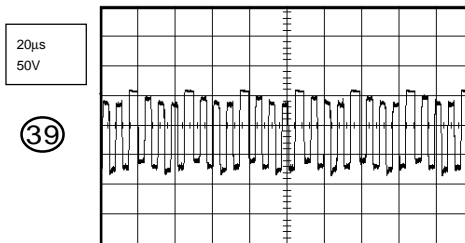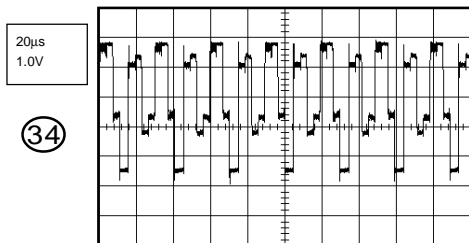

## INTERFACE

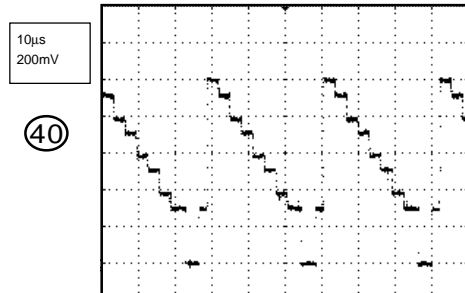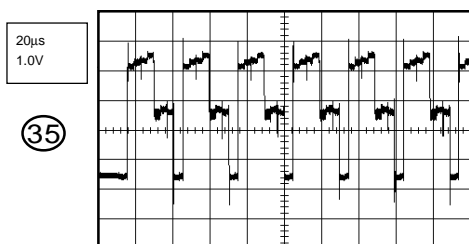


## MICON2

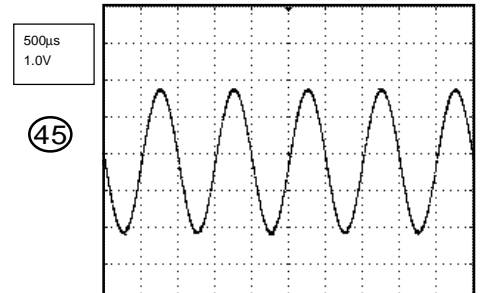


**NOTE:** The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

## WAVEFORMS

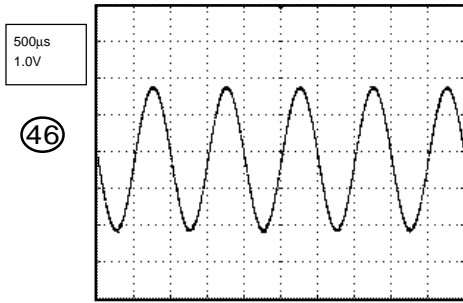


**NOTE:** The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

## MECHANICAL EXPLODED VIEW

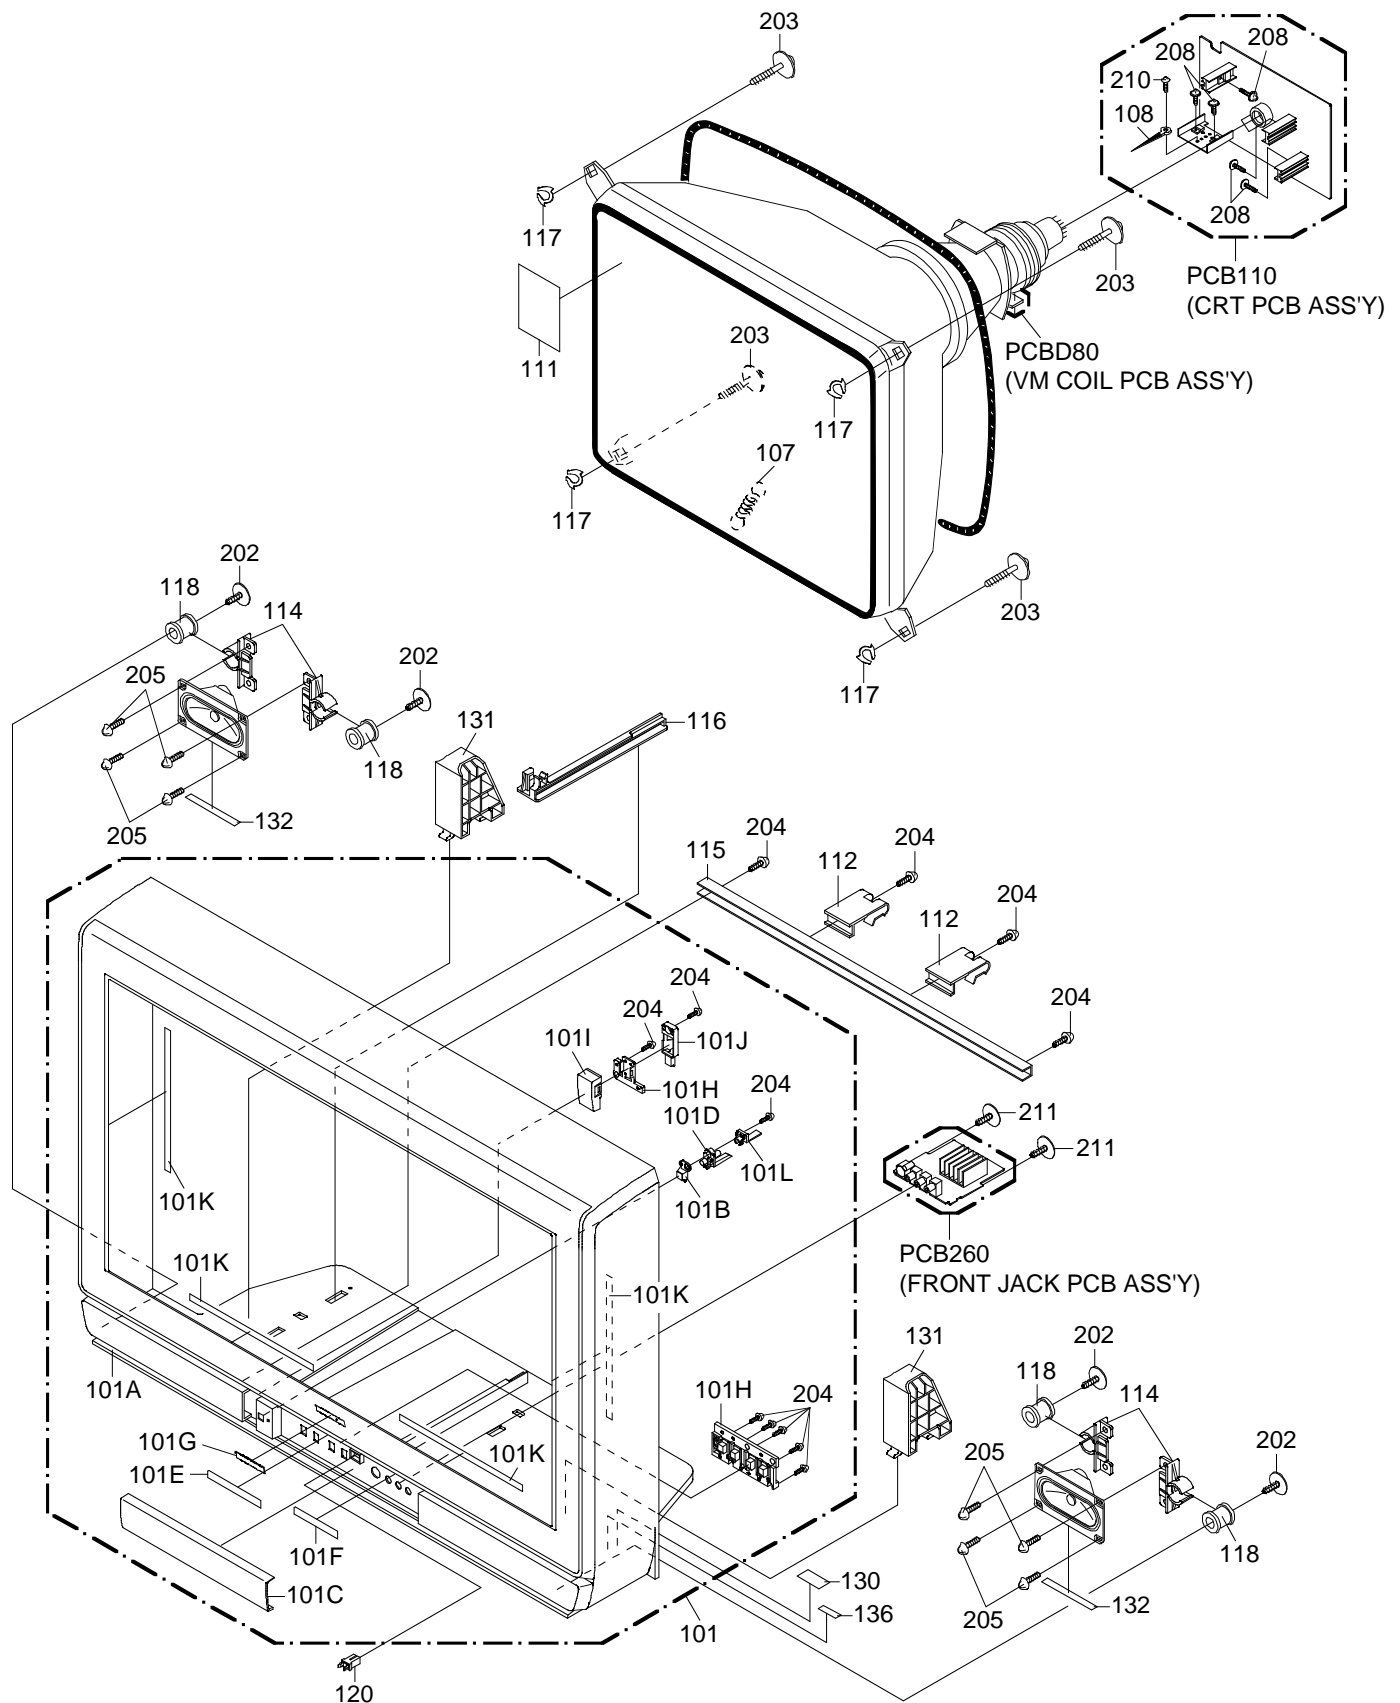



## MECHANICAL EXPLODED VIEW (PACKING DIAGRAM)

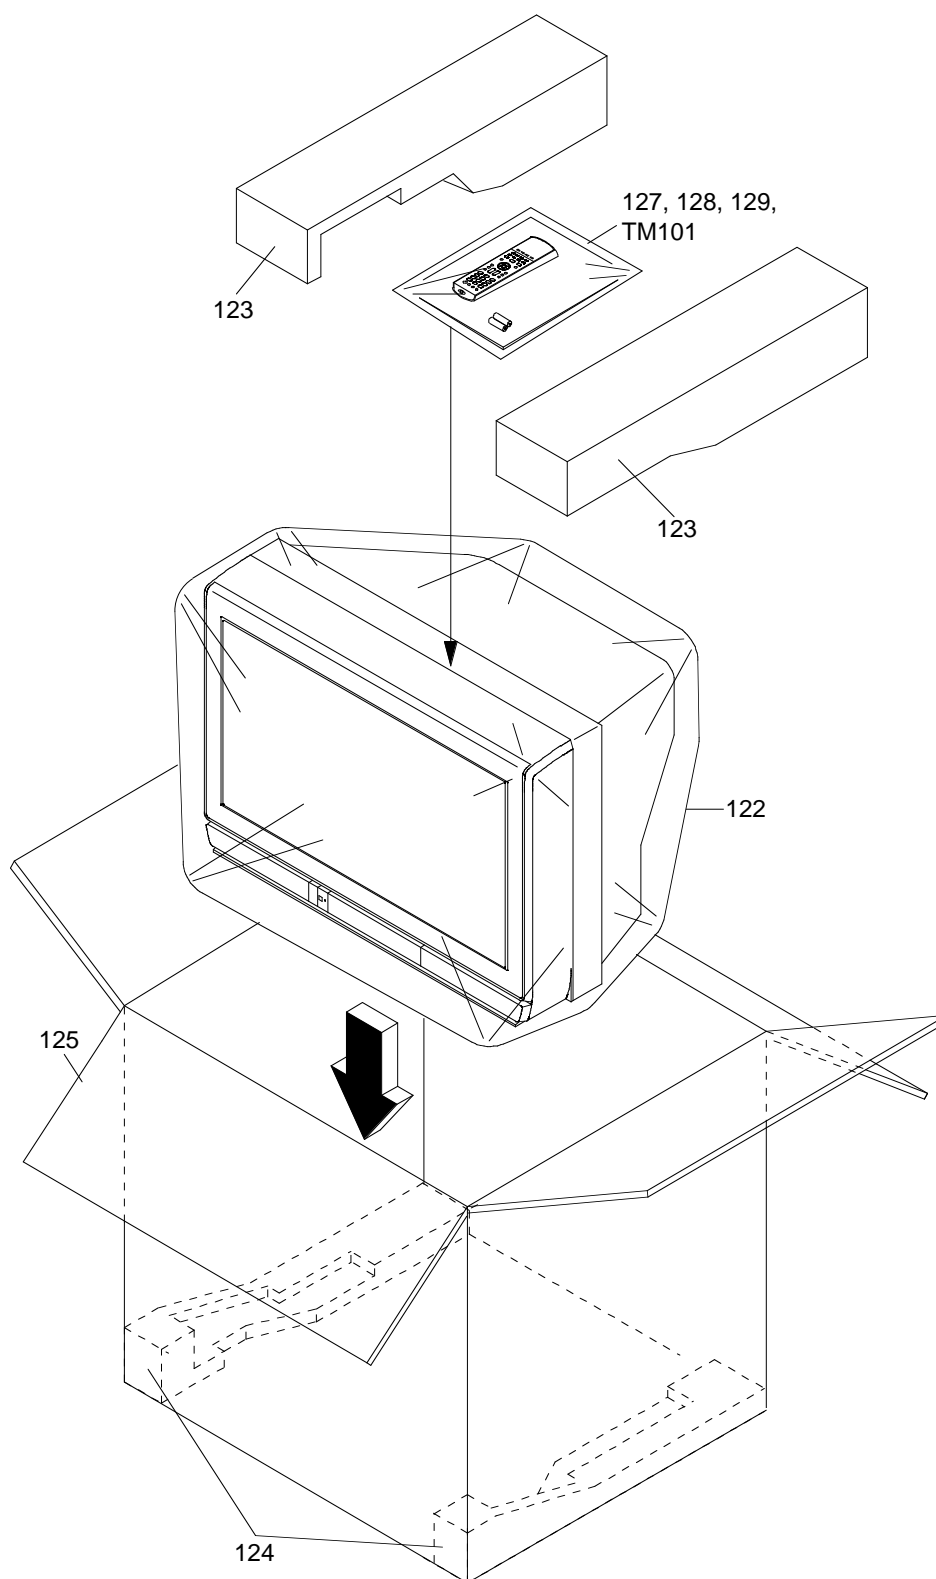



# MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
101	AE007192	7A7010070C	FRONT CABI ASS'Y	
101A	AE005746	701WPJ1314	CABINET,FRONT	
101B	AE004821	711WPA0210	PLATE,FRONT	
101C	AE006368	712WPJ0902	DOOR	
101D	AE004823	713WPA0334	GUIDE,REMOCON	
101E	AE004824	7230007791	SHEET,BUTTON	
101F	AE004825	7230007792	AV LABEL	
101G	AD302008	7235490036	BADGE,BRAND	
101H	AE004826	735WPB0299	BUTTON,FRAME	
101I	AE004827	735WPJ0242	BUTTON,POWER	
101J	AE004828	738WPA0106	STOPPER,BUTTON	
101K	AE003110	800WQ0A052	FELT SHEET	
101L	AE004963	761WPA0344	HOLDER,LED	
102	AE006013	7A7020038A	BACK CABI ASS'Y	
102A	AE004830	702WPA1085	CABINET,BACK	
102B	AE003020	800WQ0A050	FELT SHEET	
102C	AE003072	800WQ0A045	FELT SHEET	
102D	AE006371	7230007896	SHEET,JACK	
103	AE004831	752WSA0413	HDMI SHIELD COVER	
104	AE004832	752WSA0414	HDMI SHIELD BOTTOM	
105	AE005433	752WSA0448	PLATE,BOTTOM	
106	AE005202	752WSA0429	HDMI SHIELD COVER2	
107	BZ710660	741WUA0021	SPRING,EARTH	
108	BZ710039	8995034000	CORD CLIP UL CO.	
109	AE007193	7225490194	SHEET,RATING	
110	AE005203	752WSA0430	HDMI SHIELD BOTTOM2	
111	AE006373	7230007900	POP LABEL	
112	AE004839	761WPA0294	COIL HOLDER	
113	AE004838	752WSA0433	SHIELD,AV JACK	
114	AE005207	761WPAA115	HOLDER,SPEAKER	
115	AE005981	752WSAA083	ANGLE,FRONT	
116	AE004840	761WPA0325	HOLDER,PCB RAIL	
117	AE006374	769WSAA008	WASHER,CRT T=0.5	
118	AD300518	801WR00001	DAMPER,SPEAKER	
119	AE005576	761WPA0347	HOLDER,PCB-1	
120	AE004841	890DL20000	DOOR LATCHES(DL2)	
121	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
122	AE006094	791WHAA118	FILM BAG	
123	AE004842	792WHA0552	PACKAGE, TOP	
124	AE004843	792WHA0553	PACKAGE,BOTTOM	
125	AE006375	793WCD1611	GIFT BOX	
126	AE006376	A3S4010975	INSTRUCTION BOOK KIT	
127	AE005582	JA4KD200	POLYBAG,INSTRUCTION(RED CAUTION)	
128	AE004983	J2D60117A	REGISTRATION CARD	
129	AE006377	J3S40121A	INSTRUCTION BOOK	
131	AE005209	761WPA0334	HOLDER,CRT	
132	AE005279	800WF00062	CUSHION	55x5xT1
133	AE005579	761WPA0348	HOLDER,PCB-2	
134	AE005580	761WPA0349	HOLDER,PCB-3	
135	AD301370	899EFBA002	WIRING-CLIP	
201	AE003522	8117540B0U	SCREW,TAP TITE(B0) TRUSS	4x20
202	AE005398	8162540A6U	SCREW,TAPPING (B0) WASHER 18	
203	AE004848	8141H60D5U	SCREW,TAP TITE(P) GW20	6x45
204	AE003528	8110630A0U	SCREW,TAP TITE(P) BRAZIER	3x10
205	AE003529	811063080U	SCREW,TAP TITE(P) BRAZIER	3x8
206	AE005214	810213080U	SCREW,PAN	M3x8
207	AE003526	810923080U	SCREW,TAP TITE(B) BIND	3x8
208	AE003524	8109130A0U	SCREW,TAP TITE(B) WH7	3x10
209	AE005917	810963080Q	SCREW,TAP TITE(B) BRAZIER	3x8
210	AE003531	810763080U	SCREW,TAP TITE(S) BRAZIER	3x8
211	AE004850	8159130A0U	SCREW,TAPPING(B) WASHER12 PAN	3x10
212	AE004847	8117540A6U	SCREW,TAP TITE(B0) TRUSS	4x16

# MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
101	AE007192	7A7010070C	FRONT CABI ASS'Y	
101A	AE005746	701WPJ1314	CABINET,FRONT	
101B	AE004821	711WPA0210	PLATE,FRONT	
101C	AE006368	712WPJ0902	DOOR	
101D	AE004823	713WPA0334	GUIDE,REMOCON	
101E	AE004824	7230007791	SHEET,BUTTON	
101F	AE004825	7230007792	AV LABEL	
101G	AD302008	7235490036	BADGE,BRAND	
101H	AE004826	735WPB0299	BUTTON,FRAME	
101I	AE004827	735WPJ0242	BUTTON,POWER	
101J	AE004828	738WPA0106	STOPPER,BUTTON	
101K	AE003110	800WQ0A052	FELT SHEET	
101L	AE004963	761WPA0344	HOLDER,LED	
102	AE006013	7A7020038A	BACK CABI ASS'Y	
102A	AE004830	702WPA1085	CABINET,BACK	
102B	AE003020	800WQ0A050	FELT SHEET	
102C	AE003072	800WQ0A045	FELT SHEET	
102D	AE006371	7230007896	SHEET,JACK	
103	AE004831	752WSA0413	HDMI SHIELD COVER	
104	AE004832	752WSA0414	HDMI SHIELD BOTTOM	
105	AE005433	752WSA0448	PLATE,BOTTOM	
106	AE005202	752WSA0429	HDMI SHIELD COVER2	
107	BZ710660	741WUA0021	SPRING,EARTH	
108	BZ710039	8995034000	CORD CLIP UL CO.	
109	AE007194	7225490196	SHEET,RATING	
110	AE005203	752WSA0430	HDMI SHIELD BOTTOM2	
111	AE006380	7230007922	POP LABEL	
112	AE004839	761WPA0294	COIL HOLDER	
113	AE004838	752WSA0433	SHIELD,AV JACK	
114	AE005207	761WPAA115	HOLDER,SPEAKER	
115	AE005981	752WSAA083	ANGLE,FRONT	
116	AE004840	761WPA0325	HOLDER,PCB RAIL	
117	AE006374	769WSAA008	WASHER,CRT T=0.5	
118	AD300518	801WR00001	DAMPER,SPEAKER	
119	AE005576	761WPA0347	HOLDER,PCB-1	
120	AE004841	890DL20000	DOOR LATCHES(DL2)	
121	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
122	AE006094	791WHAA118	FILM BAG	
123	AE004842	792WHA0552	PACKAGE, TOP	
124	AE004843	792WHA0553	PACKAGE,BOTTOM	
125	AE006381	793WCD1629	GIFT BOX	
126	AE006382	A3S4020975	INSTRUCTION BOOK KIT	
127	AE006098	JA4KD100	POLYBAG,INSTRUCTION(RED CAUTION)	
129	AE006383	J3S40221A	INSTRUCTION BOOK	
130	AE006166	722000A267	SHEET,CSA WARNING	
131	AE005209	761WPA0334	HOLDER,CRT	
132	AE005279	800WF00062	CUSHION	55x5xT1
133	AE005579	761WPA0348	HOLDER,PCB-2	
134	AE005580	761WPA0349	HOLDER,PCB-3	
135	AD301370	899EFBA002	WIRING-CLIP	
136	AE006242	722000A266	SHEET,HWC	
201	AE003522	8117540B0U	SCREW,TAP TITE(B0) TRUSS	4x20
202	AE005398	8162540A6U	SCREW,TAPPING (B0) WASHER 18	
203	AE004848	8141H60D5U	SCREW,TAP TITE(P) GW20	6x45
204	AE003528	8110630A0U	SCREW,TAP TITE(P) BRAZIER	3x10
205	AE003529	811063080U	SCREW,TAP TITE(P) BRAZIER	3x8
206	AE005214	810213080U	SCREW,PAN	M3x8
207	AE003526	810923080U	SCREW,TAP TITE(B) BIND	3x8
208	AE003524	8109130A0U	SCREW,TAP TITE(B) WH7	3x10
209	AE005917	810963080Q	SCREW,TAP TITE(B) BRAZIER	3x8
210	AE003531	810763080U	SCREW,TAP TITE(S) BRAZIER	3x8
211	AE004850	8159130A0U	SCREW,TAPPING(B) WASHER12 PAN	3x10
212	AE004847	8117540A6U	SCREW,TAP TITE(B0) TRUSS	4x16

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>RESISTORS</b>			
△ R401	AE002516	R4X5T6222F	R,METAL 2.2K OHM 1/6W
△ R403	BZ210105	R4X5T6183F	R,METAL 18K OHM 1/6W
△ R405	BZ210231	R4X5T6153F	R,METAL 15K OHM 1/6W
△ R406	AD300039	R3X18A680J	R,METAL OXIDE 68 OHM 2W
△ R408	BZ210063	R3X181R22J	R,METAL OXIDE 0.22 OHM 1W
△ R413	AD300600	R655812R2J	R,FUSE 2.2 OHM 1W
△ R416	AD300600	R655812R2J	R,FUSE 2.2 OHM 1W
△ R417	AD302132	R3X18A271J	R,METAL OXIDE 270 OHM 2W
△ R429	BZ210053	R002T22R2J	RC 2.2 OHM 1/2W
△ R430	AD300421	R5X2CF1R8J	R,CEMENT 1.8 OHM 10W
△ R434	BZ210053	R002T22R2J	RC 2.2 OHM 1/2W
△ R438	AE005419	R3X181272J	R,METAL OXIDE 2.7K OHM 1W
△ R445	AD301311	R655813R3J	R,FUSE 3.3 OHM 1W
△ R455	BZ210021	R65582680J	R,FUSE 68 OHM 1/2W
R460	AE004808	R0G3K2221K	RC 220 OHM 1/2W
△ R462	BZ210211	R3X28B221J	R,METAL OXIDE 220 OHM 3W
△ R468	BZ210003	R3K181102J	R,METAL OXIDE 1K OHM 1W
△ R472	AD302347	R3X181120J	R,METAL OXIDE 12 OHM 1W
△ R473	AD302347	R3X181120J	R,METAL OXIDE 12 OHM 1W
△ R483	AE000147	R3X181220J	R,METAL OXIDE 22 OHM 1W
△ R492	AE002520	R3X181100J	R,METAL OXIDE 10 OHM 1W
△ R501	BZ210233	R4X5T6272F	R,METAL 2.7K OHM 1/6W
△ R503	BZ210206	R002T2155J	RC 1.5M OHM 1/2W
△ R508	AD301203	R002T4101J	RC 100 OHM 1/4W
△ R510	BZ210080	R0G3K2275K	RC 2.7M OHM 1/2W
△ R516	BZ210063	R3X181R22J	R,METAL OXIDE 0.22 OHM 1W
△ R517	AE005735	R63881R22J	R,FUSE 0.22 OHM 1W
△ R518	BZ210063	R3X181R22J	R,METAL OXIDE 0.22 OHM 1W
△ R524	AE001073	R3X18A331J	R,METAL OXIDE 330 OHM 2W
△ R525	BZ210059	R3X1812R2J	R,METAL OXIDE 2.2 OHM 1W
△ R530	AE004810	R5X2CF010J	R,CEMENT 1 OHM 10W
△ R545	AE003270	R3X28B2R7J	R,METAL OXIDE 2.7 OHM 3W
△ R548	BZ210051	R3X18AR47J	R,METAL OXIDE 0.47 OHM 2W
△ R559	BZ210220	R002T2224J	RC 220K OHM 1/2W
△ R560	AE005234	R5X2AER47J	R,CEMENT 0.47 OHM 7W
△ R563	BZ210078	R65584101J	R,FUSE 100 OHM 1/4W
△ R801	BZ210154	R5X2CE332J	R,CEMENT 3.3K OHM 7W
△ R834	BZ210154	R5X2CE332J	R,CEMENT 3.3K OHM 7W
△ R842	BZ210154	R5X2CE332J	R,CEMENT 3.3K OHM 7W
△ R855	BZ210185	R65582151J	R,FUSE 150 OHM 1/2W
△ R881	BZ210246	R3X18A181J	R,METAL OXIDE 180 OHM 2W
△ R3411	AD301597	R3X18AR39J	R,METAL OXIDE 0.39 OHM 2W
△ R3412	AD301597	R3X18AR39J	R,METAL OXIDE 0.39 OHM 2W
<b>CAPACITORS</b>			
△ C403	BZ110195	E02LU8220M	CE 22 UF 100V
△ C404	AE004798	E61DFB470M	CE 47 UF 160V
C412	AE004366	P4J7F3304J	CMPP 0.3 UF 250V PMS
C417	AE000606	P3N1F5103J	CPP 0.01 UF 630V
△ C418	AE004807	P4N8FK852H	CMPP 0.0085UF 1.5KV
C424	AE003039	P4N8FK682H	CMPP 0.0068UF 1.5KV
C425	AE004367	P4J7F3335J	CMPP 3.3 UF 250V PMS
C426	BZ110204	E0ELFD220M	CE 22 UF 250V
△ C429	AD301434	E02LU4101M	CE 100 UF 35V
△ C430	BZ110101	E5EZF3222M	CE 2200 UF 25V
C433	BZ110239	C03L0R7L2K	CC 330 PF 2KV R
△ C434	BZ110124	E5EZF4222M	CE 2200 UF 35V
C435	AE003039	P4N8FK682H	CMPP 0.0068UF 1.5KV
C438	AE004933	P4J7F3333J	CMPP 0.033 UF 250V PMS
C445	AE000606	P3N1F5103J	CPP 0.01 UF 630V
△ C446	BZ110225	E5EZF2220M	CE 22 UF 250V
△ C502	BZ110025	P2122B224M	CMP 0.22 UF 275V ECQUL
△ C505	BZ110035	P2122B104M	CMP 0.1 UF 275V ECQUL
C506	AE002229	P411F4393J	CMPP 0.039 UF 400V ECWF
△ C509	BZ110084	E5EZF2220M	CE 22 UF 200V
C512	BZ110202	C0PLRR713K	CC 0.001 UF 2KV R
△ C517	AE004934	CD39B0MH2K	CC 220 PF 250V
△ C519	AE000950	CD39E0ME3M	CC 0.0015UF 250V
△ C525	BZ110222	CD39E0MH3M	CC 0.0022UF 250V
△ C528	BZ110226	C0JBB07H3K	CC 0.0022UF 2KV B
△ C529	BZ110226	C0JBB07H3K	CC 0.0022UF 2KV B
△ C530	AE003883	E51DFC102M	CE 1000 UF 200V

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>CAPACITORS</b>			
△ C536	BZ110224	E5EZF3332M	CE 3300 UF 25V
△ C541	BZ110076	E02LF1222M	CE 2200 UF 10V
△ C542	BZ110053	E02LF3102M	CE 1000 UF 25V
C543	BZ110176	C03L0R7Q2K	CC 470 PF 2KV R
△ C545	AE004799	E61SFC221M	CE 220 UF 200V
△ C548	BZ110055	E5EZF4102M	CE 1000 UF 35V
C549	BZ110183	C03L0R7W2K	CC 820 PF 2KV R
C567	BZ110209	E0ELF3222M	CE 2200 UF 25V
△ C572	AE005174	E61FF1222D	CE 2200 UF 10V
C808	AE003828	C13DB0713K	CC 0.001 UF 2KV B
C809	AD301347	E0ELFD330M	CE 33 UF 250V
C870	AE000272	E50HU2470M	CE 47 UF 16V
C3406	AE004935	E02LF0332M	CE 3300 UF 6.3V
<b>DIODES</b>			
D001	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
D101	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D102	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D103	BZ410064	D97U03R91B	DIODE,ZENER MTZJ3.9B T-77
D104	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D105	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D106	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D107	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D108	BZ410064	D97U03R91B	DIODE,ZENER MTZJ3.9B T-77
D109	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D110	BZ410064	D97U03R91B	DIODE,ZENER MTZJ3.9B T-77
D111	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D112	BZ410012	D28TQS04N0	DIODE,SCHOTTKY 11EQS04N-TA1B2
△ D402	BZ410063	D2WTAU02A0	DIODE,SILICON AU02A-EIC
△ D403	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
△ D404	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
△ D405	AE004792	DCBFMQ3GU0	DIODE FMQ-3GULF027-102
D406	BZ410103	D2WXGP10J0	DIODE,RECTIFIER RGP10J-EIC
D407	BZ410094	D97U01501B	DIODE,ZENER MTZJ15B T-77
△ D408	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D409	BZ410094	D97U01501B	DIODE,ZENER MTZJ15B T-77
D410	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
D411	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
△ D412	BZ410063	D2WTAU02A0	DIODE,SILICON AU02A-EIC
D413	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
D414	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
△ D415	BZ410063	D2WTAU02A0	DIODE,SILICON AU02A-EIC
D417	AE004359	D97U03901B	DIODE,ZENER MTZJ39B T-77
D418	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
D420	BZ410094	D97U01501B	DIODE,ZENER MTZJ15B T-77
D421	AE004790	D2WX0216E0	DIODE,SILICON RGP02-16E
D422	AE004790	D2WX0216E0	DIODE,SILICON RGP02-16E
D423	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D424	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
△ D501	BZ410031	D6CE24110A	DIODE VARISTA ENE241D-10A-Q6
D502	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D503	AD302208	D97U03R31B	DIODE,ZENER MTZJ3.3B T-77
D504	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D505	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
△ D506	BZ410085	D2WXN40050	DIODE,SILICON 1N4005-EIC
△ D507	BZ410085	D2WXN40050	DIODE,SILICON 1N4005-EIC
D508	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
△ D509	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
△ D510	BZ410085	D2WXN40050	DIODE,SILICON 1N4005-EIC
△ D511	BZ410085	D2WXN40050	DIODE,SILICON 1N4005-EIC
D512	BZ410114	D2WXGP10K0	DIODE RECTIFIER RGP10K-EIC
D514	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
△ D515	AE006060	D28T0ERB20	DIODE,RECTIFIER 10ERB20-TA1B2
D516	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D517	AD300671	D97U01801B	DIODE,ZENER MTZJ18B T-77
D518	BZ410066	D97U06R21B	DIODE,ZENER MTZJ6.2B T-77
D519	AD300731	D2WXN49370	DIODE,SILICON 1N4937
△ D520	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D521	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D522	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D523	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D524	AD300731	D2WXN49370	DIODE,SILICON 1N4937

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>DIODES</b>			
△ D525	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D526	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D527	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D528	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
D529	AD300671	D97U01801B	DIODE,ZENER MTZJ18B T-77
△ D530	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
D531	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
△ D532	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
△ D533	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
△ D534	AE003872	DOU002720M	DIODE,VARISTA DSS-272M-S00B
D535	BZ410064	D97U03R91B	DIODE,ZENER MTZJ3.9B T-77
△ D536	AD301980	D2CF2016L0	DIODE,SILICON FE201-6L49
△ D537	BZ410091	D230PF6DT0	DIODE,SILICON FEPF6DT
△ D539	BZ410091	D230PF6DT0	DIODE,SILICON FEPF6DT
D540	AD300731	D2WXN49370	DIODE,SILICON 1N4937
△ D541	AD301980	D2CF2016L0	DIODE,SILICON FE201-6L49
D543	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D544	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D546	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D547	BZ410084	D97U01101B	DIODE,ZENER MTZJ11B T-77
D548	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D549	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
D550	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
△ D551	AE004936	D6E027110A	DIODE,VARISTA ENE271D-10A
D552	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D554	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D601	AE006394	D28T0ERB60	DIODE,RECTIFIER 10ERB60-TA1B2
D606	AE004358	D97U02R01B	DIODE,ZENER MTZJ2.0B T-77
D607	AD300069	D97U02701B	DIODE,ZENER MTZJ27B T-77
D608	AE006394	D28T0ERB60	DIODE,RECTIFIER 10ERB60-TA1B2
D609	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D610	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D611	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D612	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D613	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D614	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D615	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D616	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D617	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D618	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D619	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D621	BZ410034	D97U01301B	DIODE,ZENER MTZJ13B T-77
D622	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D701	BZ410022	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77
D702	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D703	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D704	BZ410022	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77
D705	BZ410084	D97U01101B	DIODE,ZENER MTZJ11B T-77
D801	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D802	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D803	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D807	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D808	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D809	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D853	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D854	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D855	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D856	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D901	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D902	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D903	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D1001	AE004643	D28R1QS040	DIODE EC31QS04-TE12L
D1002	AE004643	D28R1QS040	DIODE EC31QS04-TE12L
D1003	AE004643	D28R1QS040	DIODE EC31QS04-TE12L
D1004	AE004643	D28R1QS040	DIODE EC31QS04-TE12L
D1091	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D2001	BZ410077	D2WXS1400	DIODE,SCHOTTKY SB140-EIC
D2009	BZ410054	0021721150	LED SLR-342VCT32
D2101	AE004795	DE7RB5R62B	DIODE,ZENER UDZS5.6B TE-17
D2102	AE004795	DE7RB5R62B	DIODE,ZENER UDZS5.6B TE-17
D2103	AE004795	DE7RB5R62B	DIODE,ZENER UDZS5.6B TE-17

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>DIODES</b>			
D3401	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
D3403	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
D3404	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
D3451	AE004643	D28R1QS040	DIODE EC31QS04-TE12L
D3601	AE004937	D77R1A1R10	DIODE,VARISTA AVRL161A1R1NT
D3602	AE004795	DE7RB5R62B	DIODE,ZENER UDZS5.6B TE-17
D3603	AE004937	D77R1A1R10	DIODE,VARISTA AVRL161A1R1NT
D3604	AE004793	DD7R60L400	DIODE,SCHOTTKY RB160L-40-TE25
D3605	AE004793	DD7R60L400	DIODE,SCHOTTKY RB160L-40-TE25
D3609	AE004794	DE7RB3R32B	DIODE,ZENER UDZS3.3B TE-17
D3613	AE004794	DE7RB3R32B	DIODE,ZENER UDZS3.3B TE-17
<b>ICS</b>			
IC101	AE005608	I56F57118A	IC OEC7118A
IC102	79097849	I9UF032290	IC PST3229NR
IC103	79097849	I9UF032290	IC PST3229NR
IC199	AE006400	S3S4010E01	MEMORY DATA AT24C256N-10SU-2.7
△ IC401	BZ611117	I03TD80410	IC LA78041
△ IC402	AD302356	I03S065100	IC LA6510
△ IC501	AE002809	000220002W	PHOTO COUPLER PS2561AL1-1-V(W)
△ IC502	AE006398	I2BT067530	IC STR-W6753
△ IC503	AE002809	000220002W	PHOTO COUPLER PS2561AL1-1-V(W)
△ IC504	AD302211	I1KJ9A431A	IC KIA431A-AT
△ IC505	AD301929	I1KA78R090	IC KIA278R09PI
△ IC506	AD302211	I1KJ9A431A	IC KIA431A-AT
IC602	AE004361	I05DD13170	IC TA1317ANG
IC603	AE004362	I05DE13600	IC TA1360ANG
IC701	AE002728	I01F05853B	IC AN15853B-E1
IC702	AE004651	I0QF025840	IC NJM2584AM(Te1)
IC705	AE004800	I05FE13830	IC TA1383FG
IC706	AE004651	I0QF025840	IC NJM2584AM(Te1)
IC707	BZ611104	I0QF02533V	IC NJM2533V(Te2)
IC902	AE006396	I19FFP3440	IC MSP3440G-QA-C12-001(BBE)
△ IC1001	AE006397	I1MFPA2020	IC TA2024-ASE
IC1501	AE005607	I55FE0A920	IC TC90A92AFG
IC2101	AE005610	IFSK0883C0	IC MST9883C-LF-110
△ IC3400	BZ6111089	I1KA98R09A	IC KIA78R09API
△ IC3401	AD301931	I1KA78R050	IC KIA278R05PI
△ IC3402	AE003914	I1KA98R330	IC KIA278R33PI
IC3451	AE006395	I0GF91ZPH0	IC PQ070XZ01ZPH
IC3452	AE006395	I0GF91ZPH0	IC PQ070XZ01ZPH
IC3601	AE004654	I1KF98D330	IC KIA78D33F
IC3602	AE004654	I1KF98D330	IC KIA78D33F
IC3604	AE001295	I0QJ045800	IC NJM4580M(Te1)
IC3605	AE004805	I5PF099930	IC SI9993CTG100
IC3606	AE006401	S3S4010E02	MEMORY DATA BR24L02F-WE2
IC3607	AE004802	I1FF043340	IC CS4334-KSZR
IC3608	AE006402	S3S4010E03	MEMORY DATA BR24L32F-WE2
IC3611	AE006399	ICMF08RD20	IC SST89E58RD2-40-C-TQJE
IC3612	AE003923	I5CF01G080	IC SN74AHC1G08DCKR
IC3901	AE005611	IFTK023010	IC FLI2301-LF-BD
IC3902	AE005609	IF6J032B26	IC MT48LC2M32B2P-6(Y14W)
<b>TRANSISTORS</b>			
Q101	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q102	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q103	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q104	BZ510022	TNYJJ05001	COMPOUND TRANSISTOR DTC114TKAT146
△ Q401	AE004385	TC5TC3328Y	TRANSISTOR,SILICON 2SC3328_Y(TPE6_F)
△ Q402	AE004814	T250029200	FET 2SK2920(Q)
△ Q403	AE004386	TCKF059040	TRANSISTOR,SILICON 2SC5904000LI
Q404	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q405	AE005876	TNRAB05004	COMPOUND TRANSISTOR RT1N141C-T1
Q407	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q408	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q410	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q413	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q414	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q415	AE004817	TC3F046340	TRANSISTOR,SILICON 2SC4634
Q501	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q502	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q503	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
△ Q504	AE004387	TJXG15NK50	FET STP15NK50ZFP

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>TRANSISTORS</b>			
△ Q505	BZ510070	TCAT032034	TRANSISTOR,SILICON KTC3203_Y-AT
Q506	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q507	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
△ Q508	BZ510004	TA3T016240	TRANSISTOR,SILICON 2SA1624-AA
△ Q509	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q510	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q601	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q602	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q603	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q604	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q605	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q606	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q607	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q608	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q611	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q612	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q613	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q615	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q616	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q617	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q701	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q702	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q703	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q704	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q705	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q706	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q708	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q709	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q710	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q716	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q717	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
△ Q801	AE004383	TC30040750	TRANSISTOR,SILICON 2SC4075D/E
△ Q802	AE004383	TC30040750	TRANSISTOR,SILICON 2SC4075D/E
△ Q803	AE004383	TC30040750	TRANSISTOR,SILICON 2SC4075D/E
Q804	BZ510073	TAATA12660	TRANSISTOR,SILICON KTA1266-AT(Y,GR)
△ Q810	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
△ Q811	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
△ Q812	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q814	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q852	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q853	AE004818	TCUT0752GY	TRANSISTOR,SILICON 2SC752(G)TM_Y(TP2
Q854	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q855	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q856	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q857	BZ510073	TAATA12660	TRANSISTOR,SILICON KTA1266-AT(Y,GR)
Q858	AE004815	TA10021400	TRANSISTOR,SILICON 2SA2140
Q859	AE004816	TC10059930	TRANSISTOR,SILICON 2SC5993
Q860	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q1002	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q1098	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q1099	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q1501	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q1502	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q1503	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q1504	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q1505	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q2001	BZ510021	TNYJC05001	COMPOUND TRANSISTOR DTC124EKAT146
△ Q3403	AD301934	TBA0013660	TRANSISTOR,SILICON KTB1366(O,Y)
Q3404	BZ510022	TNYJJ05001	COMPOUND TRANSISTOR DTC114TKAT146
Q3603	BZ510113	T27T030180	FET 2SK3018T106
Q3604	BZ510113	T27T030180	FET 2SK3018T106
Q3605	BZ510113	T27T030180	FET 2SK3018T106
Q3606	BZ510113	T27T030180	FET 2SK3018T106
Q3607	BZ510113	T27T030180	FET 2SK3018T106
Q3608	BZ510081	TPYJA05001	COMPOUND TRANSISTOR DTA143EKAT146
Q3609	BZ510045	TNYJD05001	COMPOUND TRANSISTOR DTC144EKAT146
Q3610	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q3611	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q3612	BZ510045	TNYJD05001	COMPOUND TRANSISTOR DTC144EKAT146
Q3613	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q3901	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>COILS &amp; TRANSFORMERS</b>			
Q3902	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q3903	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q3904	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q3905	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q3906	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
L002	BZ310117	021LA6330K	COIL 33 UH
L402	AE004749	022R00042A	COIL,LINEARITY ELH5L7150N
L405	AE004330	02D3000064	COIL,CHOKE ELC18B821LM
L406	AE004329	02D3000063	COIL,CHOKE ELC18B151LK
L407	AE007112	02D3000073	COIL,CHOKE ELC18B151EN
L408	AE004751	02D3000069	COIL,CHOKE ELC18B103LM
△ L502	AE004327	029X000118	COIL,LINE FILTER SS28V-R25080-CH
△ L503	AE004327	029X000118	COIL,LINE FILTER SS28V-R25080-CH
L504	BZ310150	02167E220K	COIL 22 UH
L505	BZ310118	02AHB9A972	CORE,FERRITE W5T29X7.5X19
L506	BZ310150	02167E220K	COIL 22 UH
L508	AD301785	02167E100K	COIL 10 UH
L602	BZ310039	02167F220J	COIL 22 UH
L603	BZ310039	02167F220J	COIL 22 UH
L604	BZ310039	02167F220J	COIL 22 UH
L606	BZ310183	021LA6220J	COIL 22 UH
L607	BZ310039	02167F220J	COIL 22 UH
L701	BZ310040	02167F470J	COIL 47 UH
L702	BZ310040	02167F470J	COIL 47 UH
L703	BZ310040	02167F470J	COIL 47 UH
L705	BZ310041	02167F101J	COIL 100 UH
L706	BZ310040	02167F470J	COIL 47 UH
L707	BZ310040	02167F470J	COIL 47 UH
L708	BZ310040	02167F470J	COIL 47 UH
L710	BZ310040	02167F470J	COIL 47 UH
L712	BZ310041	02167F101J	COIL 100 UH
L805	BZ310001	021673101J	COIL 100 UH
L806	BZ310002	021673101K	COIL 100 UH
L807	BZ310002	021673101K	COIL 100 UH
L808	AD300613	02167F150J	COIL 15 UH
L809	AD300613	02167F150J	COIL 15 UH
L810	AD300613	02167F150J	COIL 15 UH
L901	BZ310141	02167F100J	COIL 10 UH
L904	BZ310141	02167F100J	COIL 10 UH
L905	BZ310141	02167F100J	COIL 10 UH
L1001	AE004748	021W0G100M	COIL 10 UH
L1002	AE004748	021W0G100M	COIL 10 UH
L1003	AE004748	021W0G100M	COIL 10 UH
L1004	AE004748	021W0G100M	COIL 10 UH
L1005	BZ310118	02AHB9A972	CORE,FERRITE W5T29X7.5X19
L1501	AE005592	0216S8330K	COIL 33 UH
L1502	AE005285	0216S8470K	COIL 47 UH
L1503	AE005591	0216S81R5M	COIL 1.5 UH
L1504	AE005285	0216S8470K	COIL 47 UH
L1505	AE005589	0216S8100K	COIL 10 UH
L1506	AE005589	0216S8100K	COIL 10 UH
L1507	AE005589	0216S8100K	COIL 10 UH
L1508	AE005590	0216S8150K	COIL 15 UH
L1509	AE005590	0216S8150K	COIL 15 UH
L1511	AE005590	0216S8150K	COIL 15 UH
L1512	AE005590	0216S8150K	COIL 15 UH
L1513	AE005058	0216S4220J	COIL 22 UH
L1514	AE005592	0216S8330K	COIL 33 UH
L2101	AE005285	0216S8470K	COIL 47 UH
L2103	AE005285	0216S8470K	COIL 47 UH
L2104	AE005593	0216SD5R6J	COIL 5.6 UH
L2105	AE005593	0216SD5R6J	COIL 5.6 UH
L2106	AE005593	0216SD5R6J	COIL 5.6 UH
L3401	BZ310150	02167E220K	COIL 22 UH
L3402	BZ310150	02167E220K	COIL 22 UH
L3601	AE004752	02D6000068	COIL,CHOKE ACM2012D-900-2P-T00
L3602	AE004752	02D6000068	COIL,CHOKE ACM2012D-900-2P-T00
L3603	AE004752	02D6000068	COIL,CHOKE ACM2012D-900-2P-T00
L3604	AE004752	02D6000068	COIL,CHOKE ACM2012D-900-2P-T00
L3901	AE005285	0216S8470K	COIL 47 UH
L3903	AE005588	0216S4270J	COIL 27 UH



# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>COILS &amp; TRANSFORMERS</b>			
L3907	AE005285	0216S8470K	47 UH
L3908	AE005285	0216S8470K	47 UH
L3909	AE005590	0216S8150K	15 UH
T401	AE004332	0450190181	ETH19K208AZ
△ T402	AE004755	0486290014	86290014
△ T501	AE004942	048119003S	8119003S
△ T502	AE004754	048149002S	8149002S
<b>JACKS</b>			
J705	AE002759	060J431020	MSP-213V2-432_NI_LF
J706	AE004759	060Q431019	YKC21-7306N
J707	AE004759	060Q431019	YKC21-7306N
J708	AE004760	063D000078	MSP-803V-BBA-432_NI_LF
J709	AE004760	063D000078	MSP-803V-BBA-432_NI_LF
△ J801	AE004762	066F130022	ISDW03S-F
J2201	AE004761	063D700010	MDC-012V1-A_LF
J2202	AE004756	060J401104	MTJ-032-03A-30FE
J2203	AE004758	060J401106	MTJ-032-03A-32FE
J2204	AE004757	060J401105	MTJ-032-03A-31FE
J3601	AE002950	060J421037	MTJ-032-05A-32-FE
J3602	AE002951	060J421030	MTJ-032-05A-31-FE
<b>SWITCHES</b>			
SW2001	BZ612010	0504101T34	EVQ21505R
SW2002	BZ612010	0504101T34	EVQ21505R
SW2003	BZ612010	0504101T34	EVQ21505R
SW2004	BZ612010	0504101T34	EVQ21505R
SW2005	BZ612010	0504101T34	EVQ21505R
<b>P.C.BOARD ASSEMBLIES</b>			
PCB070	AE006387	A3S4010070	CMD008A
PCB110	AE006388	A3S4010110	CCD002A
PCB260	AE006389	A3S4010260	CED008B
PCBD20	AE006390	A3S4010D20	CED019A
PCBD80	AE006391	A3S4010D80	CED012A
PCBDJ0	AE006392	A3S4010DJ0	CED011A
PCBDS0	AE006393	A3S4010DS0	CED020A
<b>MISCELLANEOUS</b>			
B403	BZ310121	024HT03553	W5RH3.5X5X1.0
B404	BZ310121	024HT03553	W5RH3.5X5X1.0
B405	BZ310121	024HT03553	W5RH3.5X5X1.0
B851	BZ310121	024HT03553	W5RH3.5X5X1.0
B852	BZ310121	024HT03553	W5RH3.5X5X1.0
B853	BZ310121	024HT03553	W5RH3.5X5X1.0
B1501	AE004602	024HC36001	HCB2012K-600T25
B2102	AE004602	024HC36001	HCB2012K-600T25
B3601	AE004602	024HC36001	HCB2012K-600T25
B3602	AE004602	024HC36001	HCB2012K-600T25
B3603	AE004602	024HC36001	HCB2012K-600T25
B3604	AE004602	024HC36001	HCB2012K-600T25
B3608	AE004602	024HC36001	HCB2012K-600T25
B3609	AE004602	024HC36001	HCB2012K-600T25
B3610	BZ310186	024HC31022	FCM2012H-102T04
B3611	BZ310186	024HC31022	FCM2012H-102T04
BT001	AE005640	141R004016	GR03X-SP2
BT002	AE005640	141R004016	GR03X-SP2
CD101	AE005945	06C32B3303	C32B3303
△ CD501	AE004781	1209415909	9415909
△ CD507	AE004750	028R300001	8R300001
CD509	AE003641	06CU2D2501	CU2D2501
CD601	AE005597	06CU294002	CU294002
CD603	AE004338	06CU225201	CU225201
CD605	AE005422	06CU273302	CU273302
CD802	AE005242	WEL6857038	AWM2468 AWG26 7C GRAY 570MM
CD803	AE005222	06C383037A	C383037A
CD808	AE005243	WCL6847038	AWM2468 AWG26 5C GRAY 470MM
CD852	AD301043	06CU232001	CU232001
CP101	BZ614214	069S2B0629	A2001WV2-11P
CP103	AE001188	069S270639	A2001WR2-7P
CP403	BZ614365	069S120419	A2502WV2-2P
△ CP404	AE006075	069X460109	B06B-DVS-L (LF)
△ CP501	BZ614283	069S420110	A1561WV2-2P
CP504	BZ614444	069D01001A	003P-2100
CP505	BZ614444	069D01001A	003P-2100

## ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
MISCELLANEOUS				
CP506	BZ614016	069W01001A	CONNECTOR PCB SIDE	003P-2100
CP509	BZ614420	069S2D0629	CONNECTOR PCB SIDE	A2001WV2-13P
CP510	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
CP601	BZ614458	069S290629	CONNECTOR PCB SIDE	A2001WV2-9P
CP602	AD301997	067U007029	WIRE HOLDER	B2013H02-7P
CP605	BZ614485	069S270629	CONNECTOR PCB SIDE	A2001WV2-7P
CP801	BZ614416	069S220629	CONNECTOR PCB SIDE	A2001WV2-2P
CP803	AD301996	069S330010	CONNECTOR PCB SIDE	A2361WV2-3P
CP804	BZ614058	069W010010	CONNECTOR PCB SIDE	005P-2100
CP852	BZ614350	069S230629	CONNECTOR PCB SIDE	A2001WV2-3P
CP853	BZ614349	067U003029	WIRE HOLDER	B2013H02-3P
CD1001	AE004772	06CU241802	CORD,CONNECTOR	CU241802
CD1003	AE004773	06CU263001	CORD,CONNECTOR	CU263001
CD1004	AE004771	06CU143801	CORD,CONNECTOR	CU143801
CD2201	AE004775	06CU283001	CORD,CONNECTOR	CU283001
CD2251	AE005223	06CU013502	CORD,CONNECTOR	CU013502
CP1001	AD301998	069S240629	CONNECTOR PCB SIDE	A2001WV2-4P
CP1003	BZ614242	069S260629	CONNECTOR PCB SIDE	A2001WV2-6P
CP2201	AD301796	069S280629	CONNECTOR PCB SIDE	A2001WV2-8P
CP3601	AE004763	069HYJ3010	CONNECTOR PCB SIDE	DC1R019JDA
CP3602	AE004769	069J1K0048	CONNECTOR	IMSA-9130S-20L
CP3604	BZ614239	069S290639	CONNECTOR PCB SIDE	A2001WR2-9P
CP802B	AD300098	069R270589	CONNECTOR PCB SIDE	52147-0710
CP808A	BZ614276	067U005049	WIRE HOLDER	B2013H02-5P
CP808B	BZ614212	069R250589	CONNECTOR PCB SIDE	52147-0510
CP851A	BZ614349	067U003029	WIRE HOLDER	B2013H02-3P
CP851B	AD300101	069R230589	CONNECTOR PCB SIDE	52147-0310
CP3604A	AE004768	069J1K0038	CONNECTOR PCB SIDE	IMSA-9130B-20
CP3901A	AE006384	069R2Y0720	CONNECTOR PCB SIDE	79107-7016
CP3901B	AE005595	069R2Y0700	CONNECTOR PCB SIDE	87760-3416
EL0701	BZ614043	124116281A	EYE LET	XRY16X28BD
EL0702	BZ614044	124120301A	EYE LET	XRY20X30BD
EL1101	BZ614043	124116281A	EYE LET	XRY16X28BD
EL1102	BZ614044	124120301A	EYE LET	XRY20X30BD
△F501	BZ614422	081PC6R305	FUSE	51MS063L
△F502	AE004346	0835A07005	MICRO FUSE	20N_7000FSW
△FB401	AE004753	043730001F	TRANSFORMER,FLYBACK	3730001F
FH501	AE002634	06710T0009	HOLDER,FUSE	EYF-52BCY
FH502	AE002634	06710T0009	HOLDER,FUSE	EYF-52BCY
NR1501	AE004680	110P4101M4	R,NETWORK	4D03WVGJ0101T5E
NR1502	AE004680	110P4101M4	R,NETWORK	4D03WVGJ0101T5E
NR2101	AE005599	110P4220M4	R,NETWORK	4D03WVGJ0220T5E
NR2102	AE005599	110P4220M4	R,NETWORK	4D03WVGJ0220T5E
NR2103	AE005599	110P4220M4	R,NETWORK	4D03WVGJ0220T5E
NR2104	AE005599	110P4220M4	R,NETWORK	4D03WVGJ0220T5E
NR2105	AE005599	110P4220M4	R,NETWORK	4D03WVGJ0220T5E
NR2106	AE005599	110P4220M4	R,NETWORK	4D03WVGJ0220T5E
NR2107	AE005599	110P4220M4	R,NETWORK	4D03WVGJ0220T5E
NR3901	AE006386	110P4000M4	R,NETWORK	4D03WVGJ0000T5E
NR3902	AE006386	110P4000M4	R,NETWORK	4D03WVGJ0000T5E
NR3903	AE006386	110P4000M4	R,NETWORK	4D03WVGJ0000T5E
NR3904	AE006386	110P4000M4	R,NETWORK	4D03WVGJ0000T5E
NR3905	AE006386	110P4000M4	R,NETWORK	4D03WVGJ0000T5E
NR3906	AE006386	110P4000M4	R,NETWORK	4D03WVGJ0000T5E
NR3907	AE006386	110P4000M4	R,NETWORK	4D03WVGJ0000T5E
NR3908	AE006386	110P4000M4	R,NETWORK	4D03WVGJ0000T5E
NR3909	AE006386	110P4000M4	R,NETWORK	4D03WVGJ0000T5E
NR3910	AE006386	110P4000M4	R,NETWORK	4D03WVGJ0000T5E
NR3911	AE006386	110P4000M4	R,NETWORK	4D03WVGJ0000T5E
NR3912	AE006386	110P4000M4	R,NETWORK	4D03WVGJ0000T5E
NR3913	AE006386	110P4000M4	R,NETWORK	4D03WVGJ0000T5E
OS2001	AD301048	0773071001	REMOTE RECEIVER	RPM7138-WH5
△RY501	AE006070	0560X20118	RELAY	G5PA-1-SA(WEC)
△RY502	AE003621	0560V50118	RELAY	ALKS329
△SP1001	AE004777	070Y447002	SPEAKER	S0510F02A
△SP1002	AE004777	070Y447002	SPEAKER	S0510F02A
△TH502	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT	ZPB45BL3R0A
TM101	AE006385	076D0KK010	TRANSMITTER	ORT204N7404359-U
△TU001	AE005631	0163300016	RF UNIT	115-V-KA35AR
△V801	AE004778	0981300501	CRT W/DY	W76MAG185X80
X103	AE004780	100WT01611	CRYSTAL	HC-49/U-S

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>MISCELLANEOUS</b>			
X603	AE004348	1002R01502	CERAMIC OSCILLATOR
X701	AE004348	1002R01502	CERAMIC OSCILLATOR
X702	AE004349	100CT3R536	CRYSTAL
X901	BZ613042	100CT01803	CRYSTAL
X1501	AE004628	100DT04201	CRYSTAL
X3601	AE004779	100CT01101	CRYSTAL
X3901	AE005598	100DT01303	CRYSTAL
RESISTOR			
	RC.....	CARBON RESISTOR	
CAPACITORS			
	CC.....	CERAMIC CAPACITOR	
	CE.....	ALUMI ELECTROLYTIC CAPACITOR	
	CP.....	POLYESTER CAPACITOR	
	CPP.....	POLYPROPYLENE CAPACITOR	
	CPL.....	PLASTIC CAPACITOR	
	CMP.....	METAL POLYESTER CAPACITOR	
	CMPL.....	METAL PLASTIC CAPACITOR	
	CMPP.....	METAL POLYPROPYLENE CAPACITOR	

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>RESISTORS</b>			
△ R401	AE002516	R4X5T6222F	R,METAL 2.2K OHM 1/6W
△ R403	BZ210105	R4X5T6183F	R,METAL 18K OHM 1/6W
△ R405	BZ210231	R4X5T6153F	R,METAL 15K OHM 1/6W
△ R406	AD300039	R3X18A680J	R,METAL OXIDE 68 OHM 2W
△ R408	BZ210063	R3X181R22J	R,METAL OXIDE 0.22 OHM 1W
△ R413	AD300600	R655812R2J	R,FUSE 2.2 OHM 1W
△ R416	AD300600	R655812R2J	R,FUSE 2.2 OHM 1W
△ R417	AD302132	R3X18A271J	R,METAL OXIDE 270 OHM 2W
△ R429	BZ210053	R002T22R2J	RC 2.2 OHM 1/2W
△ R430	AD300421	R5X2CF1R8J	R,CEMENT 1.8 OHM 10W
△ R434	BZ210053	R002T22R2J	RC 2.2 OHM 1/2W
△ R438	AE005419	R3X181272J	R,METAL OXIDE 2.7K OHM 1W
△ R445	AD301311	R655813R3J	R,FUSE 3.3 OHM 1W
△ R455	BZ210021	R65582680J	R,FUSE 68 OHM 1/2W
R460	AE004808	R0G3K2221K	RC 220 OHM 1/2W
△ R462	BZ210211	R3X28B221J	R,METAL OXIDE 220 OHM 3W
△ R468	BZ210003	R3K181102J	R,METAL OXIDE 1K OHM 1W
△ R472	AD302347	R3X181120J	R,METAL OXIDE 12 OHM 1W
△ R473	AD302347	R3X181120J	R,METAL OXIDE 12 OHM 1W
△ R483	AE000147	R3X181220J	R,METAL OXIDE 22 OHM 1W
△ R492	AE002520	R3X181100J	R,METAL OXIDE 10 OHM 1W
△ R501	BZ210233	R4X5T6272F	R,METAL 2.7K OHM 1/6W
△ R503	BZ210206	R002T2155J	RC 1.5M OHM 1/2W
△ R508	AD301203	R002T4101J	RC 100 OHM 1/4W
△ R510	BZ210080	R0G3K2275K	RC 2.7M OHM 1/2W
△ R516	BZ210063	R3X181R22J	R,METAL OXIDE 0.22 OHM 1W
△ R517	AE005735	R63881R22J	R,FUSE 0.22 OHM 1W
△ R518	BZ210063	R3X181R22J	R,METAL OXIDE 0.22 OHM 1W
△ R524	AE001073	R3X18A331J	R,METAL OXIDE 330 OHM 2W
△ R525	BZ210059	R3X1812R2J	R,METAL OXIDE 2.2 OHM 1W
△ R530	AE004810	R5X2CF010J	R,CEMENT 1 OHM 10W
△ R545	AE003270	R3X28B2R7J	R,METAL OXIDE 2.7 OHM 3W
△ R548	BZ210051	R3X18AR47J	R,METAL OXIDE 0.47 OHM 2W
△ R559	BZ210220	R002T2224J	RC 220K OHM 1/2W
△ R560	AE005234	R5X2AER47J	R,CEMENT 0.47 OHM 7W
△ R563	BZ210078	R65584101J	R,FUSE 100 OHM 1/4W
△ R801	BZ210154	R5X2CE332J	R,CEMENT 3.3K OHM 7W
△ R834	BZ210154	R5X2CE332J	R,CEMENT 3.3K OHM 7W
△ R842	BZ210154	R5X2CE332J	R,CEMENT 3.3K OHM 7W
△ R855	BZ210185	R65582151J	R,FUSE 150 OHM 1/2W
△ R881	BZ210246	R3X18A181J	R,METAL OXIDE 180 OHM 2W
△ R3411	AD301597	R3X18AR39J	R,METAL OXIDE 0.39 OHM 2W
△ R3412	AD301597	R3X18AR39J	R,METAL OXIDE 0.39 OHM 2W
<b>CAPACITORS</b>			
△ C403	BZ110195	E02LU8220M	CE 22 UF 100V
△ C404	AE004798	E61DFB470M	CE 47 UF 160V
C412	AE004366	P4J7F3304J	CMPP 0.3 UF 250V PMS
C417	AE000606	P3N1F5103J	CPP 0.01 UF 630V
△ C418	AE004807	P4N8FK852H	CMPP 0.0085UF 1.5KV
C424	AE003039	P4N8FK682H	CMPP 0.0068UF 1.5KV
C425	AE004367	P4J7F3335J	CMPP 3.3 UF 250V PMS
C426	BZ110204	E0ELFD220M	CE 22 UF 250V
△ C429	AD301434	E02LU4101M	CE 100 UF 35V
△ C430	BZ110101	E5EZF3222M	CE 2200 UF 25V
C433	BZ110239	C03L0R7L2K	CC 330 PF 2KV R
△ C434	BZ110124	E5EZF4222M	CE 2200 UF 35V
C435	AE003039	P4N8FK682H	CMPP 0.0068UF 1.5KV
C438	AE004933	P4J7F3333J	CMPP 0.033 UF 250V PMS
C445	AE000606	P3N1F5103J	CPP 0.01 UF 630V
△ C446	BZ110225	E5EZF2220M	CE 22 UF 250V
△ C502	BZ110025	P2122B224M	CMP 0.22 UF 275V ECQUL
△ C505	BZ110035	P2122B104M	CMP 0.1 UF 275V ECQUL
C506	AE002229	P411F4393J	CMPP 0.039 UF 400V ECWF
△ C509	BZ110084	E5EZF2220M	CE 22 UF 200V
C512	BZ110202	C0PLRR713K	CC 0.001 UF 2KV R
△ C517	AE004934	CD39B0MH2K	CC 220 PF 250V
△ C519	AE000950	CD39E0ME3M	CC 0.0015UF 250V
△ C525	BZ110222	CD39E0MH3M	CC 0.0022UF 250V
△ C528	BZ110226	C0JBB07H3K	CC 0.0022UF 2KV B
△ C529	BZ110226	C0JBB07H3K	CC 0.0022UF 2KV B
△ C530	AE003883	E51DFC102M	CE 1000 UF 200V

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>CAPACITORS</b>			
△ C536	BZ110224	E5EZF3332M	CE 3300 UF 25V
△ C541	BZ110076	E02LF1222M	CE 2200 UF 10V
△ C542	BZ110053	E02LF3102M	CE 1000 UF 25V
C543	BZ110176	C03L0R7Q2K	CC 470 PF 2KV R
△ C545	AE004799	E61SFC221M	CE 220 UF 200V
△ C548	BZ110055	E5EZF4102M	CE 1000 UF 35V
C549	BZ110183	C03L0R7W2K	CC 820 PF 2KV R
C567	BZ110209	E0ELF3222M	CE 2200 UF 25V
△ C572	AE005174	E61FF1222D	CE 2200 UF 10V
C808	AE003828	C13DB0713K	CC 0.001 UF 2KV B
C809	AD301347	E0ELFD330M	CE 33 UF 250V
C870	AE000272	E50HU2470M	CE 47 UF 16V
C3406	AE004935	E02LF0332M	CE 3300 UF 6.3V
<b>DIODES</b>			
D001	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
D101	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D102	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D103	BZ410064	D97U03R91B	DIODE,ZENER MTZJ3.9B T-77
D104	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D105	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D106	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D107	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D108	BZ410064	D97U03R91B	DIODE,ZENER MTZJ3.9B T-77
D109	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D110	BZ410064	D97U03R91B	DIODE,ZENER MTZJ3.9B T-77
D111	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D112	BZ410012	D28TQS04N0	DIODE,SCHOTTKY 11EQS04N-TA1B2
△ D402	BZ410063	D2WTAU02A0	DIODE,SILICON AU02A-EIC
△ D403	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
△ D404	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
△ D405	AE004792	DCBFMQ3GU0	DIODE FMQ-3GULF027-102
D406	BZ410103	D2WXGP10J0	DIODE,RECTIFIER RGP10J-EIC
D407	BZ410094	D97U01501B	DIODE,ZENER MTZJ15B T-77
△ D408	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D409	BZ410094	D97U01501B	DIODE,ZENER MTZJ15B T-77
D410	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
D411	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
△ D412	BZ410063	D2WTAU02A0	DIODE,SILICON AU02A-EIC
D413	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
D414	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
△ D415	BZ410063	D2WTAU02A0	DIODE,SILICON AU02A-EIC
D417	AE004359	D97U03901B	DIODE,ZENER MTZJ39B T-77
D418	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
D420	BZ410094	D97U01501B	DIODE,ZENER MTZJ15B T-77
D421	AE004790	D2WX0216E0	DIODE,SILICON RGP02-16E
D422	AE004790	D2WX0216E0	DIODE,SILICON RGP02-16E
D423	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D424	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
△ D501	BZ410031	D6CE24110A	DIODE,VARISTA ENE241D-10A-Q6
D502	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D503	AD302208	D97U03R31B	DIODE,ZENER MTZJ3.3B T-77
D504	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D505	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
△ D506	BZ410085	D2WXN40050	DIODE,SILICON 1N4005-EIC
△ D507	BZ410085	D2WXN40050	DIODE,SILICON 1N4005-EIC
D508	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
△ D509	BZ410043	D2WT011E10	DIODE,SILICON 11E1-EIC
△ D510	BZ410085	D2WXN40050	DIODE,SILICON 1N4005-EIC
△ D511	BZ410085	D2WXN40050	DIODE,SILICON 1N4005-EIC
D512	BZ410114	D2WXGP10K0	DIODE,RECTIFIER RGP10K-EIC
D514	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
△ D515	AE006060	D28T0ERB20	DIODE,RECTIFIER 10ERB20-TA1B2
D516	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D517	AD300671	D97U01801B	DIODE,ZENER MTZJ18B T-77
D518	BZ410066	D97U06R21B	DIODE,ZENER MTZJ6.2B T-77
D519	AD300731	D2WXN49370	DIODE,SILICON 1N4937
△ D520	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D521	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D522	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D523	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D524	AD300731	D2WXN49370	DIODE,SILICON 1N4937

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>DIODES</b>			
△ D525	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D526	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D527	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
△ D528	BZ410062	D2WTRM11C0	DIODE,SILICON RM11C-EIC
D529	AD300671	D97U01801B	DIODE,ZENER MTZJ18B T-77
△ D530	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
D531	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
△ D532	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
△ D533	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
△ D534	AE003872	DOU002720M	DIODE,VARISTA DSS-272M-S00B
D535	BZ410064	D97U03R91B	DIODE,ZENER MTZJ3.9B T-77
△ D536	AD301980	D2CF2016L0	DIODE,SILICON FE201-6L49
△ D537	BZ410091	D230PF6DT0	DIODE,SILICON FEPF6DT
△ D539	BZ410091	D230PF6DT0	DIODE,SILICON FEPF6DT
D540	AD300731	D2WXN49370	DIODE,SILICON 1N4937
△ D541	AD301980	D2CF2016L0	DIODE,SILICON FE201-6L49
D543	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D544	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D546	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D547	BZ410084	D97U01101B	DIODE,ZENER MTZJ11B T-77
D548	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D549	BZ410037	D97U03301B	DIODE,ZENER MTZJ33B T-77
D550	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
△ D551	AE004936	D6E027110A	DIODE,VARISTA ENE271D-10A
D552	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D554	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D601	AE006394	D28T0ERB60	DIODE RECTIFIER 10ERB60-TA1B2
D606	AE004358	D97U02R01B	DIODE ZENER MTZJ2.0B T-77
D607	AD300069	D97U02701B	DIODE,ZENER MTZJ27B T-77
D608	AE006394	D28T0ERB60	DIODE,RECTIFIER 10ERB60-TA1B2
D609	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D610	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D611	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D612	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D613	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D614	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D615	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D616	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D617	BZ410023	D97U09R11B	DIODE,ZENER MTZJ9.1B T-77
D618	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D619	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D621	BZ410034	D97U01301B	DIODE,ZENER MTZJ13B T-77
D622	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D701	BZ410022	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77
D702	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D703	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D704	BZ410022	D97U06R81B	DIODE,ZENER MTZJ6.8B T-77
D705	BZ410084	D97U01101B	DIODE,ZENER MTZJ11B T-77
D801	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D802	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D803	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D807	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D808	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D809	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D853	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D854	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D855	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D856	BZ410006	D1VT001330	DIODE,SILICON 1SS133T-77
D901	AD300070	D97U01201B	DIODE,ZENER MTZJ12B T-77
D902	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D903	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D1001	AE004643	D28R1QS040	DIODE EC31QS04-TE12L
D1002	AE004643	D28R1QS040	DIODE EC31QS04-TE12L
D1003	AE004643	D28R1QS040	DIODE EC31QS04-TE12L
D1004	AE004643	D28R1QS040	DIODE EC31QS04-TE12L
D1091	BZ410021	D97U05R61B	DIODE,ZENER MTZJ5.6B T-77
D2001	BZ410077	D2WXS1400	DIODE,SCHOTTKY SB140-EIC
D2009	BZ410054	0021721150	LED SLR-342VCT32
D2101	AE004795	DE7RB5R62B	DIODE ZENER UDZS5.6B TE-17
D2102	AE004795	DE7RB5R62B	DIODE ZENER UDZS5.6B TE-17
D2103	AE004795	DE7RB5R62B	DIODE ZENER UDZS5.6B TE-17

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>DIODES</b>			
D3401	BZ410043	D2WT011E10	DIODE SILICON 11E1-EIC
D3403	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
D3404	BZ410010	D28T21DQN9	DIODE,SCHOTTKY 21DQ09N-TA2B1
D3451	AE004643	D28R1QS040	DIODE EC31QS04-TE12L
D3601	AE004937	D77R1A1R10	DIODE,VARISTA AVRL161A1R1NT
D3602	AE004795	DE7RB5R62B	DIODE ZENER UDZS5.6B TE-17
D3603	AE004937	D77R1A1R10	DIODE,VARISTA AVRL161A1R1NT
D3604	AE004793	DD7R60L400	DIODE,SCHOTTKY RB160L-40-TE25
D3605	AE004793	DD7R60L400	DIODE,SCHOTTKY RB160L-40-TE25
D3609	AE004794	DE7RB3R32B	DIODE ZENER UDZS3.3B TE-17
D3613	AE004794	DE7RB3R32B	DIODE ZENER UDZS3.3B TE-17
<b>ICS</b>			
IC101	AE005608	I56F57118A	IC OEC7118A
IC102	79097849	I9UF032290	IC PST3229NR
IC103	79097849	I9UF032290	IC PST3229NR
IC199	AE006403	S3S4010E04	MEMORY DATA AT24C256N-10SU-2.7
△ IC401	BZ611117	I03TD80410	IC LA78041
△ IC402	AD302356	I03S065100	IC LA6510
△ IC501	AE002809	000220002W	PHOTO COUPLER PS2561AL1-1-V(W)
△ IC502	AE006398	I2BT067530	IC STR-W6753
△ IC503	AE002809	000220002W	PHOTO COUPLER PS2561AL1-1-V(W)
△ IC504	AD302211	I1KJ9A431A	IC KIA431A-AT
△ IC505	AD301929	I1KA78R090	IC KIA278R09PI
△ IC506	AD302211	I1KJ9A431A	IC KIA431A-AT
IC602	AE004361	I05DD13170	IC TA1317ANG
IC603	AE004362	I05DE13600	IC TA1360ANG
IC701	AE002728	I01F05853B	IC AN15853B-E1
IC702	AE004651	I0QF025840	IC NJM2584AM(TE1)
IC705	AE004800	I05FE13830	IC TA1383FG
IC706	AE004651	I0QF025840	IC NJM2584AM(TE1)
IC707	BZ611104	I0QF02533V	IC NJM2533V(TE2)
IC902	AE006396	I19FFP3440	IC MSP3440G-QA-C12-001(BBE)
△ IC1001	AE006397	I1MFPA2020	IC TA2024-ASE
IC1501	AE005607	I55FE0A920	IC TC90A92AFG
IC2101	AE005610	IFSK0883C0	IC MST9883C-LF-110
△ IC3400	BZ611089	I1KA98R09A	IC KIA78R09API
△ IC3401	AD301931	I1KA78R050	IC KIA278R05PI
△ IC3402	AE003914	I1KA98R330	IC KIA278R33PI
IC3451	AE006395	I0GF91ZPH0	IC PQ070XZ01ZPH
IC3452	AE006395	I0GF91ZPH0	IC PQ070XZ01ZPH
IC3601	AE004654	I1KF98D330	IC KIA78D33F
IC3602	AE004654	I1KF98D330	IC KIA78D33F
IC3604	AE001295	I0QJ045800	IC NJM4580M(TE1)
IC3605	AE004805	I5PF099930	IC SI9993CTG100
IC3606	AE006401	S3S4010E02	MEMORY DATA BR24L02F-WE2
IC3607	AE004802	I1FF043340	IC CS4334-KSZR
IC3608	AE006402	S3S4010E03	MEMORY DATA BR24L32F-WE2
IC3611	AE006399	ICMF08RD20	IC SST89E58RD2-40-C-TQJE
IC3612	AE003923	I5CF01G080	IC SN74AHC1G08DCKR
IC3901	AE005611	IFTK023010	IC FLI2301-LF-BD
IC3902	AE005609	IF6J032B26	IC MT48LC2M32B2P-6(Y14W)
<b>TRANSISTORS</b>			
Q101	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q102	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q103	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q104	BZ510022	TNYJJ05001	COMPOUND TRANSISTOR DTC114TKAT146
△ Q401	AE004385	TC5TC3328Y	TRANSISTOR,SILICON 2SC3328_Y(TPE6_F)
△ Q402	AE004814	T250029200	FET 2SK2920(Q)
△ Q403	AE004386	TCKF059040	TRANSISTOR,SILICON 2SC5904000LI
Q404	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q405	AE005876	TNRAB05004	COMPOUND TRANSISTOR RT1N141C-T1
Q407	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q408	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q410	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q413	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q414	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q415	AE004817	TC3F046340	TRANSISTOR,SILICON 2SC4634
Q501	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q502	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q503	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
△ Q504	AE004387	TJXG15NK50	FET STP15NK50ZFP

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>TRANSISTORS</b>			
△ Q505	BZ510070	TCAT032034	TRANSISTOR,SILICON KTC3203_Y-AT
Q506	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q507	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
△ Q508	BZ510004	TA3T016240	TRANSISTOR,SILICON 2SA1624-AA
△ Q509	BZ510105	TCAT03209Y	TRANSISTOR,SILICON KTC3209_Y-AT
Q510	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q601	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q602	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q603	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q604	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q605	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q606	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q607	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q608	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q611	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q612	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q613	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q615	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q616	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q617	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q701	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q702	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q703	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q704	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q705	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q706	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q708	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q709	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q710	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q716	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q717	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
△ Q801	AE004383	TC30040750	TRANSISTOR,SILICON 2SC4075D/E
△ Q802	AE004383	TC30040750	TRANSISTOR,SILICON 2SC4075D/E
△ Q803	AE004383	TC30040750	TRANSISTOR,SILICON 2SC4075D/E
Q804	BZ510073	TAATA12660	TRANSISTOR,SILICON KTA1266-AT(Y,GR)
△ Q810	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
△ Q811	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
△ Q812	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q814	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q852	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q853	AE004818	TCUT0752GY	TRANSISTOR,SILICON 2SC752(G)TM_Y(TP2
Q854	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q855	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q856	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q857	BZ510073	TAATA12660	TRANSISTOR,SILICON KTA1266-AT(Y,GR)
Q858	AE004815	TA10021400	TRANSISTOR,SILICON 2SA2140
Q859	AE004816	TC10059930	TRANSISTOR,SILICON 2SC5993
Q860	BZ510069	TCATC31980	TRANSISTOR,SILICON KTC3198-AT(Y,GR)
Q1002	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q1098	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q1099	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q1501	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q1502	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q1503	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q1504	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q1505	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q2001	BZ510021	TNYJC05001	COMPOUND TRANSISTOR DTC124EKAT146
△ Q3403	AD301934	TBA0013660	TRANSISTOR,SILICON KTB1366(O,Y)
Q3404	BZ510022	TNYJJ05001	COMPOUND TRANSISTOR DTC114TKAT146
Q3603	BZ510113	T27T030180	FET 2SK3018T106
Q3604	BZ510113	T27T030180	FET 2SK3018T106
Q3605	BZ510113	T27T030180	FET 2SK3018T106
Q3606	BZ510113	T27T030180	FET 2SK3018T106
Q3607	BZ510113	T27T030180	FET 2SK3018T106
Q3608	BZ510081	TPYJA05001	COMPOUND TRANSISTOR DTA143EKAT146
Q3609	BZ510045	TNYJD05001	COMPOUND TRANSISTOR DTC144EKAT146
Q3610	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q3611	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q3612	BZ510045	TNYJD05001	COMPOUND TRANSISTOR DTC144EKAT146
Q3613	AE005873	T8RA030520	TRANSISTOR,SILICON 2SC3052-T1
Q3901	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1



# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>TRANSISTORS</b>			
Q3902	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q3903	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q3904	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q3905	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
Q3906	AE005872	T6RA015300	TRANSISTOR,SILICON 2SA1530A-T1
<b>COILS &amp; TRANSFORMERS</b>			
L002	BZ310117	021LA6330K	COIL 33 UH
L402	AE004749	022R00042A	COIL,LINEARITY ELH5L7150N
L405	AE004330	02D3000064	COIL,CHOKE ELC18B821LM
L406	AE004329	02D3000063	COIL,CHOKE ELC18B151LK
L407	AE007112	02D3000073	COIL,CHOKE ELC18B151EN
L408	AE004751	02D3000069	COIL,CHOKE ELC18B103LM
△ L502	AE004327	029X000118	COIL,LINEFILTER SS28V-R25080-CH
△ L503	AE004327	029X000118	COIL,LINEFILTER SS28V-R25080-CH
L504	BZ310150	02167E220K	COIL 22 UH
L505	BZ310118	02AHB9A972	CORE,FERRITE W5T29X7.5X19
L506	BZ310150	02167E220K	COIL 22 UH
L508	AD301785	02167E100K	COIL 10 UH
L602	BZ310039	02167F220J	COIL 22 UH
L603	BZ310039	02167F220J	COIL 22 UH
L604	BZ310039	02167F220J	COIL 22 UH
L606	BZ310183	021LA6220J	COIL 22 UH
L607	BZ310039	02167F220J	COIL 22 UH
L701	BZ310040	02167F470J	COIL 47 UH
L702	BZ310040	02167F470J	COIL 47 UH
L703	BZ310040	02167F470J	COIL 47 UH
L705	BZ310041	02167F101J	COIL 100 UH
L706	BZ310040	02167F470J	COIL 47 UH
L707	BZ310040	02167F470J	COIL 47 UH
L708	BZ310040	02167F470J	COIL 47 UH
<b>COILS &amp; TRANSFORMERS</b>			
L710	BZ310040	02167F470J	COIL 47 UH
L712	BZ310041	02167F101J	COIL 100 UH
L805	BZ310001	021673101J	COIL 100 UH
L806	BZ310002	021673101K	COIL 100 UH
L807	BZ310002	021673101K	COIL 100 UH
L808	AD300613	02167F150J	COIL 15 UH
L809	AD300613	02167F150J	COIL 15 UH
L810	AD300613	02167F150J	COIL 15 UH
L901	BZ310141	02167F100J	COIL 10 UH
L904	BZ310141	02167F100J	COIL 10 UH
L905	BZ310141	02167F100J	COIL 10 UH
L1001	AE004748	021W0G100M	COIL 10 UH
L1002	AE004748	021W0G100M	COIL 10 UH
L1003	AE004748	021W0G100M	COIL 10 UH
L1004	AE004748	021W0G100M	COIL 10 UH
L1005	BZ310118	02AHB9A972	CORE,FERRITE W5T29X7.5X19
L1501	AE005592	0216S8330K	COIL 33 UH
L1502	AE005285	0216S8470K	COIL 47 UH
L1503	AE005591	0216S81R5M	COIL 1.5 UH
L1504	AE005285	0216S8470K	COIL 47 UH
L1505	AE005589	0216S8100K	COIL 10 UH
L1506	AE005589	0216S8100K	COIL 10 UH
L1507	AE005589	0216S8100K	COIL 10 UH
L1508	AE005590	0216S8150K	COIL 15 UH
L1509	AE005590	0216S8150K	COIL 15 UH
L1511	AE005590	0216S8150K	COIL 15 UH
L1512	AE005590	0216S8150K	COIL 15 UH
L1513	AE005058	0216S4220J	COIL 22 UH
L1514	AE005592	0216S8330K	COIL 33 UH
L2101	AE005285	0216S8470K	COIL 47 UH
L2103	AE005285	0216S8470K	COIL 47 UH
L2104	AE005593	0216SD5R6J	COIL 5.6 UH
L2105	AE005593	0216SD5R6J	COIL 5.6 UH
L2106	AE005593	0216SD5R6J	COIL 5.6 UH
L3401	BZ310150	02167E220K	COIL 22 UH
L3402	BZ310150	02167E220K	COIL 22 UH
L3601	AE004752	02D6000068	COIL,CHOKE ACM2012D-900-2P-T00
L3602	AE004752	02D6000068	COIL,CHOKE ACM2012D-900-2P-T00
L3603	AE004752	02D6000068	COIL,CHOKE ACM2012D-900-2P-T00
L3604	AE004752	02D6000068	COIL,CHOKE ACM2012D-900-2P-T00

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>JACKS</b>			
L3901	AE005285	0216S8470K	COIL ,NLCV 47 UH
L3903	AE005588	0216S4270J	COIL 27 UH
L3907	AE005285	0216S8470K	COIL 47 UH
L3908	AE005285	0216S8470K	COIL 47 UH
L3909	AE005590	0216S8150K	COIL 15 UH
T401	AE004332	0450190181	TRANS,HORIZONTAL DRIVE ETH19K208AZ
△ T402	AE004755	0486290014	TRANSFORMER,PULSE 86290014
△ T501	AE004942	048119003S	TRANSFORMER,SWITCHING 8119003S
△ T502	AE004754	048149002S	TRANSFORMER,SWITCHING 8149002S
<b>JACKS</b>			
J705	AE002759	060J431020	RCA JACK MSP-213V2-432_NI_LF
J706	AE004759	060Q431019	RCA JACK YKC21-7306N
J707	AE004759	060Q431019	RCA JACK YKC21-7306N
J708	AE004760	063D000078	JACK PLATE MSP-803V-BBA-432_NI_LF
J709	AE004760	063D000078	JACK PLATE MSP-803V-BBA-432_NI_LF
△ J801	AE004762	066F130022	SOCKET,CATHODE RAY TUBE ISDW03S-F
J2201	AE004761	063D700010	JACK MDC-012V1-A_LF
J2202	AE004756	060J401104	RCA JACK MTJ-032-03A-30FE
J2203	AE004758	060J401106	RCA JACK MTJ-032-03A-32FE
J2204	AE004757	060J401105	RCA JACK MTJ-032-03A-31FE
J3601	AE002950	060J421037	RCA JACK MTJ-032-05A-32-FE
J3602	AE002951	060J421030	RCA JACK MTJ-032-05A-31-FE
<b>SWITCHES</b>			
SW2001	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW2002	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW2003	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW2004	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
SW2005	BZ612010	0504101T34	SWITCH,TACT EVQ21505R
<b>P.C.BOARD ASSEMBLIES</b>			
PCB070	AE006387	A3S4010070	PCB ASS'Y CMD008A
PCB110	AE006388	A3S4010110	PCB ASS'Y CCD002A
PCB260	AE006389	A3S4010260	PCB ASS'Y CED008B
PCBD20	AE006404	A3S4020D20	PCB ASS'Y CED019A
PCBD80	AE006391	A3S4010D80	PCB ASS'Y CED012A
PCBDJ0	AE006392	A3S4010DJ0	PCB ASS'Y CED011A
PCBDS0	AE006393	A3S4010DS0	PCB ASS'Y CED020A
<b>MISCELLANEOUS</b>			
B403	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
B404	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
B405	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
B851	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
B852	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
B853	BZ310121	024HT03553	CORE,BEADS W5RH3.5X5X1.0
B1501	AE004602	024HC36001	CORE,BEADS HCB2012K-600T25
B2102	AE004602	024HC36001	CORE,BEADS HCB2012K-600T25
B3601	AE004602	024HC36001	CORE,BEADS HCB2012K-600T25
B3602	AE004602	024HC36001	CORE,BEADS HCB2012K-600T25
B3603	AE004602	024HC36001	CORE,BEADS HCB2012K-600T25
B3604	AE004602	024HC36001	CORE,BEADS HCB2012K-600T25
B3608	AE004602	024HC36001	CORE,BEADS HCB2012K-600T25
B3609	AE004602	024HC36001	CORE,BEADS HCB2012K-600T25
B3610	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
B3611	BZ310186	024HC31022	CORE,BEADS FCM2012H-102T04
BT001	AE005640	141R004016	BATTERY,MANGAN GR03X-SP2
BT002	AE005640	141R004016	BATTERY,MANGAN GR03X-SP2
CD101	AE005945	06C32B3303	CORD,CONNECTOR C32B3303
△ CD501	AE004781	1209415909	CORD,AC BUSH 9415909
△ CD507	AE004750	028R300001	COIL,DEGAUSS 8R300001
CD509	AE003641	06CU2D2501	CORD,CONNECTOR CU2D2501
CD601	AE005597	06CU294002	CORD,CONNECTOR CU294002
CD603	AE004338	06CU225201	CORD,CONNECTOR CU225201
CD605	AE005422	06CU273302	CORD,CONNECTOR CU273302
CD802	AE005242	WEL6857038	FLAT CABLE AWM2468 AWG26 7C GRAY 570MM
CD803	AE005222	06C383037A	CORD,CONNECTOR C383037A
CD808	AE005243	WCL6847038	FLAT CABLE AWM2468 AWG26 5C GRAY 470MM
CD852	AD301043	06CU232001	CORD,CONNECTOR CU232001
CP101	BZ614214	069S2B0629	CONNECTOR PCB SIDE A2001WV2-11P
CP103	AE001188	069S270639	CONNECTOR PCB SIDE A2001WR2-7P
CP403	BZ614365	069S120419	CONNECTOR PCB SIDE A2502WV2-2P
△ CP404	AE006075	069X460109	CONNECTOR PCB SIDE B06B-DVS-L (LF)
△ CP501	BZ614283	069S420110	CONNECTOR PCB SIDE A1561WV2-2P

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>MISCELLANEOUS</b>			
CP504	BZ614444	069D01001A	CONNECTOR PCB SIDE 003P-2100
CP505	BZ614444	069D01001A	CONNECTOR PCB SIDE 003P-2100
CP506	BZ614016	069W01001A	CONNECTOR PCB SIDE 003P-2100
CP509	BZ614420	069S2D0629	CONNECTOR PCB SIDE A2001WV2-13P
CP510	BZ614444	069D01001A	CONNECTOR PCB SIDE 003P-2100
CP601	BZ614458	069S290629	CONNECTOR PCB SIDE A2001WV2-9P
CP602	AD301997	067U007029	WIRE HOLDER B2013H02-7P
CP605	BZ614485	069S270629	CONNECTOR PCB SIDE A2001WV2-7P
CP801	BZ614416	069S220629	CONNECTOR PCB SIDE A2001WV2-2P
CP803	AD301996	069S330010	CONNECTOR PCB SIDE A2361WV2-3P
CP804	BZ614058	069W010010	CONNECTOR PCB SIDE 005P-2100
CP852	BZ614350	069S230629	CONNECTOR PCB SIDE A2001WV2-3P
CP853	BZ614349	067U003029	WIRE HOLDER B2013H02-3P
CD1001	AE004772	06CU241802	CORD,CONNECTOR CU241802
CD1003	AE004773	06CU263001	CORD,CONNECTOR CU263001
CD1004	AE004771	06CU143801	CORD,CONNECTOR CU143801
CD2201	AE004775	06CU283001	CORD,CONNECTOR CU283001
CD2251	AE005223	06CU013502	CORD,CONNECTOR CU013502
CP1001	AD301998	069S240629	CONNECTOR PCB SIDE A2001WV2-4P
CP1003	BZ614242	069S260629	CONNECTOR PCB SIDE A2001WV2-6P
CP2201	AD301796	069S280629	CONNECTOR PCB SIDE A2001WV2-8P
CP3601	AE004763	069HYJ3010	CONNECTOR PCB SIDE DC1R019JDA
CP3602	AE004769	069J1K0048	CONNECTOR IMSA-9130S-20L
CP3604	BZ614239	069S290639	CONNECTOR PCB SIDE A2001WR2-9P
CP802B	AD300098	069R270589	CONNECTOR PCB SIDE 52147-0710
CP808A	BZ614276	067U005049	WIRE HOLDER B2013H02-5P
CP808B	BZ614212	069R250589	CONNECTOR PCB SIDE 52147-0510
CP851A	BZ614349	067U003029	WIRE HOLDER B2013H02-3P
CP851B	AD300101	069R230589	CONNECTOR PCB SIDE 52147-0310
CP3604A	AE004768	069J1K0038	CONNECTOR PCB SIDE IMSA-9130B-20
CP3901A	AE006384	069R2Y0720	CONNECTOR PCB SIDE 79107-7016
CP3901B	AE005595	069R2Y0700	CONNECTOR PCB SIDE 87760-3416
EL0701	BZ614043	124116281A	EYE LET XRY16X28BD
EL0702	BZ614044	124120301A	EYE LET XRY20X30BD
EL1101	BZ614043	124116281A	EYE LET XRY16X28BD
EL1102	BZ614044	124120301A	EYE LET XRY20X30BD
△ F501	BZ614422	081PC6R305	FUSE 51MS063L
△ F502	AE004346	0835A07005	MICRO FUSE 20N_7000FSW
△ FB401	AE004753	043730001F	TRANSFORMER,FLYBACK 3730001F
FH501	AE002634	06710T0009	HOLDER,FUSE EYF-52BCY
FH502	AE002634	06710T0009	HOLDER,FUSE EYF-52BCY
NR1501	AE004680	110P4101M4	R,NETWORK 4D03WVGJ0101T5E
NR1502	AE004680	110P4101M4	R,NETWORK 4D03WVGJ0101T5E
NR2101	AE005599	110P4220M4	R,NETWORK 4D03WVGJ0220T5E
NR2102	AE005599	110P4220M4	R,NETWORK 4D03WVGJ0220T5E
NR2103	AE005599	110P4220M4	R,NETWORK 4D03WVGJ0220T5E
NR2104	AE005599	110P4220M4	R,NETWORK 4D03WVGJ0220T5E
NR2105	AE005599	110P4220M4	R,NETWORK 4D03WVGJ0220T5E
NR2106	AE005599	110P4220M4	R,NETWORK 4D03WVGJ0220T5E
NR2107	AE005599	110P4220M4	R,NETWORK 4D03WVGJ0220T5E
NR3901	AE006386	110P4000M4	R,NETWORK 4D03WVGJ0000T5E
NR3902	AE006386	110P4000M4	R,NETWORK 4D03WVGJ0000T5E
NR3903	AE006386	110P4000M4	R,NETWORK 4D03WVGJ0000T5E
NR3904	AE006386	110P4000M4	R,NETWORK 4D03WVGJ0000T5E
NR3905	AE006386	110P4000M4	R,NETWORK 4D03WVGJ0000T5E
NR3906	AE006386	110P4000M4	R,NETWORK 4D03WVGJ0000T5E
NR3907	AE006386	110P4000M4	R,NETWORK 4D03WVGJ0000T5E
NR3908	AE006386	110P4000M4	R,NETWORK 4D03WVGJ0000T5E
NR3909	AE006386	110P4000M4	R,NETWORK 4D03WVGJ0000T5E
NR3910	AE006386	110P4000M4	R,NETWORK 4D03WVGJ0000T5E
NR3911	AE006386	110P4000M4	R,NETWORK 4D03WVGJ0000T5E
NR3912	AE006386	110P4000M4	R,NETWORK 4D03WVGJ0000T5E
NR3913	AE006386	110P4000M4	R,NETWORK 4D03WVGJ0000T5E
OS2001	AD301048	0773071001	REMOTE RECEIVER RPM7138-WH5
△ RY501	AE006070	0560X20118	RELAY G5PA-1-SA(WEC)
△ RY502	AE003621	0560V50118	RELAY ALKS329
△ SP1001	AE004777	070Y447002	SPEAKER S0510F02A
△ SP1002	AE004777	070Y447002	SPEAKER S0510F02A
△ TH502	BZ410079	DF5EL3R0A0	DEGAUSS ELEMENT ZPB45BL3R0A
TM101	AE006385	076DOKK010	TRANSMITTER ORT204N7404359-U
△ TU001	AE005631	0163300016	RF UNIT 115-V-KA35AR

# ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description
<b>MISCELLANEOUS</b>			
△ V801	AE004778	0981300501	CRT W/DY
X103	AE004780	100WT01611	CRYSTAL
X603	AE004348	1002R01502	CERAMIC OSCILLATOR
X701	AE004348	1002R01502	CERAMIC OSCILLATOR
X702	AE004349	100CT3R536	CRYSTAL
X901	BZ613042	100CT01803	CRYSTAL
X1501	AE004628	100DT04201	CRYSTAL
X3601	AE004779	100CT01101	CRYSTAL
X3901	AE005598	100DT01303	CRYSTAL
RESISTOR			
	RC.....	CARBON RESISTOR	
CAPACITORS			
	CC.....	CERAMIC CAPACITOR	
	CE.....	ALUMI ELECTROLYTIC CAPACITOR	
	CP.....	POLYESTER CAPACITOR	
	CPP.....	POLYPROPYLENE CAPACITOR	
	CPL.....	PLASTIC CAPACITOR	
	CMP.....	METAL POLYESTER CAPACITOR	
	CMPL.....	METAL PLASTIC CAPACITOR	
	CMPP.....	METAL POLYPROPYLENE CAPACITOR	

# **TOSHIBA CORPORATION**

1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN